

Philips  
Wireless Bluetooth®  
headphones

8mm drivers/closed-back

In-ear  
NFC

SHB5900BL

## Rich bass anywhere

Wireless with great sound and perfect fit

The compact SHB5900 Bluetooth® earphones delivers powerful drivers with up to 6 hours of wireless music enjoyment. The MusicChain feature allows you to share music with friends by pairing with other MusicChain enabled earphones.

### Brings convenience to your lifestyle

- Support Bluetooth 4.1 + HSP/HFP/A2DP/AVRCP
- One-tap NFC connection for easy pairing
- MusicChain™ allows easily music sharing with friend
- Tangle-free flat cables for convenience on the go
- Wireless control and enjoyment of music and calls

### Enjoy quality sound

- Efficient 8.6mm drivers deliver clear and powerful sound
- Oval sound tube inserts seals out ambient noise

### Designed for long wearing comfort

- Choose from 3 pairs of ear caps for the perfect fit for you
- Ergonomic oval sound tube for a truly comfortable fit

# PHILIPS

Wireless Bluetooth® headphones  
8mm drivers/closed-back In-ear, NFC

# Highlights

## Bluetooth technology



Pair your headphones with any Bluetooth device for crystal clear music enjoyment – wirelessly.

## Choice of 3 pairs of ear caps



Ear caps come in a choice of 3 sizes – small, medium and large – for a personalized and perfect fit.

## Easy NFC pairing



Easy NFC pairing lets you connect your Bluetooth® headphones with any Bluetooth-enabled device – with just a single touch.

## Efficient 8.6mm drivers




Compact and efficient 8.6mm speaker drivers deliver precise sound with powerful bass, for enhanced listening enjoyment on the go.

## Ergonomic oval sound tube



The oval shape of the sound tube came about based on extensive research on the human ear. Designed to fit any ear comfortably, the ergonomic shape ensures optimal fit and comfort for total music enjoyment.

## MusicChain™

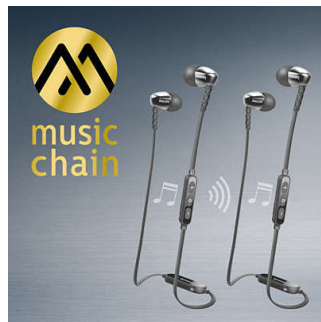

With MusicChain™, you can easily share the tracks you are playing with a friend. Using Bluetooth® technology, a simple click on the MusicChain™ button on your headphones will

SHB5900BL/00

pair them with other MusicChain™-enabled headphones.

## Oval sound tube inserts




Oval sound tube inserts seals out ambient noise, while its semi-closed structure deliver enhanced bass performance.

## Tangle-free flat cable

Anti-slip flat cable ensures that your cord always stays tangle free.

## Wireless music and calls

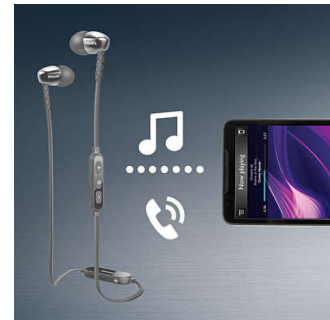

Pair your smart device with your headphones using Bluetooth and enjoy the freedom of crystal clear music and phone calls – without the hassle of cables. Change tracks and answer calls with the easy to use remote control.

# Specifications

## Sound

- Acoustic system: Closed
- Frequency range: 10 - 22 000Hz
- Sound Enhancement: Echo Control, Noise Reduction
- Speaker diameter: 8.6 mm
- Impedance: 16 ohm
- Magnet type: Neodymium
- Maximum power input: 20 mW
- Sensitivity: 107 dB

## Connectivity

- Bluetooth version: 3.0+EDR
- Bluetooth profiles: A2DP, AVRCP, HFP, HSP
- Maximum range: Up to 10 m

## Outer Carton

- Length: 14 cm
- Number of consumer packagings: 3
- Width: 10.7 cm
- Gross weight: 0.3458 kg
- Height: 19 cm
- GTIN: 1 69 25970 70506 3
- Nett weight: 0.105 kg
- Tare weight: 0.2408 kg

## Convenience

- Call Management: Answer/End Call, Reject Call, Last number redial, Call on Hold, Switch between call and music
- Volume control

## Power

- Battery Type: LI-Polymer
- Music play time: 5.5\* hour(s)
- Standby time: 150 hr\*
- Talk time: 6 hr\*

## Packaging dimensions

- Height: 17.3 cm
- Packaging type: Carton
- Type of shelf placement: Both
- Width: 9.5 cm
- Depth: 4 cm
- Number of products included: 1
- EAN: 69 25970 70506 6
- Gross weight: 0.0886 kg
- Nett weight: 0.035 kg
- Tare weight: 0.0536 kg

## Product dimensions

- Height: 2.31 cm
- Width: 1.61 cm
- Depth: 1.6 cm
- Weight: 0.0116 kg

## Accessories

- Quick start guide: Included
- USB cable: Included for charging

## Design

- Color: Blue



Issue date 2024-03-08

Version: 3.0.7

EAN: 69 25970 70506 6

© 2024 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)

\* Actual results may vary