

Philips  
Original radio

- Cream
- Dock for iPod/iPhone

ORD7105C



## The original radio

Let this Philips Original radio complete your listening experience. Designed in the style of the iconic 1955 Philips radio, it plays and charges iPods and iPhones, and comes with a stereo FM tuner.

### Enrich your sound experience

- High fidelity sound
- Play and charge your iPod/iPhone simultaneously
- FM stereo tuner
- Bass Reflex Speaker System delivers a powerful, deeper bass

### Easy to use

- Dock any iPod/iPhone, even in its case
- Free HomeStudio app for enhanced wake-up & radio experiences
- Auto clock synchronization with iPod/iPhone when docked
- Audio-in for easy portable music playback


### Contemporary retro design

- Contemporary reinterpretation of the iconic Philetta design

# PHILIPS

# Highlights

## Play & charge your iPod/iPhone

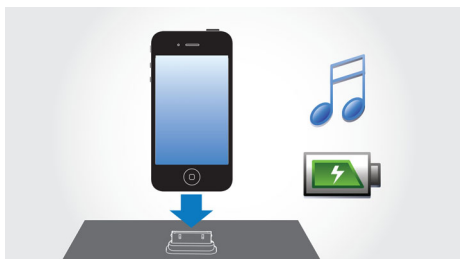

Enjoy your favorite MP3 music while charging your iPod/iPhone! The dock lets you connect your portable device directly to the Docking entertainment system so you can listen to your favorite music in superb sound. It also charges your iPod/iPhone while it plays so you can enjoy your music and not have to worry about your portable player battery running out. The Docking entertainment system automatically charges your portable device while it is docked.

## Bass Reflex Speaker System



Bass Reflex Speaker System delivers a deep bass experience from a compact loudspeaker box system. It differs from a conventional loudspeaker box system in the addition of a bass pipe that is acoustically aligned to the woofer to optimize the low frequency roll-off of the system. The result is deeper controlled bass and lower distortion. The system works by resonating the air mass in the bass pipe to

vibrate like a conventional woofer. Combined with the response of the woofer, the system extends the overall low frequency sounds to create a whole new dimension of deep bass.

## Dock iPod/iPhone in its case



Smartly designed spring-loaded docking port effortlessly accommodates any iPod or iPhone, without special adaptors. What's more, it works even when most protective cases are on – just dock your iPod or iPhone as it is. Now you can truly have fuss-free enjoyment of your music.

## Free HomeStudio app



There's no better way to wake up or listen to the radio than with the free Philips HomeStudio app. Simply download the app from the Apple App Store to enjoy a host of exciting features. Advanced alarm set up, for example, gives you greater flexibility in alarm settings - including alarm volume, duration, date and sound. You also get better user interface when you listen to

ORD7105C/00

the radio, with easy-to-use station preset functions.

## Auto clock synchronization



When connect and dock, this docking system will automatically synchronize the clock with your iPod/iPhone within a few seconds. With this convenient feature, you do not need to set the time manually.

## AUDIO-IN (3.5mm)



Make one easy connection and enjoy all your music from portable devices and computers. Simply plug your device to the AUDIO-IN (3.5 mm) port on your Philips set. With computers, the connection is typically made from the headset output. Once linked, you can enjoy your entire music collection directly, on a set of superior speakers. Philips simply delivers better sound.

# Specifications

## iPhone compatibility

- Compatible with: iPhone 5

## iPod compatibility

- Compatible with: iPod nano 7th generation, iPod touch 5th generation

## Audio Playback

- Playback mode: Charging iPod, Charging iPhone

## Tuner/Reception/Transmission

- Tuner bands: FM
- Frequency range: (FM) 87.5-108 MHz
- Station presets: 20
- Auto digital tuning

## Connectivity

- Audio in (3.5mm)
- Antenna: FM antenna (75 ohm)

## Convenience

- Display Type: LED white

## Sound

- Sound System: Stereo
- Volume control: rotary (digital)

## Loudspeakers

- Built-in speakers: 2

## Power

- Power type: AC input

## Dimensions

- Product dimensions (WxDxH): 330 x 150 x 163 mm
- Packaging dimensions (WxDxH): 460 x 250 x 245 mm

## Accessories

- Included accessories: AC power cord (VDE & UK), User Manual, Warranty certificate



Issue date 2013-05-21

Version: 2.0.1

12 NC: 8670 001 00375  
EAN: 87 12581 67827 2

© 2013 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)