

Philips 3000 series  
DVD player



DVP3010



## Enjoy it all - from DVD

With Divx Ultra Playback

Does size matter? Ever heard of less is more? Introducing the best value DVD player. No complications! Just a simple set that plays practically any disc format, including your digital photos with absolutely no compromise to picture quality.

### **Bring audio and video to life**

- 12-bit/108MHz video processing for sharp and natural images
- Progressive Scan component video for optimized image quality

### **Play all your movies and music**

- Play CD, (S)VCD, DVD, DVD+- R/RW, DivX, MP3, WMA, JPEG
- DivX Ultra Certified for enhanced DivX video playback
- ProReader Drive for smooth playback on virtually any disc

### **Fits any space, any lifestyle**

- Ultra-slim design that fits anywhere

**PHILIPS**  
sense and simplicity

# Highlights

## Multimedia DivX

Play CD, (S)VCD, DVD, DVD+- R/RW, DivX, MP3, WMA, JPEG

## DivX Ultra Certified




With DivX support, you are able to enjoy DivX encoded videos and movies from the Internet, including purchased Hollywood films, in the comfort of your living room. The DivX media format is an MPEG-4 based video compression technology that enables you to save large files like movies, trailers and music videos on media like CD-R/RW and DVD recordable disc for playback on your DivX Ultra Certified Philips Blu-ray or DVD player. DivX Ultra combines DivX playback with great features like integrated subtitles, multiple audio languages, multiple tracks and menus into one convenient file format.

## 12-bit/108MHz video processing



12-bit Video DAC is a superior Digital-to-Analogue-Converter that preserves every detail of the authentic picture quality. It shows subtle shades and smoother graduation of colors, resulting in a more vibrant and natural picture. The limitation of the usual 10bit DAC become in particular apparent while using large screens and projectors.

## Progressive Scan

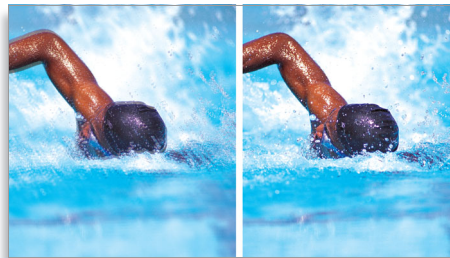

Progressive Scan doubles the vertical resolution of the image resulting in a noticeably sharper picture. Instead of sending a field comprising the odd lines to the screen first, followed by the field with the even lines, both fields are written at one time. A full image is created instantaneously, using the maximum resolution. At such a speed, your eye perceives a sharper picture with no line structure.

## Ultra-slim design



Ultra-slim design that fits anywhere

## ProReader Drive



ProReader Drive lets you enjoy your movies and videos worry-free. Even when old discs get smudgy or scratched, you can rest assured that they will play right through from start to end - without any sign that they have been damaged. Using state-of-the-art technology, ProReader Drive converts weak analog signals into robust digital ones, extracting information that allows less-than-perfect discs to play smoothly through. Together with its ability to read virtually any video format, ProReader Drive gives you the unbeatable assurance that whatever you pop in will most definitely play.



# Specifications

## Product dimensions

- Product dimensions (W x H x D):  
31 x 4,05 x 22,6 cm
- Weight: 1,05 kg

## Packaging dimensions

- Packaging dimensions (W x H x D):  
36 x 28,2 x 8 cm
- Nett weight: 1,2 kg
- Gross weight: 1,55 kg
- EAN: 87 12581 66281 3
- Number of products included: 1
- Packaging type: Dummy
- Type of shelf placement: Dummy

## Outer Carton

- Outer carton (L x W x H): 36 x 28,2 x 8 cm
- Nett weight: 1,2 kg
- Gross weight: 1,55 kg
- Tare weight: 0,35 kg
- EAN: 87 12581 66281 3
- Number of consumer packagings: 1

## Picture/Display

- D/A converter: 12 bit, 108 MHz
- Picture enhancement: Progressive scan, Video upsampling

## Sound

- D/A converter: 24 bit, 192 kHz
- Frequency response: 30-20000 Hz
- Signal to noise ratio: 100
- Distortion and Noise (1kHz): 85 dB
- Crosstalk (1kHz): 100 dB
- Dynamic Range (1kHz): 90 dB
- Sound System: Dolby Digital

## Video Playback

- Compression formats: DivX Ultra, MPEG1, MPEG2, MPEG4
- Video disc playback system: PAL

## Audio Playback

- MP3 bit rates: 32 - 320 kbps
- Compression format: MP3, WMA

## Still Picture Playback

- Picture Enhancement: Flip photos, Rotate, Zoom, Slideshow with MP3 playback
- Compression format: JPEG

## Optical Playback Media

- Playable Discs: CD, CDDA, CD-R/CD-RW, DVD, DVD +R/+RW, DVD -R/-RW, Kodak Picture Disc, SVCD, VCD

## File Format

- Audio: mp3, wma
- Picture: JPEG
- Video: avi, divx, mpeg, mpg

## Connectivity

- Rear Connections: Analog audio Left/Right out, Composite video (CVBS) output, ComponentVideo out Progressive, Digital coaxial out

## Convenience

- Child Protection: Parental Control, Child Lock
- On-Screen Display languages: English, Korean, Malay, Thai, Traditional Chinese

## Power

- Standby power consumption: < 0.5 W
- Power consumption: < 10 W
- Power supply: 110-240V, 50/60 Hz

## Accessories

- Included accessories: Remote Control, World Wide Warranty leaflet, User Manual, Audio/Video cable, 1 x AAA Battery, Power cord, Quick start guide, Warranty Leaflet

## Dimensions

- Product (W x H x D): 360 x 42 x 209 mm
- Product weight: 1.3 kg
- Packaging (W x H x D): 400 x 80 x 284 mm
- Weight incl. Packaging: 2.4 kg



Issue date 2013-02-12

Version: 1.1.3

12 NC: 8670 000 96379  
EAN: 87 12581 66281 3

© 2013 Koninklijke Philips Electronics N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips Electronics N.V. or their respective owners.

[www.philips.com](http://www.philips.com)