


positions marked.*



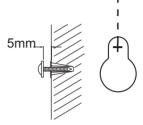

Note for the mounting

To secure the mounting on wall, a concrete wall is required.

Use screws to mount the main unit on the wall

- 1 Use this sheet as a template. Mark the position of the unit on the wall (as illustrated above), and then drill two 6mm diameter holes.
- 2 Secure the 2 dowels and 2 screws (both supplied) in the holes respectively. Leave a gap of 5 mm between the head of the screw and the wall.
- 3 Hang the unit on the screws.

中文

安裝的注意事項

要在牆上穩固安裝,需要混凝土牆壁。

使用螺絲,將主裝置安裝在牆上

- 1 使用此紙板作為模板。 在牆上標記裝置的位置(如上述所示), 然後鑽兩個直徑為 6 毫米的鑽孔。
- 2 分別在鑽孔穩固 2 顆木釘和 2 顆螺絲(均有提供)。在螺絲頭與牆壁之間留下 5 毫米的空隙。
- 3 將裝置掛在螺絲上。

掛牆安裝説明 於標記的鑽孔位置在牆上鑽孔。*

DCM3060_98_Wall mount.indd 1 8/11/2011 1:50:34 PM