

Philips
Micro music system

Bluetooth
with MULTIPAIR
DAB+

BTB2670



HiFi stereo sound that fits your home

Listen to your smartphone tunes, stream your music library over Bluetooth and play MP3-CDs on this compact, all-in-one Philips music system. Then tune in to your favorite radio shows with DAB+ and FM compatibility.

Enjoy your music from multiple sources

- DAB+ and FM compatible for a complete radio experience
- Stream music over Bluetooth® with multi-device pairing
- Swap music instantly between 2 devices with MULTIPAIR
- USB Direct for easy MP3 music playback
- Play MP3-CD, CD and CD-R/RW

Enrich your sound experience

- Bass Reflex Speaker System delivers a powerful, deeper bass
- 20W RMS maximum output power

Design that blends into your interior

- Compact design fits any space, any lifestyle
- Wall-mountable option for flexible placement

Easy to use

- Bluetooth standby mode always on for easy reconnection
- Fast and efficient USB charging for your smart device

PHILIPS

Highlights

USB Direct for easy MP3 music



Thanks to the complete file transferability, you can easily enjoy the convenience and fun of accessing more digital music via the built-in USB Direct.

Bass Reflex Speaker System



Bass Reflex Speaker System delivers a deep bass experience from a compact loudspeaker box system. It differs from a conventional loudspeaker box system in the addition of a bass pipe that is acoustically aligned to the woofer to optimize the low frequency roll-off of the system. The result is deeper controlled bass and lower distortion. The system works by resonating the air mass in the bass pipe to vibrate like a conventional woofer. Combined

with the response of the woofer, the system extends the overall low frequency sounds to create a whole new dimension of deep bass.


DAB+ and FM compatible

DAB+ and FM compatible for a complete radio experience

Swap music between 2 devices

Pair with 2 smart devices simultaneously so you can stream music from whichever device you want, without the hassle of un-pairing and re-pairing. To play a song on a different device, pause the song on the original device first and then play the new song on a different device to take over. It's perfect for sharing music with friends, parties, or just playing different songs stored on different devices. Let friends and family pair at the same time, so you can swap between each other's music easily.

Wall-mountable

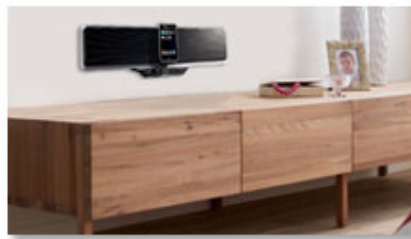

The perfect combination of a slim and versatile design, your Philips audio system is cleverly designed to blend into your living space. The base of the audio system is a stand so the

system can sit securely and nicely on any shelf or cabinet. When wall mounted you have all the same flexibility of the freestanding stand.

Bluetooth standby



After your smart device has been connected once, your Philips music system can be woken from standby mode by your smart device's Bluetooth function. This will also activate the Bluetooth source, making it quick and easy to stream music, any time.

USB fast charging



The USB port isn't just for music playback. The intelligent USB power management system enables a 2A fast charging current to rapidly charge your smart device when the music system is in standby mode.

Specifications

Sound

- Sound enhancement: digital sound control
- Maximum output power (RMS): 20W

Loudspeakers

- Speaker drivers: 2.75" woofer
- Speaker types: bass reflex speaker system

Audio playback

- Disc playback modes: fast forward/backward, next/previous track search, repeat/shuffle/program
- Playback media: CD, CD-R/RW, MP3-CD, USB flash drive
- USB Direct playback modes: fast backward/fast forward, play/pause, previous/next, repeat, shuffle, stop

Tuner/Reception/Transmission

- Tuner bands: FM mono, FM stereo
- DAB/DAB+: Info display
- Station presets: 20
- Antenna: FM antenna (75 ohm)
- Tuner enhancement: auto digital tuning, auto scan

Connectivity

- USB: USB host

- Audio in (3.5mm)
- Bluetooth profiles: A2DP

Convenience

- Clock: On main display, sleep timer
- Display type: LED display
- Loader type: slot

Accessories

- Remote control: 21-key remote
- Included accessories: FM antenna, Quick Use Guide

Power

- Power supply: 100-240VAC, 50/60Hz

Dimensions

- Packaging width: 520 mm
- Packaging height: 323 mm
- Packaging depth: 123 mm
- Gross weight: 3.6 kg
- Net weight: 2.4 kg
- Product dimensions (WxDxH): 433 x 67 x 226 mm (without stand)



Issue date 2022-05-15

Version: 1.0.3

12 NC: 8670 001 46784
EAN: 48 95185 63072 4

© 2022 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com