

Philips
DVD player



DVP2008

Experience freedom

Be in complete control to enjoy sharp, crystal-clear picture and sound quality movies and music wherever and whenever you desire. It's your home entertainment, under your control.

Fits any space, any lifestyle

- Slim and flexible design with optional wall mounting

Plays all your movies and music

- Plays DivX, MP3, WMA and JPEG digital camera photos
- Plays CD, (S) VCD, DVD, DVD+R/RW, DVD-R/RW

Brings audio and video to life

- 12-bit/108 MHz video processing for sharp, natural images
- 192 kHz/24-bit audio DAC enhances analogue sound input
- High-quality outputs for analogue and digital audio
- Progressive Scan component video for optimised image quality

PHILIPS
sense and simplicity

Specifications

Picture/Display

- D/A converter: 10-bit, 54 MHz
- Picture enhancement: Progressive Scan, Video upsampling

Sound

- D/A converter: 24-bit, 192 kHz
- Signal to noise ratio: 90
- Distortion and Noise (1 kHz): 65 dB
- Crosstalk (1 kHz): 70 dB
- Dynamic Range (1 kHz): 80 dB
- Frequency response: 30-20,000 Hz
- Sound System: Dolby Digital

Video Playback

- Playback Media: CD-R/CD-RW, CD, DVD-Video, DVD, DVD+R/+RW, DVD-R/-RW, Video CD/SVCD
- Compression formats: MPEG1, MPEG2
- Video disc playback system: PAL, NTSC

Audio Playback

- Playback Media: CD, MP3-CD, Audio CD, CD-R/RW, MP3-DVD, WMA-CD
- MP3 bit rates: 32 - 256 kbps
- Compression format: MP3, PCM, WMA

Still Picture Playback

- Playback Media: Picture CD, CD-R/RW, DVD+R/+RW, DVD-R/-RW, Kodak Picture CD
- Picture compression format: JPEG
- Picture enhancement: Rotate, Zoom, Slideshow,

Flip photos

Multimedia Applications

- Playback Formats: JPEG Still pictures, MP3

Connectivity

- Rear Connections: Analogue audio Left/Right out, ComponentVideo out Progressive, CVBS & analogue audio L/R output, Digital coaxial out

Convenience

- Child Protection: Parental Control, Child Lock
- On-Screen Display languages: English, Simplified Chinese

Power

- Power supply: 110-240V, 50/60 Hz
- Power consumption: < 10 W
- Standby power consumption: < 0.8 W

Accessories

- Included Accessories: 2 x AAA Batteries, Audio/Video cable, Remote Control, User manual, World Wide Warranty leaflet


Dimensions

- Set dimensions (W x H x D): 224 x 47 x 219 mm
- Set weight: 0.9 kg
- Packaging dimensions (W x H x D): 274 x 88 x 295 mm
- Weight incl. Packaging: 1.6 kg




Highlights

Plays it all

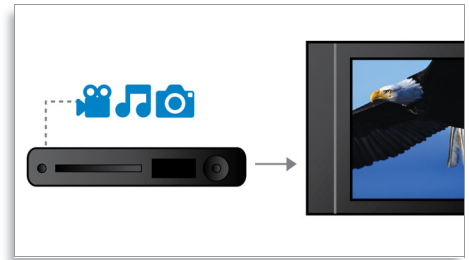


Play virtually any media format you want - whether it is DivX, MP3, WMA or JPEG. Experience the unbeatable convenience of great playability, and the luxury of sharing media files on your TV or home theatre system - in the comfort of your living room.

192 kHz/24-bit audio DAC

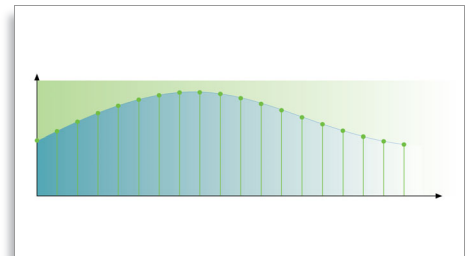

192 kHz sampling enables you to have an accurate representation of the original sound curves. Together with a 24-bit resolution, more information is captured from the original analogue sound wave form, giving a much richer audio reproduction.

Progressive Scan

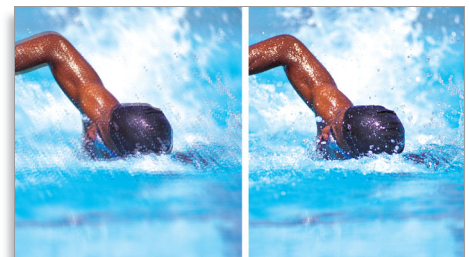

Progressive Scan doubles the vertical resolution of the image resulting in a noticeably sharper picture. Instead of sending a field comprising the odd lines to the screen first, followed by the field with the even lines, it writes both fields at the same time. A full image is created instantaneously, using the maximum resolution. At such a speed, your eye perceives a sharper picture with no line structure.



Issue date 2009-05-05

Version: 2.0.6

12 NC: 8670 000 38612
EAN: 87 12581 40921 0

© 2009 Koninklijke Philips Electronics N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips Electronics N.V. or their respective owners.

www.philips.com