


Philips  
DVD player

DivX

DVP3040

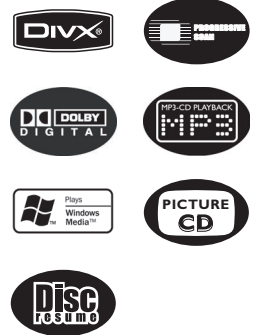

## Turn up your experience

With DivX playback

Your dream player with flawless, true-to-life picture quality and the ability to play virtually any disc! The Philips DVD player delivers your movies and music entertainment experience.

### Great audio and video performance

- Progressive Scan component video for optimized image quality
- RGB on Scart single connection for high-quality video
- 192kHz/24 bit audio DAC enhances analogue sound input

### Plays it all

- Movies: DVD, DVD+R/RW, DVD-R/RW, (S)VCD, DivX
- Music: CD, MP3-CD, CD-R/RW & Windows Media™ Audio
- Photos: Picture CD (JPEG)

### Fits everywhere, goes anywhere

- Compact design
- Ultra slim design



# PHILIPS

DVD player  
DivX

## Technical specifications

### Picture / Display

- **Aspect ratio:** 4:3, 16:9
- **D/A converter:** 12 bit, 108 MHz
- **Picture enhancement:** Progressive scan, Video Upsampling

### Sound

- **D/A converter:** 24 bit, 192 kHz
- **Frequency response:** 30-20000 Hz
- **Signal to noise ratio:** 100
- **Distortion and noise (1kHz):** 85 dB
- **Crosstalk (1kHz):** 100 dB
- **Dynamic range (1kHz):** 90 dB
- **Sound system:** Dolby Digital

### Video playback

- **Playback Media:** CD, CD-R/CD-RW, Video CD/SVCD, DVD, DivX, DVD+R/+RW, DVD-R/-RW
- **Compression formats:** MPEG1, MPEG2, DivX 3.11, DivX 4.x, DivX 5.x, DivX 6.0
- **Video disc playback system:** PAL, NTSC

### Audio Playback

- **Playback Media:** CD, MP3-CD, MP3-DVD, WMA-CD, CD-R/RW
- **Compression format:** MP3, Dolby Digital, PCM, WMA
- **MP3 bit rates:** 32 - 256 kbps

### Still picture playback

- **Playback Media:** DVD+R/+RW, DVD-R/-RW, CD-R/RW, Picture CD, Kodak Picture CD

- **Picture compression format:** JPEG
- **Picture enhancement:** Flip photos, Rotate, Zoom, Slideshow

### Connectivity

- **Rear Connections:** Analogue audio left / right out, Component video out progressive, Composite video (CVBS) output, Digital coaxial out, Scart

### Convenience

- **Child Protection:** Child lock, Parental control
- **On-screen display languages:** English, German, Dutch, Danish, Finnish, French, Italian, Norwegian, Portuguese, Spanish, Turkish, Swedish, Polish

### Power

- **Power supply:** 50Hz, 230V
- **Power consumption:** < 10 W
- **Standby power consumption:** < 0.8 W

### Accessories

- **Included accessories:** 2 x AAA Batteries, Quick start guide, Remote control, World-Wide Warranty leaflet, User manual

### Dimensions

- **Set dimensions (W x H x D):** 360 x 37 x 235 mm
- **Packaging dimensions (W x H x D):** 415 x 82 x 320 mm

DVP3040/12

## Product highlights

### Progressive scan

*Progressive Scan doubles the vertical resolution of the image resulting in a noticeably sharper picture. Instead of sending with the odd lines to the screen first, followed by the field with the even lines, both fields are written at one time. A full image is created instantaneously, using the maximum resolution. At such a speed, the human eye perceives a sharper picture with no line structure.*

### RGB on Scart connectivity

*RGB on Scart is a cable connection that provides easy connectivity for high quality video output*

### 192kHz/24 bit audio DAC

*192KHz sampling enables you to have an accurate representation of the original sound curves. Together with a 24-bit resolution, more information is captured from the original analogue sound wave form, giving a much richer audio reproduction.*

### Multi-format Movies with DivX

*Multi format playability allows you to play most disc formats for maximum disc compatibility and viewing pleasure.*

### Music: Windows Media™ Audio

*Multi format playability allows you to play most disc formats for maximum disc compatibility and listening pleasure.*

### Picture CD (JPEG)

*Multi format playability allows you to view images in the comfort of your living room and play most disc formats for maximum disc compatibility and viewing pleasure.*

### Ultra slim design

*The attractive enclosure has a very low profile.*



Date of issue 2006-08-24

Version: 3.0

12 NC: 8622 810 13116  
EAN: 87 10895 93939 3

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips Electronics N.V. or their respective owners.  
© 2006 Koninklijke Philips Electronics N.V.  
All Rights reserved.  
[www.philips.com](http://www.philips.com)