

Philips
DVD home theater system



HTS3410D



See, hear, experience everything

This stylish and compact full digital home entertainment system plays practically any disc in high quality Dolby, DTS multi-channel sound. So just relax and fully immerse yourself in movies and music at home.

Superb audio and video performance

- Advanced Class D Amplifier™ for compact, powerful sound
- DTS, Dolby Digital and Pro Logic II surround sound
- Progressive Scan component video for optimized image quality

Plays it all

- Movies: DVD, DVD+R/RW, DVD-R/RW, (S)VCD
- Music: CD, CD-R/RW and MP3-CD
- Picture CD (JPEG) with music (MP3) playback

Quick and easy set-up

- Easy-fit™ connectors with color-coding for a simple set-up
- Easy set-up to initialize your total home entertainment


PHILIPS
sense and simplicity

Highlights

6x Class D Digital Amplifier


When it comes to perfect audio there is no room for distortion. Digital amplifiers generate far less heat than standard analog amplifiers, allowing for smaller set enclosures. Philips Class D Amplifiers™ provide dramatically enhanced sound quality over digital amplifiers used by competitors as they are designed to control and reduce EMI (Electro Magnetic Interference). In addition, the Class D Amplifiers™ use a closed loop design which suppresses distortion and loss of audio quality. The overall result is enhanced audio performance from a much smaller package.

DTS, DolbyDigital, ProLogic II

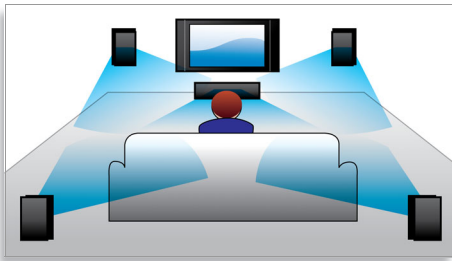

A built-in DTS and Dolby Digital decoder eliminates the need for an external decoder by processing all six channels of audio information to provide a surround sound experience and an astoundingly natural sense of ambience and dynamic realism. Dolby Pro Logic II provides five channels of surround processing from any stereo source.

Progressive Scan

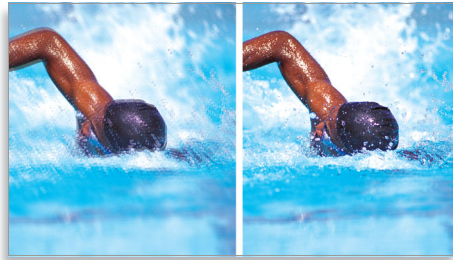

Progressive Scan doubles the vertical resolution of the image resulting in a noticeably sharper picture. Instead of sending a field comprising the odd lines to the screen first, followed by the field with the even lines, both fields are written at one time. A full image is created instantaneously, using the maximum resolution. At such a speed, your eye perceives a sharper picture with no line structure.

Multi-format Movies

Multi-format playability allows you to play most disc formats for maximum disc compatibility and viewing pleasure.

Multi-format Music


Multi-format playability allows you to play most disc formats for maximum disc compatibility and listening pleasure.

Picture CD with MP3 Playback

Picture CD is a CD-R or CD-RW disc on which you can store your MP3 and digital pictures. When inserting a Picture CD in the

DVD player, a screen menu will pop up, showing your JPEG's and/or MP3 files on the disc. Just select the music and pictures files you wish to enjoy and press play or OK. You can watch your pictures on TV with your music playing simultaneously.

Easy-fit™ connectors

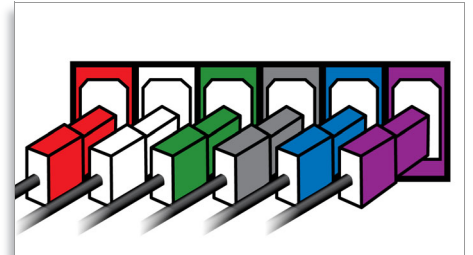

Color-coded connectors provide a simple and user-friendly solution to connect the speakers and subwoofer to the center unit of the home entertainment system simply by plugging the connectors in the matching colored interface at the rear of the center unit.

Quick Start Guide

To guide you through the initial set-up of your system, Philips delivers a Quick Start Guide that uses an easy approach with clearly defined graphics and colors to guide you through the basic steps of connection and obtaining picture and sound. These basic steps are clearly described on one page in the packaging box, making setup quick and simple.



Specifications

Picture/Display

- Aspect ratio: 4:3, 16:9
- D/A converter: 10 bit / 54 MHz
- Picture enhancement: Progressive Scan

Sound

- D/A converter: 24 bit, 192 kHz
- Frequency response: 180 - 16000 Hz
- Signal to noise ratio: >60 dB
- Distortion and Noise (1kHz): >65 dB
- Crosstalk (1kHz): >35 dB
- Dynamic Range (1kHz): >85 dB
- Sound System: Dolby Prologic II, DTS, Dolby Digital
- Sound Enhancement: Class "D" Digital Amplifier, Night Mode
- Equalizer settings: Drama, Sci-Fi, Concert, Action, Classic, Digital, Jazz, Rock
- FTC Power: 330 W
- Total Sound Power (RMS): 700 W
- Output power (RMS): 6 x 115 W

Video Playback

- Playback Media: CD-R/CD-RW, Video CD, SVCD, DVD-Video, DVD-R, DVD+RW, DVD+R, DVD-RW (Video mode)
- Compression formats: MPEG1, MPEG2
- Video disc playback system: PAL, NTSC

Audio Playback

- Playback Media: CD, CD-R, CD-RW, MP3-CD
- Compression format: MP3, PCM
- MP3 bit rates: 32-256 kbps and VBR

Still Picture Playback

- Playback Media: Picture CD
- Picture Compression Format: JPEG

Tuner/Reception/Transmission

- Tuner Bands: FM Stereo, AM
- Auto digital tuning
- Auto store
- Number of Preset Channels: 40

Connectivity

- Front / Side connections: Headphone out
- Other connections: AUX in, TV in (audio, cinch), Line out, Digital coaxial out, Composite video (CVBS) out, Component Video out Interlaced, S-Video out, FM Antenna, AM Antenna, Easy-Fit speaker connectors

Convenience

- Child Protection: Parental Control
- On-Screen Display languages: English, Canadian French, Mexican Spanish

Power

- Power supply: 110V, 60Hz
- Power consumption: 180 W
- Standby power consumption: < 1 W

Loudspeakers

- Satellite Speaker: 2 way
- Satellite speaker freq range: 140-20000 Hz
- Satellite speaker impedance: 3 ohm
- Satellite speaker drivers: 1" conical dome tweeter, 3" full range woofer
- Center Speaker: 2 way, Magnetically shielded
- Center freq range: 140-20000 Hz
- Center speaker impedance: 3 ohm
- Center speaker drivers: 1" conical dome tweeter, 2x 3" full range woofers
- Subwoofer type: Passive
- Subwoofer freq range: 40-140 Hz
- Subwoofer impedance: 3 ohm
- Subwoofer driver: 6.5" high efficiency woofer

Accessories

- Batteries: 2 x AA
- Included Accessories: Audio Cable, Video Cable, FM antenna, AM antenna, Quick Use Guide
- Remote control: 3139 238 04482
- User Manual: English/ French/ Spanish
- Warranty Card: North American version

Dimensions

- Set dimensions (W x H x D): 435 x 53 x 365 mm
- Set weight: 4.25 kg
- Surround Speaker dimensions (W x H x D): 93 x 169 x 65 mm
- Surround speaker Weight: 0.7 kg
- Center speaker dimensions (W x H x D): 245 x 93 x 70 mm
- Center Speaker Weight: 1.3 kg
- Subwoofer dimensions (W x H x D): 156 x 360 x 350 mm
- Subwoofer Weight: 4.3 kg
- Packaging dimensions (W x H x D): 572 x 355 x 522 mm
- Weight incl. Packaging: 16.2 kg



Issue date 2009-07-03

Version: 6.0.10

12 NC: 9073 100 12734
UPC: 0 37849 95624 3

© 2009 Koninklijke Philips Electronics N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips Electronics N.V. or their respective owners.

www.philips.com