

Philips  
DVD player/recorder with  
i.LINK digital input



DVDR615

## Experience the magic of DVD Recording!

Now you can copy your favorite camcorder tapes for life on DVD, in perfect digital picture and sound quality thanks to i.LINK.

### **Preserve your favorite memories on DVD**

- i.LINK digital input for perfect digital camcorder copies

### **Record your favorite TV programs on DVD**

- Record up to 8 hours on a single layer DVD+R/RW disc
- Digital Video Recording gives the ultimate picture quality
- 2.0 Dolby Digital Encoding for quality audio recording

### **Share your favorite recordings**

- Your DVDs will play on existing DVD players and drives
- Always compatible recordings: with DVD+R/RW discs
- Index Picture Screen is a DVD menu created on a DVD disc


### **Enjoy your favorite movies and music**

- Plays DVD, CD and MP3
- Coaxial connection ensures a reliable digital output

**PHILIPS**  
sense and simplicity

# Highlights

## i.LINK digital input

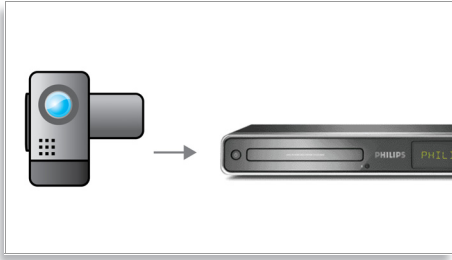

Also known as IEEE 1394 and FireWire, i.Link carries all audio and video signals via a single cable digitally, with no loss in picture and sound quality. With i.Link digital video input, you can copy your home videos in their original digital picture quality.

## 8 hours video recording (+RW)

The 8-hour record mode available on specific DVD recorder models lets you record up to

eight hours of video on a single layer DVD+R/RW disc.

## Digital Video Recording

Digital Video Recording gives the ultimate picture quality

## 2.0 Dolby Digital Encoding

Dolby Digital is an advanced digital audio encoding technology that is used on all DVD-Video discs. Philips DVD Recorders store audio in the same format, so it is fully compatible with any DVD player. The quality surpasses that of analog video recorder.

## Two-Way Compatibility

DVD Recorders can play regular DVD-Video discs, but equally important is that DVD+R and DVD+RW discs recorded on them can be played on existing DVD-Video players.

## Always compatible recordings

Always compatible recordings: with DVD+R/RW discs

## Index Picture Screen

The Index Picture Screen is a DVD menu created on every DVD+R/RW disc that is also accessible on regular DVD players. It gives you an instant overview and easy access, so you can directly see what's on the disc and navigate to the recording you want to watch.

## Plays DVD/CD/MP3

Plays DVD, CD and MP3

## Coaxial digital audio output

Coaxial connection ensures a reliable digital output



# Specifications

## Picture/Display

- Aspect ratio: 4:3, 16:9
- D/A converter: 10 bit, 54 MHz
- A/D converter: 10 bit, 54 MHz

## Sound

- D/A converter: 24 bit, 96 kHz
- A/D converter: 24 bit, 192 kHz
- Signal to noise ratio: 85
- Distortion and Noise (1kHz): 83 dB
- Crosstalk (1kHz): 105 dB
- Dynamic Range (1kHz): 83 dB

## Video Playback

- Playback Media: CD-R/CD-RW, DVD, DVD+RW, DVD+R, DVD-RW (Video mode), DVD-R, DVD-Video, MP3-CD, Video CD/SVCD
- Compression formats: MPEG1, MPEG2
- Video disc playback system: NTSC, PAL

## Video Recording

- Recording system: PAL
- Compression formats: MPEG2
- Recording enhancements: Append, Chapter Marker Insertion, Divide, Erase, Manual Chapter Marking, One Touch Record (OTR), Station ID Recording
- Recording Modes: M1: 60 minutes, M2: 120 minutes, M2x: 150 minutes, M3: 180 minutes, M4: 240 minutes, M6: 360 minutes, M8: 480 minutes
- Audio compression: Dolby Digital

## Audio Playback

- Playback Media: MP3-CD, CD, CD-R, CD-RW
- Compression format: Dolby Digital, DTS, MP3, MPEG2 Multichannel, PCM
- MP3 bit rates: 32 - 256 kbps

## Still Picture Playback

- Playback Media: Picture CD
- Picture compression format: JPEG
- Picture enhancement: Create albums, Edit photos (colors, filters), Flip photos, Rotate
- Slide show: 3 speeds
- Thumbnail support: EXIF format

## Storage Media

- Recording media: DVD+R, DVD+RW

## Tuner/Reception/Transmission

- Aerial Input: 75 ohm coaxial (IEC75)
- TV system: PAL

## Connectivity

- Front / Side connections: i.LINK DV in (IEEE1394, 4-pin), S-video in, Video in, Audio L/R in
- Other connections: Analog audio Left/Right in, Analog audio Left/Right out 2x, Component Video (YPbPr) input, Composite video (CVBS) input, Composite video (CVBS) out, Digital coaxial out, Digital optical out, RF antenna in / TV out, S-Video in, S-Video out, Component Video out Interlaced

## Convenience

- Programming/Timer Enhancements: Daily/Weekly Repeat Program, G-Code, Manual Timer, One Touch Recording
- Child Protection: Child Lock
- Ease of Installation: Autoinstall, Sorting

## Power

- Power supply: 50Hz, 220-240V
- Power consumption: 27 W
- Standby power consumption: < 3 W

## Accessories

- Included Accessories: AC Power Cord, Audio/Video cable, Blank DVD+RW Disc, Coax RF antenna cable, Guarantee booklet, Quick start guide, User Manual, Remote Control, Batteries for remote control

## Dimensions

- Set dimensions (W x H x D): 435 x 285 x 65 mm
- Set weight: 3.5 kg
- Packaging dimensions (W x H x D): 518 x 159 x 383 mm
- Weight incl. Packaging: 5.5 kg



Issue date 2009-04-20

Version: 5.0.7

12 NC: 8622 810 11637  
EAN: 87 10895 80012 9

© 2009 Koninklijke Philips Electronics N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips Electronics N.V. or their respective owners.

[www.philips.com](http://www.philips.com)