



Philips
Portable speaker

Green



SBA1710GRN

Mobile speaker

Pumping out larger-than-life sound, Philips SBA1710 speakers come complete with a handy mobile stand that ensures they're incredibly easy to use!

Impressive sound

- Class "D" Digital Amplifier for superb sound quality
- 4W RMS total output power

Designed for grab and go

- Music on the go
- Up to 8 hours music playback

Simplicity

- Battery powered for portability
- Compatible with any media

PHILIPS

Portable speaker
Green

Specifications

Product dimensions

- Product dimensions (W x H x D):
13.2 x 7.7 x 9.9 cm
- Product dimensions (W x H x D):
5.2 x 3.0 x 3.9 inch
- Weight: 0.283 kg
- Weight: 0.624 lb

Compatible with

- Smartphones
- iPod
- iPhone
- Mp3 player

Design and finishing

- Color: Green

Sound

- Impedance: 4
- RMS Power rating: 4 W
- Frequency response: 200Hz – 20KHz (+/- 3 dB)


Power

- Operating time on battery: 8 hr
- Battery type: 4 x AA (not included)

SBA1710GRN/00


Highlights

Class D Digital Amplifier

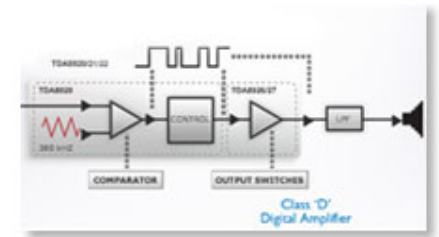


Class 'D' Digital Amplifier takes an analog signal, converts it into a digital signal and then amplifies the signal digitally. The signal then enters a demodulation filter to give the final output. The amplified digital output delivers all the advantages of digital audio, including improved sound quality. In addition, Class 'D' Digital Amplifier has greater than 90% efficiency compared to traditional AB amplifiers. This high efficiency translates into a powerful amplifier with a small footprint.

4W RMS total output power

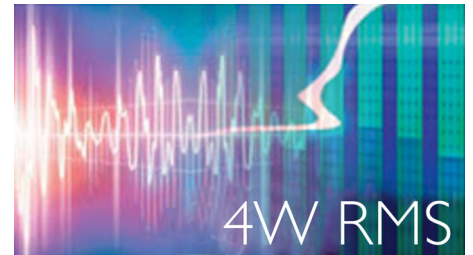

RMS refers to Root Mean Square which is a typical measurement of audio power, or rather, the electrical power transferred from an audio amplifier to a loudspeaker, which is measured in watts. The amount of electrical power delivered to the loudspeaker and its sensitivity determines the sound power that is generated. Essentially, amplifiers are limited by the electrical energy they can amplify and loudspeakers by the electrical energy they can convert into sound energy, without distorting the audio signal. The higher the wattage, the better the sound power emitted by the speaker.

Up to 8 hours music playback

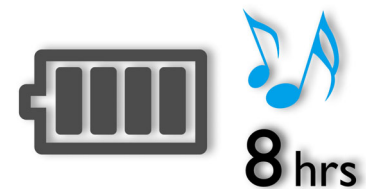

Enjoy music playback for up to 8 hours on a single charge.

Music on the go

Enjoy the convenience of playing music the way you want - play it out loud through the mobile speaker.



Issue date 2015-01-25

Version: 1.0.3

12 NC: 8670 000 97786
EAN: 08 71258 16680 75

© 2015 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com