


Philips
MP3 portable speaker

Universal

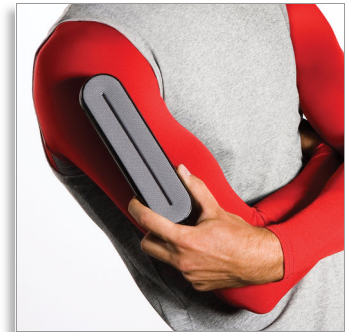

SBA3000

Exceptional bass from a small space

for music enjoyment on the go

Move with your music! Enjoy stereo sound wherever you go on a travel speaker with rich bass performance. Secure the line-in cable to use as a lanyard for easy portability. Inside, a digital amplifier eliminates mobile-phone interference.

Enjoy your music in stereo

- Lightweight, portable design for music enjoyment anytime
- Mobile phone shielding technology means static-free sound
- Universal: works via your device's 3.5mm headphone jack

Take your music with you

- Battery powered for portability
- 30 hours of continuous play for worry-free enjoyment
- Line-in cable becomes a lanyard for easy portability
- Carrying pouch protects your speakers when not in use

Powerful Sound

- Class 'D' digital amplifier for quality sound performance
- Dynamic bass boost - hear the deepest, richest bass
- Incredible Surround™ for enhanced audio enjoyment



Great sound
on the go
Un son exceptionnel
où que vous allez



PHILIPS
sense and simplicity

Specifications

Universal Compatibility

- Any device with a 3.5mm jack: iPad, iPod, iPhone, GoGear, MP3 player with a 3.5mm jack, PCs & laptops, Mobile phone with a 3.5mm jack

Design and finishing

- Color(s): Black

Accessories

- Carrying case

Sound

- Frequency response: 150 - 16,000 Hz
- Impedance: 4 Ohms
- RMS Power rating: 4W
- Speaker diameter: 40 mm
- Type: Neodymium
- Sound Enhancement: Class "D" Digital Amplifier, Dynamic Bass Boost, Incredible Surround

Power

- Battery type: AA
- Operating time on battery: 30 hr
- Batteries included: No
- Number of batteries: 4

Convenience

- Volume control

Packaging dimensions

- Packaging type: Carton
- Number of products included: 1
- Packaging dimensions (W x H x D): 9.42 x 22.5 x 9.42 cm

- Packaging dimensions (W x H x D): 3.7 x 8.9 x 3.7 inch
- Gross weight: 0.4 kg
- Nett weight: 0.229 kg
- Tare weight: 0.171 kg
- Gross weight: 0.882 lb
- Nett weight: 0.505 lb
- Tare weight: 0.377 lb
- UPC: 6 09585 17680 5

Outer Carton

- Number of consumer packagings: 6
- Outer carton (L x W x H): 31.9 x 24.9 x 21.7 cm
- Outer carton (L x W x H): 12.6 x 9.8 x 8.5 inch
- Gross weight: 3.053 kg
- Nett weight: 1.374 kg
- Tare weight: 1.679 kg
- Gross weight: 6.731 lb
- Nett weight: 3.029 lb
- Tare weight: 3.702 lb
- GTIN: 1 06 09585 17680 2

Inner Carton

- Number of consumer packagings: 2
- Inner carton (L x W x H): 19.7 x 10.2 x 23.6 cm
- Inner carton (L x W x H): 7.8 x 4.0 x 9.3 inch
- Gross weight: 0.909 kg
- Nett weight: 0.458 kg
- Tare weight: 0.451 kg
- Gross weight: 2.004 lb
- Nett weight: 1.010 lb
- Tare weight: 0.994 lb
- GTIN: 2 06 09585 17680 9

Highlights

Dynamic bass boost



Innovative technology delivers unbelievably deep, rich bass from compact speakers. Dynamic bass boost emphasizes the bass content of the music throughout the range of volume settings from low to high – at the touch of a button!

Class 'D' Amplifier

Class 'D' Digital Amplifier takes an analog signal, converts it into a digital signal and then amplifies the signal digitally. The signal then enters a demodulation filter to give the final output. The amplified digital output delivers all the advantages of digital audio, including improved sound quality. In addition, Class 'D' Digital Amplifier has greater than 90% efficiency compared to traditional AB amplifiers. This high efficiency translates into a powerful amplifier with a small footprint.

Line-in doubles as lanyard

These speakers are ready to go! When it's time to take your music on the go, reconnect the line-in cable and secure it in place to use as a convenient lanyard.

phone shielding technology

advanced circuitry design cuts out mobile phone interference to ensure static free sound

Universal 3.5mm headphone jack

Plug and play with any of your mobile devices that have a 3.5mm headphone jack – iPod, iPhone, GoGear, MP3 players, laptops, netbooks, music phones and more.



Issue date 2010-07-14

Version: 3.0.3

12 NC: 8670 000 56919
UPC: 6 09585 17680 5

© 2010 Koninklijke Philips Electronics N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips Electronics N.V. or their respective owners.

www.philips.com