# Always there to help you

Register your product and get support at www.philips.com/welcome





SA4DOT02 SA4DOT04 SA4DOT08



# User manual



# Contents

1	Important safety information				
	General maintenance				
	Recycling the product and the built-in				
	battery	3			
2	Your new player	5			
	What's in the box	5 5 5 5			
	PC software for the player	5			
	Files loaded on the player	5			
	Overview	5			
	Controls				
	LED indicator and audio feedback	6			
3	Get started	7			
	Charge power	7 7			
	Switch the player on or off				
	Automatic standby and shut-down	7			
4	Play music	8			
	Transfer music to the player	8			
	Play music	8			
	Search for a song	8			
	Change the volume level	8			
	Switch the random play on or off	8			
5	Update the firmware through				
	Philips Device Manager	9			
6	Troubleshooting	11			
7	Technical data	12			
	PC requirements	12			

# Need help?

Please visit

# www.philips.com/welcome

where you can access a full set of supporting materials such as the user manual, the latest software updates, and answers to frequently asked questions.

# 1 Important safety information

# General maintenance

The translation of this document is for reference only.

In the event of any inconsistency between the English version and the translated version, the English version shall prevail.



#### Caution

- To avoid damage or malfunction:
- · Use only power supplies listed in the user manual.
- Do not expose the product to excessive heat caused by heating equipment or direct sunlight.
- Do not drop the product or allow objects to fall on your player.
- Do not allow the product to be submerged in water. Do not expose headphone socket or battery compartment to water, as water entering the set may cause major damage.
- Active mobile phones in the vicinity may cause interference.
- Back up your files. Ensure that you retain the original files you have downloaded to your device. Philips is not responsible for any loss of data if the product becomes damaged or not readable / legible.
- Manage (transfer, delete, etc.) your music files only with the supplied music software to avoid problems.
- Do not use any cleaning agents containing alcohol, ammonia, benzene, or abrasives as these may harm the product.
- Batteries (battery pack or batteries installed) shall not be exposed to excessive heat such as sunshine, fire or the like.
- Danger of explosion if battery is incorrectly replaced.
   Replace only with the same or equivalent type.

# About operating and storage temperatures

 Operate in a place where temperature is always between 0 and 45°C (32 to 113°F)

- Store in a place where temperature is always between -20 and 45°C (-4 to 113°F).
- Battery life may be shortened in low temperature conditions.

# Replacement parts/accessories:

Visit www.philips.com/support to order replacement parts/accessories.

# Hearing Safety



A pleine puissance, l'écoute prolongée du baladeur peut endommager l'oreille de l'utilisateur.





#### Warning

To prevent possible hearing damage, do not listen at high volume levels for long periods.

The maximum output voltage of the player is not greater than 150 mV.

#### Modifications

Modifications not authorized by the manufacturer may void user's authority to operate the product.

## Copyright information

All other brands and product names are trademarks of their respective companies or organizations.

Unauthorized duplication of any recordings whether downloaded from the Internet or made from audio CDs is a violation of copyright laws and international treaties.

The making of unauthorized copies of copyprotected material, including computer programs, files, broadcasts and sound recordings, may be an infringement of copyrights and constitute a criminal offense. This equipment should not be used for such purposes.

The Windows Media and the Windows logo are registered trademarks of Microsoft Corporation in the United States and/or other countries.

# Be responsible! Respect copyrights.



Philips respects the intellectual property of others, and we ask our users to do the same. Multimedia content on the internet may have been created and/or distributed without the original copyright owner's authorization. Copying or distributing unauthorized content may violate copyright laws in various countries including yours.

Compliance with copyright laws remains your responsibility.

The recording and transfer to the portable player of video streams downloaded to your computer is intended only for use with public domain or properly licensed content. You may only use such content for your private, non-commercial use and shall respect eventual copyright instructions provided by the copyright owner of the work. Such instruction may state that no further copies shall be made. Video streams may include copy protection technology that prohibits further copying. For such situations the recording function will not work and you will be notified with a message.

# Data logging

Philips is committed to improving the quality of your product and enhancing the Philips user experience. To understand the usage profile of this device, this device logs some info / data to the non-volatile memory region of the device. These data are used to identify and detect any failures or problems you as a user may

experience while using the device. The data stored, for example, will be the duration of playback in music mode, duration of playback in turner mode, how many times battery low was encountered, etc. The data stored do not reveal the content or media used on the device or the source of downloads. The data stored on the device are retrieved and used ONLY if the user returns the device to the service center and ONLY to simplify error detection and prevention. The data stored shall be made available to user on user's first request.

# Recycling the product and the built-in battery

Your product is designed and manufactured with high quality materials and components, which can be recycled and reused.

Never dispose of your product with other household waste. Please inform yourself about the local rules on the separate collection of electrical and electronic products and batteries. The correct disposal of these products helps prevent potentially negative consequences on the environment and human health.

Please visit www.recycle.philips.com for additional information on a recycling center in your area.



#### Caution

 Removal of the built-in battery invalidates the warranty and can destroy the product.





### SOUNDDOT

# **Philips**

# Notice for the USA

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Relocate the receiving antenna.
- Increase the separation between equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The set complies with the FCC-Rules, Part-15 and with 21 CFR 1040.10. Operation is subject to the following two conditions:

- This device may not cause harmful interference, and
- This device must accept any interference received, including interference that may cause undesired operation.

### Notice for Canada

This Class B digital apparatus complies with Canadian ICES-003.

# 2 Your new player

# What's in the box

Make sure that you have received the following items:

Player



# Earphones



# Quick start guide



# Safety and Warranty sheet





 The images serve as reference only. Philips reserves the right to change color/design without notice.

# PC software for the player

**SOUNDDOT** can work with the following PC software:

• Philips Device Manager (helps you get firmware updates and recover the player)


# Files loaded on the player

The following files are loaded on **SOUNDDOT**:

- User manual
- Frequently asked questions

# Overview

# **Controls**

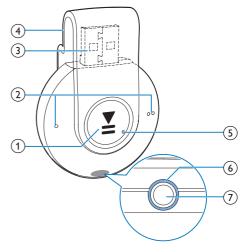

- ▶II
  - Press and hold: Switch the player on or off
  - Press: Pause/ resume play
  - Press twice during play: Switch the random play on or off

# 2 • / • •

- Press: Decrease or increase the volume
- Press and hold: Skip to the previous or next song

- 3 USB connector for power charging and data transfer
- 4 Clip
- (5) RESET
  - Press the hole by using the tip of a ball pen when the player does not respond to the pressing of keys
- (6) LED indicator
- (7)
  - 3.5 mm-headphone connector

# LED indicator and audio feedback

With the LED indicator and/ or audio feedback, you can know the status of the player.




# 3 Get started

# Charge power

**SOUNDDOT** has a built-in battery that can be charged through the USB socket of a computer.

- Rotate the USB connector to connect SOUNDDOT to a PC.
  - → During power charging, the indicator changes its color to denote the battery level.
  - When the battery is full, the green indicator lights up.

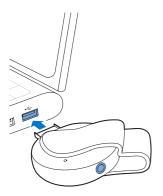



#### Тір

- When the battery level is lower than 15%, the red indicator flashes and two beeps sound.
- Rechargeable batteries have a limited number of charge cycles. Battery life and number of charge cycles vary by use and settings.

# Switch the player on or off

 Press and hold I until the green or red indicator lights up.

- → Power on: The green indicator lights up. Music play starts.
- → Power off: The red indicator lights up. One beep sounds.



# Automatic standby and shut-down

The player has an automatic standby and shutdown feature that can save battery power. After five minutes in idle mode (no play, no button is pressed), the player switches off.

# 4 Play music

# Transfer music to the player



You can transfer music from your PC media library to **SOUNDDOT** in the following ways:

 Drag and drop music files in Windows Explorer.

To drag and drop music files in Windows Explorer,

- 1 Connect **SOUNDDOT** to a PC.
- On the PC, under My Computer or Computer,
  - drag and drop music files from the PC to SOUNDDOT.

# Play music



- Make sure that you have switched on the player (see 'Switch the player on or off' on page 7).
  - → The green indicator lights up. Music play starts.
  - → During music play, the green indicator flashes at intervals.

2 Press ►II to pause or resume play.

# Search for a song

- Press and hold / to skip to the previous or next song.
  - → One beep sounds.

# Change the volume level


- Press / •.
  - → During music play, you hear the change of volume level.

# Switch the random play on or off

- 1 During music play, press ►II twice.
  - → You hear two beeps. The green indicator flashes twice at intervals.
  - → Songs play in random.
- To switch off the random play, press ►II twice again.
  - → You hear one beep. The green indicator flashes once at intervals.
  - → Songs play in sequence.

# 5 Update the firmware through Philips Device Manager

# Install Philips Device Manager

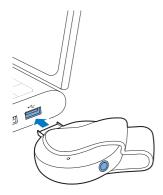

- 1 Connect **SOUNDDOT** to a PC.
- 2 On the PC, select My Computer (Windows XP / Windows 2000) / Computer (Windows Vista / Windows 7 / 8).
- Right click on the Philips GoGear SOUNDDOT icon. Select Install Philips Device Manager.
  - Alternatively, click the Philips GoGear SOUNDDOT icon. Double-click the installer.exe.
- 4 Follow the onscreen instructions to complete the installation of the software.



# Check for firmware updates

- 1 Make sure that you have connected your PC to the Internet.
- 2 Launch Philips Device Manager.
  - → A dialog box is displayed.
- 3 Connect **SOUNDDOT** to your PC.
  - → When the device is connected, "SA4DOTXX" is displayed on the text box.
  - → You can find current firmware version of the device.



- 4 To check for firmware updates,
  - 1 Close the dialog box of Philips Device Manager.
  - 2 At the base of the PC screen, right click and select Check for updates.



→ Philips SA4DOTXX Device Manager checks for updates from the Internet.

# Update the firmware

- When the firmware update is available, follow the onscreen instructions to download and install the firmware.
- 2 Disconnect **SOUNDDOT** from the PC.
  - → **SOUNDDOT** restarts after the firmware is updated and is ready for use again,

# 6 Troubleshooting

If **SOUNDDOT** is not working properly or the display freezes, you can reset it without losing data:

## How do I reset SOUNDDOT?

- Insert a pen tip or other object into the reset hole on SOUNDDOT. Hold until the player shuts down.
- If the reset option is unsuccessful, recover SOUNDDOT through Philips Device Manager:
- 1 On your PC, launch Philips Device Manager.
- 2 Enter the recovery mode:
  - 1) Switch off SOUNDDOT.
  - 2 Press and hold the volume button
     • , and then, connect SOUNDDOT to your PC.
  - (3) Keep holding the button until Philips Device Manager recognizes SOUNDDOT and enters the recovery mode.
- 3 Start the recovery process:
  - 1 On Philips Device Manager, click the Repair button. Follow the onscreen instructions to complete the recovery process.
  - (2) When the recovery is completed, disconnect SOUNDDOT from your PC.
- 4 Restart SOUNDDOT.

# 7 Technical data

#### Power

- Power supply: 110 mAh Li-ion polymer internal rechargeable battery
- Play time
- Audio (.mp3): up to 6 hours
- Fast charging: 6-minute charging for 60-minute play

### Software

 Philips Device Manager: To update the firmware and recover the player

# Connectivity

- Headphone 3.5 mm
- USB 2.0 High speed

#### Sound

- Channel separation: 45 dB
- Frequency Response: 20-18,000 Hz
- Output power: 2 x 2.4 mW
- Signal to noise ratio: > 84 dB

### Audio playback

# Supported formats:

MP3

Bitrate: 8-320 kbps and VBR Sampling rates: 8, 11.025, 16, 22.050, 32, 44.1, 48 kHz

- WMA (unprotected)
   Bitrate: 5-320 kbps
   Sampling rates: 8, 11.025, 16, 22.050, 32, 44.1, 48 kHz
- WAV

# Storage media

Built-in memory capacity<sup>2</sup>:

- SA4DOT02 2 GB NAND Flash
- SA4DOT04 4 GB NAND Flash
- SA4DOT08 8 GB NAND Flash

#### Media transfer<sup>3</sup>

Windows Explorer (drag and drop)

# =

#### Vote

- · Specifications are subject to change without notice.
- I Rechargeable batteries have a limited number of charge cycles. Battery life and number of charge cycles vary by use and settings.
- 2 1 GB = 1 billion bytes; available storage capacity is less. Full memory capacity may not be available as some memory is reserved for the player. Storage capacity is based on 4 minutes per song and 128-kbps MP3 encoding.
- <sup>3</sup>Transfer speed depends on operating system and software configuration.

# PC requirements

- Windows® XP (SP3 or above) / Vista / 7
- Pentium III 800 MHz processor or higher
- 512 MB RAM
- 500 MB hard disk space
- Internet connection
- Windows® Internet Explorer 6.0 or later
- CD-ROM drive
- USB port

