

Philips  
2.1 3D Blu-ray Home  
theater

HDMI ARC  
500W

HTB3270



## Powerful surround sound

experience Blu-ray home theatre sound

Pump up your home entertainment experience with the Philips home theater HTB3270. Exposed speakers drivers offering powerful 500W with double basepipes and immersive 3D Blu-ray Disc playback.

### Great listening experience

- 500W RMS power delivers great sound for movies and music
- Dolby TrueHD digital plus for high fidelity surround sound

### Simply enjoy all your entertainment

- Full HD 3D Blu-ray for a truly immersive 3D movie experience
- HDMI for high definition movies and picture quality
- EasyLink to control all HDMI CEC devices via a single remote
- DivX Plus HD Certified for high definition DivX playback
- Audio in to enjoy music from iPod/iPhone/MP3 player

### Designed to enhance your cinema at home

- Modern design to complement your home environment

# PHILIPS

# Highlights

## 500W RMS power



500W RMS power delivers great sound for movies and music

## Full HD 3D Blu-ray



Be enthralled by 3D movies in your own living room on a Full HD 3D TV. Active 3D uses the latest generation of fast switching displays for real life depth and realism in full 1080x1920 HD resolution. By watching these images through special glasses with right and left lenses that are timed to open and close in synchrony with alternating images, the full HD 3D viewing experience is created in your home cinema. Premium 3D movie releases on Blu-ray offer a wide, high quality selection of content. Blu-ray also delivers uncompressed surround sound for an unbelievably real audio experience.

## EasyLink



EasyLink lets you control multiple devices like DVD players, Blu-ray players, soundbar speaker, Home theater and TV's etc. with one remote. It uses HDMI CEC industry-standard protocol to share functionality between devices through the HDMI cable. With one touch of a button, you can operate all your connected HDMI CEC enabled equipment simultaneously. Functions like standby and play can now be carried out with absolute ease.


## HDMI for HD movies



HDMI is a direct digital connection that can carry digital HD video as well as digital multichannel audio. By eliminating the conversion to analog signals it delivers perfect picture and sound quality, completely free from noise. Movies in standard definition can now be enjoyed in true high definition

resolution - ensuring more details and more true-to-life pictures.

## Audio in

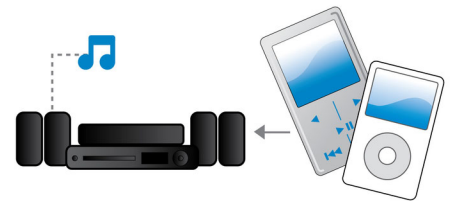

Audio in allows you to easily play your music directly from your iPod/iPhone/iPad, MP3 player, or laptop via a simple connection to your home cinema. Simply connect your audio device to the Audio in jack to enjoy your music with the superior sound quality of the Philips home cinema system.

## Dolby TrueHD digital plus

Dolby TrueHD Digital Plus delivers the finest sound from your home theater. Audio reproduced is virtually indistinguishable from the studio master, so you hear what the creators intended for you to hear. Dolby TrueHD completes your high definition entertainment experience.



# Specifications

## Sound

- Center speaker output power: 166W
- Equalizer settings: Gaming, Movie, Music, News, Original
- Satellite speaker output power: 2 x 166 W
- Sound Enhancement: Night Mode, Auto Volume Leveler, Treble and Bass Control
- Sound System: Dolby Digital Plus, Dolby True HD, DTS 2.0 + Digital out
- Subwoofer output power: 166W
- Total Power RMS @ 30% THD: 500 W

## Loudspeakers

- Loudspeaker types: 2 x Satellite speakers
- Drivers per Satellite speaker: 1 x 3" Full range woofer
- Satellite speaker freq range: 150 - 20k Hz
- Satellite speaker impedance: 4 ohm
- Subwoofer type: Passive
- Subwoofer driver: 1 x 6.5" woofer
- Subwoofer freq range: 20 - 150 Hz
- Subwoofer impedance: 4 ohm

## Connectivity

- Rear Connections: Composite video (CVBS) output, Digital coaxial in, Digital optical in, Easy-Fit Speaker Jacks, Ethernet, HDMI 1.4 output (ARC), Fixed FM Antenna, USB (For VOD/BD-LIVE only)
- Front Connections: Audio in, USB

## Convenience

- EasyLink (HDMI-CEC): Audio Return Channel, Automatic audio input mapping, One touch play, One touch standby, Remote Control-Passthrough, 21:9 format subtitle support, Dynamic Lipsync
- HDMI Features: 3D, Audio Return Channel (ARC), Content Type, Deep color
- Ease of Use: DLNA

## Tuner/Reception/Transmission

- Number of Preset Channels: 40
- Tuner Bands: FM

## Optical Playback Media

- Playable Discs: AVCHD, BD, BD R / BD RE, CD, CDDA, CD-R/CD-RW, DVD, DVD +R/+RW, DVD -R/-RW, SVCD, VCD

## File Format

- Audio: aac, mka, mp3, wma
- Picture: GIF, JPEG, JPG
- Video: avi, divx, mkv, mp4, mpeg, mpg, wmv

## Audio Playback

- Compression format: AAC, MP3, WAV, WMA, Dolby Digital, DTS
- MP3 bit rates: 32 - 320kbps

## Video Playback

- Compression formats: AVCHD, MPEG1, MPEG2, MPEG4, H.264, DivX Plus HD, WMV 9

## Still Picture Playback

- Compression format: GIF, JPEG, JPEG HD, JPEG Progressive, PNG
- Picture Enhancement: Rotate, Zoom

## Picture/Display

- Picture enhancement: HD (720p, 1080i, 1080p/24fps), Progressive scan, Video upscaling

## Power

- Power consumption: 80 W
- Power supply: 220-240V, 50Hz
- Standby power consumption: < 0.5 W

## Sustainability

- Packaging: Electronic User Manual

## Dimensions

- Front Speaker (W x H x D): 90 x 185 x 82 mm
- Front Speaker cable length: 3 m
- Main Unit (W x H x D): 435X56.3X286.5 mm
- Subwoofer (W x H x D): 178 x 300 x 343 mm
- Subwoofer cable length: 3 m
- Front Speaker Weight: 0.53 kg
- Subwoofer Weight: 3.66 kg

## Accessories

- Included accessories: 2 x AAA Batteries, Power cord, Quick start guide, Remote Control, Safety & Legal Leaflet, Trademarks Sheet, World Wide Warranty leaflet, User manual on CD-ROM

## Outer Carton

- EAN: 87 12581 68171 5
- Gross weight: 8.7 kg
- Outer carton (L x W x H): 50.1 x 37.9 x 34 cm
- Nett weight: 7.56 kg
- Number of consumer packagings: 1
- Tare weight: 1.14 kg

## Packaging dimensions

- Packaging dimensions (W x H x D): 50.1 x 34 x 37.9 cm
- EAN: 87 12581 68171 5
- Gross weight: 8.7 kg
- Nett weight: 7.56 kg
- Number of products included: 1
- Packaging type: Carton
- Tare weight: 1.14 kg
- Type of shelf placement: Laying

## Product dimensions

- Product dimensions (W x H x D): 43.5 x 5.8 x 28 cm
- Weight: 2.61 kg



Issue date 2020-05-12

Version: 6.1.13

12 NC: 8670 001 01401  
EAN: 87 12581 68171 5

© 2020 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)

\* DivX, DivX Certified, and associated logos are trademarks of DivXNetworks, Inc. and are used under license.

\* Dolby and the double-D symbol are registered trademarks of Dolby Laboratories Inc.