



Philips
CD Soundmachine

Bluetooth® and NFC

USB Direct
12 W

AZ700T



Enjoy powerful music wirelessly wherever you go

The Philips Portable CD Sound Machine is a powerful sound system that you can take with you everywhere. It frees your music with wireless One-Touch NFC connectivity for effortless Bluetooth pairing. Or play back your tunes on USB, CD and MP3-CD.

Enjoy your music from different sources

- Stream music wirelessly via Bluetooth™ from your smartphone
- USB Direct for MP3 music playback
- Play MP3-CD, CD and CD-R/RW
- More music with Digital FM radio with 20 pre-set stations

Easy to use

- One-Touch with NFC-enabled smartphones for Bluetooth pairing
- Handy remote control for extra convenience
- CD Shuffle/Repeat for personalised music enjoyment
- 20-track CD programmable
- Stereo headphone jack for better personal music enjoyment

Powerful sound you can hear and feel

- Bass Reflex Speaker System delivers a powerful, deeper bass
- Dynamic Bass Boost for deep and dramatic sound

PHILIPS


Highlights

Stream music via Bluetooth™



Bluetooth is a short-range wireless communication technology that is both robust and energy efficient. The technology allows easy wireless connection to an iPod/iPhone/iPad or other Bluetooth devices, such as smartphones, tablets or even laptops. So you can easily and wirelessly enjoy your favourite music, video or game on this speaker.

NFC technology

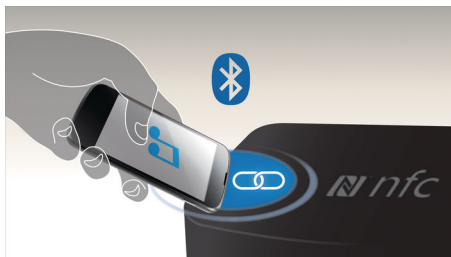

Pair Bluetooth devices easily with one-touch NFC (Near Field Communications)

technology. Just tap the NFC-enabled smartphone or tablet on the NFC area of a speaker to turn the speaker on, start Bluetooth pairing and begin streaming music.

USB Direct for MP3 music

USB Direct for MP3 music playback

Bass Reflex Speaker System



Bass Reflex Speaker System delivers a deep bass experience from a compact loudspeaker box system. It differs from a conventional loudspeaker box system in the addition of a bass pipe that is acoustically aligned to the woofer to optimise the low frequency roll-off of the system. The result is deeper controlled bass and lower distortion. The system works by causing the air mass in the bass pipe to vibrate like a conventional woofer. Combined with the response of the woofer, the system extends the overall low frequency sounds to

create a completely new dimension of deep bass.

Handy remote control



With a handy remote control for greater convenience at your fingertips, all you have to do is sit back and relax.



Specifications

Audio playback

- Playback media: CD, CD-R, CD-RW, MP3-CD
- Disc playback modes: fast forward/reverse, next/previous album search, next/previous track search, repeat/shuffle/programme

Tuner/Reception/Transmission

- Tuner bands: FM
- Antenna: FM antenna

Sound

- Sound system: stereo
- Volume control: rotary (digital)
- Output Power: 12 W max

Loudspeakers

- No. of built-in speakers: 2
- Speaker grille finishing: metal

Connectivity

- USB: USB host
- 3.5 mm headphone jack
- Audio in (3.5 mm)

Convenience

- Display type: LCD display
- Loader type: top

Power

- Battery type: D size (LR20)
- Battery voltage: 1.5 V
- Number of batteries: 6
- Power type: AC/DC adapter

Accessories

- Remote control
- Power cord
- User Manual
- Warranty: Warranty leaflet

Dimensions

- Product dimensions (WxDxH): 435 x 271 x 170 mm
- Packaging dimensions (WxDxH): 469 x 197 x 311 mm
- Product weight: 2.9 kg
- Weight incl. Packaging: 4.11 kg



Issue date 2022-11-27

Version: 5.2.5

12 NC: 8670 001 20353
EAN: 69 51613 99348 4

© 2022 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com