




Philips
Wireless Headphone

Noise Canceling Pro

4 mics for super-clear calls
USB dongle for laptops
One-touch Awareness mode

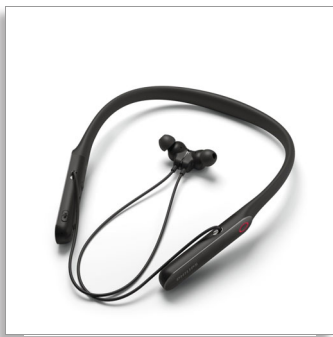

TAN7506BK

Always on

From commute to office to home office, these comfortable wireless headphones are built for business. You get a long battery life, superb call quality, stable connectivity to a computer and phone and noise canceling. Plus great sound.

Built for business

- Always focused. Noise Canceling Pro
- Up to 20 hours play time (15 hours with noise canceling)
- 4 mics for clear calls. Sidetone. Busy lights

Comfortable and convenient

- Slender neckband. IP54 dust and water resistant
- Touch controls. Easy pairing
- USB dongle. Simultaneous connection to phone and laptop
- No tangles. Magnetic earbuds.

The sound you want

- Detailed sound with good bass. 13 mm neodymium drivers
- Custom sound control and more. Philips Headphones app

PHILIPS

Wireless Headphone

Noise Canceling Pro 4 mics for super-clear calls, USB dongle for laptops, One-touch Awareness mode

Specifications

Sound

- Impedance: 16 Ohm
- Speaker diameter: 13 mm
- Sensitivity: 102 dB (1K Hz)
- Frequency range: 20 - 20 000 Hz
- Maximum power input: 3 mW
- Acoustic system: Open
- Driver type: Dynamic
- Hi-Res Audio

ANC features

- ANC (Active Noise Canceling)
- ANC technology: Hybrid, ANC Pro
- Awareness mode
- Adaptive ANC

Telecommunication

- Microphone for call: 4 mics

Connectivity

- Bluetooth version: 5.0
- Supported codec: SBC
- Maximum range: Up to 10 m
- Bluetooth profiles: A2DP, AVRCP, HFP
- Type of wireless transmission: Bluetooth
- Microphone: Built-in microphone
- Wireless

Convenience

- Philips Headphones app support
- Firmware updates possible
- Water resistance: IP54
- Type of controls: Button
- Volume control
- Busy lights
- Magnetic earbuds
- Vibration alerts
- Automatic power off

Design

- Color: Black
- Wearing style: Neckband

Power

- Rechargeable
- Music play time (ANC on): 15 hr
- Music play time (ANC off): 20 hr
- Battery type(Headphones): Lithium Polymer (Built-in)
- Battery capacity(Headphones): 200 mAh
- Battery life standby time: 150 hr (ANC off)

- Talk time: 20 hr
- Charging time: 2 hr
- Number of batteries: 1 pcs
- Battery weight (Total): 4.26 g

Voice assistant

- Voice assistant support
- Voice assistant activation: Manual
- Voice assistant compatible

Accessories

- Charging cable: USB-C cable
- Eartips: 3 pairs (S/M/L)
- Included adapters: USB-C to USB-A convertor, USB dongle
- Others: 1 pcs hard pouch
- Quick Start Guide

Product dimensions

- Product dimensions (W x H x D): 15 x 19 x 2.5 cm
- Weight: 0.07 kg

Packaging dimensions

- Packaging type: Box
- Number of products included: 1
- Type of shelf placement: Hanging
- Packaging dimensions (W x H x D): 17.5 x 23.5 x 4.5 cm
- Gross weight: 0.371 kg
- Nett weight: 0.216 kg
- Tare weight: 0.155 kg
- EAN: 48 95229 11758 7

Outer Carton

- Number of consumer packagings: 24
- Outer carton (L x W x H): 39.6 x 32.9 x 48 cm
- Gross weight: 10.382 kg
- Nett weight: 5.184 kg
- Tare weight: 5.198 kg
- GTIN: 1 48 95229 11758 4

Inner Carton

- Number of consumer packagings: 3
- Inner carton (L x W x H): 18.5 x 15.3 x 22.4 cm
- Gross weight: 1.219 kg
- Nett weight: 0.648 kg
- Tare weight: 0.571 kg
- GTIN: 2 48 95229 11758 1

UPC

- UPC: 8 40063 20207 8

TAN7506BK/00

Highlights

Noise Canceling Pro

Filter out unwanted sounds. You can turn on noise canceling via the neckband controls or the Philips Headphones app. When you need to quickly bring more of the world back in, simply touch and hold the control panel on the right-hand side of the neckband to activate Awareness Mode.

Up to 20 hours play time

No matter what your day holds, these wireless in-ear headphones keep going. Even with noise canceling turned on, you'll get 15 hours of play time. More than enough for every call, podcast, or playlist!

4 mics for clear calls

Four mics guarantee superb call clarity, and sidetone technology lets you hear your own voice for a more natural-sounding conversation. Busy lights let colleagues know you're on a call. Vibrating alerts ensure you won't miss a call coming in, even if the earbuds are around your neck.

IP54 dust/water resistant

Finished a call and need to talk to a colleague? The slender neckband sits comfortably behind your neck, and the magnetic earbuds prevent tangles if you remove them from your ears. IP54 dust and water resistance means these headphones don't mind dust or splashes.

Easy control and pairing

Tap the neckband controls to pause playlists or take calls. Touch and hold the right-hand control panel to activate Awareness Mode. Touch and hold the left panel to wake your phone's voice assistant. These headphones are ready to pair the instant you switch on Bluetooth.

USB dongle

Get a stable connection to your smartphone and laptop-at the same time. Use your headphones to pick up calls on either, and switch between devices as you need. Simply plug the included dongle into your computer's USB-C socket or connect to USB-A sockets via the included adapter.

Detailed sound with good bass

These wireless headphones are Hi-Res Audio Wireless certified. Use a hi-res streaming service and you'll hear every detail of your favorite song, album, or podcast. Perfect for coffee breaks, focusing on a task, or a lunchtime listen!

Philips Headphones app

The Philips Headphones app lets you turn noise cancellation and Awareness Mode on and off. It also features a dedicated equalizer, and you can use the app to control the music you're streaming or access song information.



Issue date 2022-09-01

Version: 5.3.4

12 NC: 8670 001 73896
EAN: 48 95229 11758 7

© 2022 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com