



Cordless phone

- 1.8" display/ white backlight
- Handset speakerphone
- 2 handsets

D2302B/90

Enjoy the view

The Philips D230 Cordless Phone packs HQ Sound and a large, clear display in a sleek, ergonomic design. Enjoy smart privacy modes, great comfort and sound– all in easy handsfree style.

Benefits

Nice and simple

- Easy to read 4.6 cm (1.8") display with white backlight
- Caller ID – so you always know who is calling*
- Freestanding handset with a speaker for easy handsfree calls
- Textured back cover for non-slip grip
- Programmable hot keys for quick dial
- Up to 16 hours talk time on a single charge
- Privacy settings: call block & call barring

Features

4.6cm (1.8") display

Crystal clear sound

- Advanced sound testing & tuning for superb voice quality
- Parametric Equalizer delivers pure and clear sound

Eco-conscious product

- Zero power emission when ECO+ mode is activated

Advanced sound testing

We test the sound quality of our DECT phones the same way as high-end headphone manufacturers do. Using an advanced ear simulator, we can accurately re-create the way people actually hear. This helps our acoustic engineers to measure and fine-tune things like frequency response, distortion and overall hearing perception, to create perfect voice reproduction.

PHILIPS

Caller ID*




Sometimes it is good to know who is calling before you answer. And our Caller ID lets you keep track of who is on the other end of the line.

Handset speakerphone



Handsfree mode uses a built-in loud speaker to amplify the voice of the caller, allowing you to speak and listen during a call without holding the phone to your ear. This is especially useful if you want to share the call with others or simply multitask.

Non-slip grip

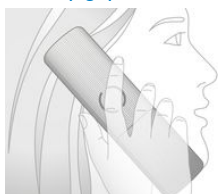

The rear of the handset is treated with a special texture for added comfort and better grip.

Parametric Equalizer



Our telephones use parametric equalization in the digital sound processing to fine-tune the sound response back to the intended linear frequency response curve, delivering sound that is pure and clear, for each conversation.

Programmable hot keys



Now calling the people you care about most is easier than ever. With simple one-touch dialing, you will never have to search for their number again. You can program up to 2 keys for instant calling.

Up to 16 hours talk time



Multiple privacy settings

Value your privacy and quiet at home? Black List restricts specific numbers or those starting with certain digits, protecting you from receiving unwanted calls. You can choose to block up to 4 sets of numbers. Each set can consist of 1 to 24 digits. If the number of an incoming call starts with any of these number sets or are the exact numbers that you chose to blocked, your phone will not ring. With Call Barring, you can avoid the surprise of expensive phone bills by blocking calls to specific numbers starting with certain digits (for example, pay per call numbers).

Eco-conscious product



Philips phones are energy efficient and designed to be respectful to the environment. The emitted radiation is reduced by up to 95% when the phone is charging. With ECO+ mode activation the radiation drops to zero.

Specifications

[field not found 'disclaimer_text']

Convenience

Menu structure in the handset	List Menu	Microphone mute
Speakerphone - talk handsfree	Yes	Missed Calls
Call barring	Restrict the phone from making specific outgoing calls	Received Calls
Signal strength indicator	3-bar indicator	Dialed calls
Battery level indicator	3-bar battery icon	Yes
Intercom - multiple handsets	Yes	Keypad lock
Date / Time display	Yes	Key tone on/off
Programmable hot keys	Key 1 and 2	Auto hang up
Call Management	Call Waiting*	Multi handset capability
	Caller ID*	Up to 4
		Number of keys
		Base Station keys
		Up to 16 hrs talk time
		Charge time: 8 hours
		Line cord length
		Power cord length
		Range
		Open field <300m; indoor <50m

Block callers/ Black-list*	Restrict the phone from ringing on specific incoming numbers		
Non-slip grip	Uniform texture		
Up to 200 hrs standby time	Yes		
Sound			
Volume control on handset	Yes		
Ringtones on handset	10 polyphonic		
HQ-Sound	Yes		
Picture/Display			
Display size	4.6cm / 1.8"		
Display type	1-line dot matrix + 1-line numeric + icons		
Backlight: Yes	Yes		
Backlight color	White		
Memory Capacity			
Phonebook	50 names and numbers		
Redial List Capacity	10 last numbers		
Call log entries	20 entries		
Phonebook store in the base	Yes		
Power			
Battery capacity	500 mAh		
Battery type	AAA NiMH Rechargeable		
Mains power	AC 100-240V ~50/60Hz		
Security			
Transmission encryption : Yes	Yes		
Network Features			
Compatible	GAP		
SAR Value			
Philips handsets	<0.1 W/kg		
Eco Design			
Eco+	Yes		
Packaging dimensions			
Packaging type	Carton		
Number of products included	1		
Type of shelf placement	Laying		
Height	13.5 cm		
Width	18.4 cm		
Depth	8.5 cm		
Gross weight	0.602 kg		
Nett weight	0.506 kg		
Tare weight	0.096 kg		
EAN	48 95185 61143 3		

* *This feature requires additional subscription of Caller ID service. Please check with your local network operator for details.



data subject to change
2018, February 18

Version: 3.0.2
EAN: 4895185611433

© 2018 Koninklijke Philips N.V.
All rights reserved.

Specifications are subject to change without notice. Trademarks are the property of Koninklijke Philips N.V. or their respective owners.

www.philips.com