




Philips  
Docking speaker

for iPod/iPhone

Clock display

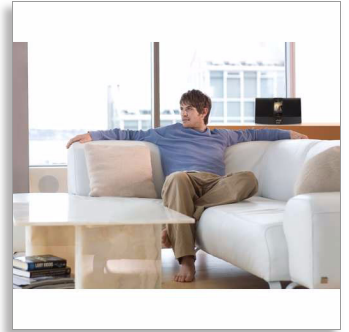

AD712

## Music from your iPod/iPhone

With built-in Bass Reflex speakers, this sleek docking system delivers rich, deep bass and powerful sound. Its smart dock lets you charge your iPod/iPhone without the need to remove its protective casing.

### Rich and clear sound

- Play and charge your iPod/iPhone simultaneously
- Bass Reflex Speaker System delivers a powerful, deeper bass
- 20 W RMS total output power

### Easy to use

- Dock any iPod/iPhone, even in its case
- Auto clock synchronisation with iPod/iPhone when docked
- MP3 Link for portable music playback

**PHILIPS**  
sense and simplicity

Docking speaker  
for iPod/iPhone Clock display

## Highlights

### Play and charge your iPod/iPhone



Enjoy your favourite MP3 music while charging your iPod/iPhone! The dock lets you connect your portable device directly to the Docking entertainment system so you can listen to your favourite music in superb sound. It also charges your iPod/iPhone while it plays so you can enjoy your music and not have to worry about your portable player battery running out. The Docking entertainment system automatically charges your portable device while it is docked.

### Bass Reflex Speaker System



Bass Reflex Speaker System delivers a deep bass experience from a compact loudspeaker box system. It differs from a conventional loudspeaker box system in the addition of a bass pipe that is acoustically aligned to the woofer to optimise the low frequency roll-off of the system. The result is deeper controlled bass and lower distortion. The

system works by causing the air mass in the bass pipe to vibrate like a conventional woofer. Combined with the response of the woofer, the system extends the overall low frequency sounds to create a completely new dimension of deep bass.

### Dock iPod/iPhone in its case



Smartly designed spring-loaded docking port effortlessly accommodates any iPod or iPhone, without special adapters. What's more, it works even when most protective cases are on – just dock your iPod or iPhone as it is. Now you can truly have fuss-free enjoyment of your music.

### Auto clock synchronisation



When connected and docked, this docking system will automatically synchronise the clock with your iPod/iPhone within a few seconds. With this convenient feature, you do not need to set the time manually.

AD712/12

## Specifications

### iPod compatibility

- Compatible with: iPod, iPod classic, iPod mini, iPod nano, iPod nano 1st generation, iPod nano 2nd generation, iPod nano 3rd generation, iPod nano 4th generation, iPod nano 5th generation, iPod nano 6th generation, iPod touch, iPod touch 2nd generation, iPod touch 2nd gen 8/16/32 GB, iPod with colour display, iPod 5th generation

### iPhone compatibility

- Compatible with: iPhone, iPhone 3G, iPhone 3GS, iPhone 4

### Sound

- Sound system: stereo
- Volume control: up/down
- Output Power: 20 W RMS

### Connectivity

- MP3 Link: 3.5 mm stereo line in

### Power

- Power supply: 100 - 240 V AC, 50/60 Hz

### Accessories

- AC/DC Adapter

### Convenience

- Charging device: iPod, iPhone
- Display Enhancements: Brightness Control
- User convenience: Sleep Timer
- Auto time synchronisation

### Dimensions

- Product dimensions (WxDxH): 290 x 158 x 113 mm
- Packaging dimensions (WxDxH): 320 x 206 x 149 mm
- Gross weight: 2 kg
- Weight: 1.5 kg



Made for  
iPod iPhone



Issue date 2012-08-28

Version: 2.0.3

12 NC: 8670 000 84697  
EAN: 87 12581 62571 9

© 2012 Koninklijke Philips Electronics N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips Electronics N.V. or their respective owners.

[www.philips.com](http://www.philips.com)