




Philips
Soundbar speaker

2.1 CH wireless subwoofer

Bluetooth® and NFC
HDMI ARC
200W

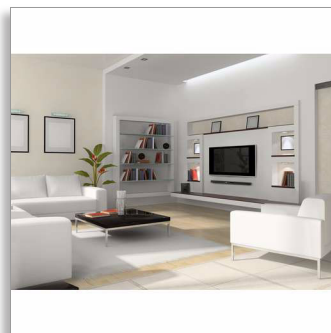

HTL3140B



Powerful sound for any TV

with wireless subwoofer

Unleash the full sound potential of all your media devices and enjoy the freedom of placement provided by the wireless subwoofer. This soundbar works with your TV, discs players, gaming console and MP3 player, which is Bluetooth compatible.

Connect and enjoy all your entertainment

- Works with TVs, BD/DVD players, gaming consoles, MP3 players
- Enjoy MP3/WMA music directly from your portable USB devices
- Audio in to enjoy music from iPod/iPhone/MP3 player
- EasyLink to control all HDMI CEC devices via a single remote
- One-touch with NFC-enabled smartphones for Bluetooth pairing
- Stream music wirelessly via Bluetooth™ from your smartphone

Designed for simplicity

- Low-rise profile for the perfect fit in front of your TV
- Flexible placement on the wall, tabletop or stand

Richer sound for watching TV and movies

- Virtual Surround Sound for a realistic movie experience
- Dolby Digital for ultimate movie experience
- External subwoofer adds thrill to the action
- Twin tweeters for optimum clarity performance


PHILIPS

Soundbar speaker
2.1 CH wireless subwoofer Bluetooth® and NFC, HDMI ARC, 200W

HTL3140B/F7

Highlights

Virtual Surround Sound

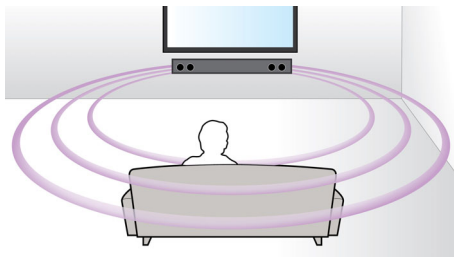


Philips Virtual Surround Sound produces rich and immersive surround sound from less than five-speaker system. Highly advanced spatial algorithms faithfully replicate the sonic characteristics that occur in an ideal 5.1-channel environment. Any high quality stereo source is transformed into true-to-life, multi-channel surround sound. No need to purchase extra speakers, wires or speaker stands to appreciate room-filling sound.

USB



Enjoy MP3/WMA music directly from your portable USB devices

Dolby Digital

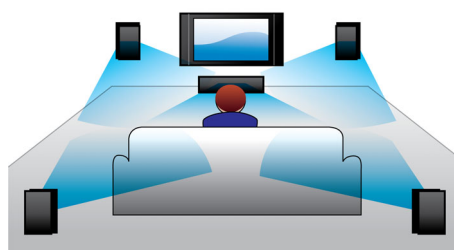

Because Dolby Digital, the world's leading digital multi-channel audio standards, make use of the way the human ear naturally processes sound, you experience superb quality surround sound audio with realistic spatial cues.

Works with multiple devices

Works with TVs, BD/DVD players, gaming consoles, MP3 players

Audio in




Audio in allows you to easily play your music directly from your iPod/iPhone/iPad, MP3 player, or laptop via a simple connection to your Philips home cinema system. Simply connect your audio device to the Audio in jack to enjoy your music with the superior sound quality of the Philips home cinema system.

Low-rise profile

Low-rise profile for the perfect fit in front of your TV

One-touch with NFC

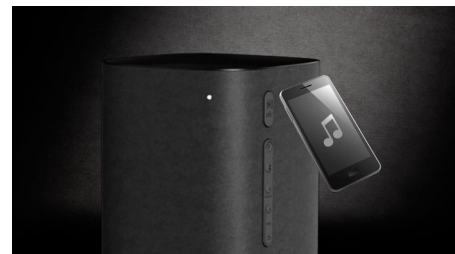

Pair Bluetooth® devices easily with one-touch NFC (Near Field Communications) technology. Just tap the NFC enabled smartphone or tablet on the NFC area of a soundstage to turn the soundstage on, start Bluetooth® pairing, and begin streaming music.

Stream music via Bluetooth™



Bluetooth is a short range wireless communication technology that is both robust and energy-efficient. The technology allows easy wireless connection to iPod/iPhone/iPad or other Bluetooth devices, such as smartphones, tablets or even laptops. So you can enjoy your favorite music, sound from video or game wireless on this speaker easily.



Specifications

Sound

- Sound Enhancement: Treble and Bass Control, Virtual Surround Sound, Night Mode
- Sound System: Dolby Digital
- Speaker output power: 2 x 30 W
- Subwoofer output power: 140W
- Total Power RMS @ 10% THD: 200 W

Loudspeakers

- Loudspeaker types: Integrated with main unit
- Speaker Drivers per side: 1 Mylar tweeter, 1 woofer
- Speaker Impedance: 8 ohm
- Subwoofer driver: 1 x 5.25" woofer
- Subwoofer freq range: 45-200 Hz
- Subwoofer impedance: 3 ohm
- Subwoofer type: Wireless subwoofer
- Tweeter Impedance: 16 ohm

Connectivity

- iPod/iPhone: via 3.5mm Audio In, via bluetooth
- Rear Connections: AUX in, Digital coaxial in, Digital optical in, HDMI 1.4 output (ARC)
- Integrated Connections: Bluetooth, NFC
- Top connections: Audio In (3.5mm), USB 2.0

Design

- Wall mountable

Power

- Power consumption: 35 W
- Power supply: 50/60 Hz, 110-240V
- Standby power consumption: < 0.5 W

Sustainability

- Packaging: 80% recycled corrugated board, Soya based ink

Dimensions

- Main Unit (W x H x D): 843 x 52 x 60 mm
- Main Unit Weight: 1.4 kg
- Packaging (W x H x D): 790 x 285 x 300 mm
- Weight incl. Packaging: 8.2 kg
- Subwoofer (W x H x D): 226 x 251 x 306 mm
- Subwoofer Weight: 4.14 kg

Accessories

- Included accessories: AAA Battery (x1), Quick start guide, Remote Control, Safety & Legal Leaflet, Trademarks Sheet, 2 x Power cords, AC Adapter

Convenience

- EasyLink (HDMI-CEC): Audio Return Channel, Automatic audio input mapping, One touch play, One touch standby, Remote Control-Passthrough, System standby
- HDMI Features: Audio Return Channel (ARC), Content Type



Issue date 2016-04-17

Version: 5.2.1

12 NC: 8670 001 12212
UPC: 6 09585 24139 8

© 2016 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com