

PHILIPS



Over-ear wireless
headphones

Fidelio

Noise Cancellation Pro+

Natural, balanced sound

Premium leather design

38 hours of play time



L3

Get inside the music. Anywhere.

What if you could always be in the perfect place to listen to the music you love? Exquisitely tuned drivers, excellent Active Noise Cancelling and the right fit combine to create the perfect listening environment. Wherever you are.

Detailed sound, no distractions

- Philips Fidelio. Engineered for exceptional performance
- 40 mm drivers. Natural, balanced sound
- State-of-the-art hybrid Active Noise Cancelling

Seamless in every way

- Touch controls. 38 hours play time (32 hours with ANC)*
- Connect to any source. Wireless or wired
- IR sensor. Music pauses when you take the headphones off
- Philips Headphones app. Customise your experience
- One-touch pairing. Google Fast Pair*

Quality in every detail

- Crafted for listening. Premium design
- Memory foam ear-cup cushions. Always a perfect fit
- Sumptuous Muirhead leather. Responsibly sourced
- Dual mics for crystal-clear calls. On-board voice control

Highlights

Philips Fidelio



From the sound to the materials, these over-ear closed-back wireless headphones are crafted to bring you deep into the music. No matter what size or shape your head is, the soft memory-foam ear-cup cushions fit closely and the music pauses if you take the headphones off.

Natural, balanced sound



The perfectly tuned drivers in these Hi-Res Audio certified headphones deliver beautifully balanced sound - whether ANC is turned on or off. Bass is tight and impactful without being overpowering. Midrange frequencies are full and smooth. High frequencies sparkle with detail.

Hybrid Active Noise Cancelling



Listen at the perfect volume - wherever you are. Adaptive noise cancelling uses one external mic and one internal mic to filter out unwanted sounds, leaving you free to immerse. Awareness Mode lets you bring the world back in when you need to.

Crystal-clear calls




Two mics in each ear cup focus on the sound of your voice, dramatically reducing noise from the world around you. The fully integrated Google Assistant and Alexa are there to help you pull up your favourite playlists as soon as you ask.

Touch controls



A full charge gives you more than a day of music and a speedy 15 minute charge gives you 6 hours play time. There are touch controls for music and calls and buttons for ANC on the ear cups, which also fold flat for easy storage.

Crafted for listening

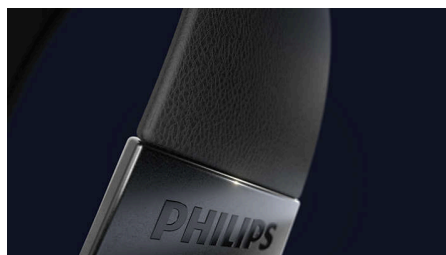


Lightweight aluminium and responsibly sourced Muirhead leather ensure that these wireless headphones feel as premium as the sound. The aluminium of the ear-cup rings is in matte dark satin, with embossed Philips Fidelio branding. The music pauses automatically when you take the headphones off.

Philips Headphones app.



The Philips Headphones app lets you adjust the level of noise cancellation by switching between preset ANC modes. It also features a dedicated equaliser, and you can use the app to control the music you're streaming or access song information.

Google Fast Pair*

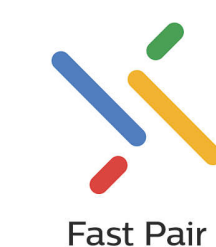

Google Fast Pair lets you pair your headphones to a compatible Android device with a single tap. When the headphones are placed near your Android device, you are automatically asked if you want to connect.

Connect to any source



Solid Bluetooth connectivity, with AAC support for iOS devices and aptX HD for Android or Windows, ensures the best possible sound when streaming. The detachable cable lets you plug into high resolution equipment for wired listening.



Qualcomm
aptX



Fast Pair



Qualcomm
aptX HD

Specifications

Sound

Frequency range: 7 - 40,000 Hz

Speaker diameter: 40 mm

Impedance: 16 Ohm

Maximum power input: 20 mW

Sensitivity: 103 dB (1k Hz)

Driver type: Dynamic

Hi-Res Audio

Connectivity

Bluetooth version: 5.1

Wireless

Bluetooth profiles: A2DP, AVRCP, HFP

Detachable cable

Maximum range: Up to 10 m

Multipoint connection

Supported codec: AAC, SBC, aptx, aptx-HD

Type of wireless transmission: Bluetooth

Headphone socket: 2.5 mm

Outer Carton

Length: 25.4 cm

Number of consumer packages: 3

Width: 22.8 cm

Gross weight: 3.655 kg

Height: 26 cm

GTIN: 1 48 95229 10839 1

Net weight: 1.161 kg

Tare weight: 2.494 kg

Convenience

Automatic power off

Volume control

Philips Headphones app support

Google Fast Pair

Auto pause (IR sensor)

Firmware updates possible

Type of controls: Touch

Power

Rechargeable

Number of batteries: 3 pcs

Talk time: 38 hr

Charging time: 2 hour(s)

Music play time (ANC on): 32 hour(s)

Music play time (ANC off): 38 hour(s)

Fast charging time: 15 mins for 6 hrs

Battery weight (Total): 10.1 g

Battery capacity (Headphones): 800 mAh

Battery type (Headphones): Lithium Polymer (built-in)

Packaging dimensions

Height: 21.67 cm

Packaging type: Box

Type of shelf placement: Hanging

Width: 20.9 cm

Depth: 7.69 cm

Number of products included: 1

EAN: 48 95229 10839 4

Gross weight: 1.068 kg

Net weight: 0.387 kg

Tare weight: 0.681 kg

Product dimensions

Height: 20.35 cm

Width: 19 cm

Depth: 5.15 cm

Weight: 0.36 kg

Accessories

Others: 1 pcs hard carrying case

Audio cable: 2.5-3.5 mm stereo cable, L=1.2 m

Quick Start Guide

Charging cable: USB-C cable, 500 mm

Included adapters: Aeroplane adapter

Design

Colour: Black

Wearing style: Headband

Foldable design: Flat

Ear coupling material: Synthetic leather

Ear fitting: Over-ear

Earcup type: Closed-back

Telecommunication

Microphone for call: 2 mics

ENC microphone

UPC

UPC: 8 40063 20164 4

ANC features

ANC technology: Hybrid, ANC Pro+

Awareness mode

Adaptive ANC

Microphone for ANC: 4 mic

ANC (Active Noise Cancelling)

Voice assistant

Voice assistant compatible: Apple Siri, Google Assistant

Voice assistant activation: Manual

Voice assistant support

