



Philips  
Portable DVD Player

17.8 cm (7") LCD



PD704



## Spill resistant portable DVD

with durable rubber design

Indulge in entertainment wherever you go. The portable PD704 DVD player's spill resistant design makes it perfect for kids, letting them enjoy favorites without worry about spillage from drinks. It also includes 20 fun games.

### Play your movies, music and photos on the go

- DVD, DVD+/-R, DVD+/-RW, (S)VCD, CD compatible
- MP3-CD, CD and CD-RW playback
- View JPEG images from picture disc

### Spill resistant design

- Easy clean rubber surface
- Protect your device from spilled water

### Game-ready for extra fun

- 17.8 cm (7") TFT color LCD display for high quality viewing
- Games CD provided for instant fun

### Extra touches for your convenience

- Car adaptor included
- Up to 2-hour playback with rechargeable built-in battery\*
- Full Resume on Power Loss

# PHILIPS

Portable DVD Player  
17.8 cm (7") LCD

PD704/37

# Highlights

## MP3-CD, CD and CD-RW playback




MP3 is a revolutionary compression technology by which large digital music files can be made up to 10 times smaller without radically degrading their audio quality. A single CD can store up to 10 hours of music.

## View JPEG from picture disc



Play JPEG photos that are saved on your disc. Relive your favorite moments with family and friends anytime you want!

## DVD, DVD+/-RW, (S)VCD, CD

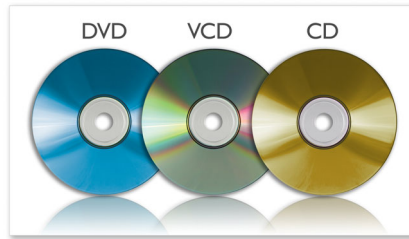

The Philips Portable DVD player is compatible with most DVD and CD discs available in the market. DVD, DVD+/-R, DVD+/-RW, (S)VCD, and CD – all of them can play on the DVD player. DVD+/-R is a shorthand term for a DVD drive that can accept both of the common recordable DVD formats. Likewise, DVD+/-RW handles both common rewritable disc types.

## Power Resume

The DVD-Video player remembers where you stop watching last time when it is powered off directly or when the power supply discontinued. If you did not switch to play another disc, your player will resume play where you have stopped the movie last time just by reloading the disc. Making your life a lot easier!

## 18 cm/7" TFT color LCD display



The high resolution color LCD display brings images to life, showing off your treasured photos, favorite movies and music with the same 'real life' rich detail and vibrant colors as high quality prints.

## Games CD

This player comes pre-packed with a bonus games CD for extra fun. Just put a game CD in the disk drive and start having added enjoyment on the go.

## Spill resistant design

The device is built to resist accidental spillages. The spill-proof design with its rubber surface prevents liquids from damaging electrical or mechanical components, and it is easy to clean.



# Specifications

## Picture/Display

- Diagonal screen size: 7 inch / 18 cm
- Resolution: 480(w)x234(H)x3(RGB)
- Display screen type: LCD TFT

## Sound

- Output Power: 250mW RMS(built-in speakers)
- Output power (RMS): 5mW RMS(earphone)
- Signal to noise ratio: >80dB(line out), >76dB(earphone), >62dB(built-in speakers)

## Video Playback

- Playback Media: DVD, Picture CD, SVCD, Video CD, DVD-R/-RW, MP3-CD, CD-R/CD-RW, DVD+R/+RW, CD
- Disc Playback Modes: Disc Menu, Fast Backward, Fast Forward, OSD, Repeat, Shuffle Play, Zoom, Resume Playback from Stop
- Video disc playback system: PAL, NTSC

## Audio Playback

- MP3 bit rates: 32 - 320 kbps
- Compression format: Dolby Digital, MP3
- Playback Media: CD, CD-RW, MP3-CD, CD-R
- File systems supported: ISO-9660, Joliet

## Connectivity

- DC in: 9V, 0.8A
- Headphone jack: 3.5mm Stereo Headphone
- AV output: Composite (CVBS) x1

## Convenience

- Battery charging indication
- Shock proof
- Waterproof standard: IPX4

## Accessories

- AC/DC Adaptor: DC 9V, 0.8A, 110-240v, 50/60Hz
- User Manual: English / French / Spanish
- Car kit: cigarette outlet adaptor, 12vDC

## Power

- Battery Type: Built-in battery
- Battery lifetime: Up to 2hrs\*

## Outer Carton

- Gross weight: 9.061 lb
- Gross weight: 4.11 kg
- GTIN: 1 06 09585 22429 9
- Outer carton (L x W x H): 28 x 24.5 x 26 cm
- Outer carton (L x W x H): 11.0 x 9.6 x 10.2 inch
- Nett weight: 6.878 lb
- Nett weight: 3.12 kg
- Number of consumer packagings: 3
- Tare weight: 2.183 lb
- Tare weight: 0.99 kg

## Packaging dimensions

- Packaging dimensions (W x H x D): 26.2 x 24.2 x 7.4 cm
- Packaging dimensions (W x H x D): 10.3 x 9.5 x 2.9 inch
- Gross weight: 2.888 lb
- Gross weight: 1.31 kg
- Nett weight: 2.293 lb
- Nett weight: 1.04 kg
- Number of products included: 1
- Packaging type: Carton
- Tare weight: 0.595 lb
- Tare weight: 0.27 kg
- UPC: 6 09585 22429 2
- Type of shelf placement: Laying



Issue date 2017-04-05

Version: 1.1.3

12 NC: 8670 000 88222  
UPC: 6 09585 22429 2

© 2017 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)

\* Rechargeable batteries have a limited number of charge cycles and may eventually need to be replaced. Battery life and number of charge cycles vary by use and settings.  
\* Battery life varies by use and settings.  
\* Battery life of playtime is approximate and may vary depending on application condition. To optimize battery life, user should turn LCD backlight to minimum, connect to headphones (not built-in speakers) and listen at medium volume level, and use the product at room temperature.