




Philips Perfect sound  
Cordless phone with  
answering machine

## 2000-series

Brilliant pearl

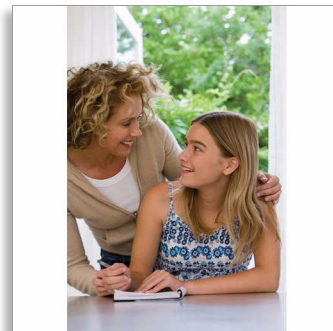

CD2751S

# More than words

for unbelievable sound quality

Enjoy unbelievable sound quality with the XHD sound technology while talking to your family and friends. You will hardly want to end the call.

### Experience unbelievable sound quality

- XHD sound
- Handset speakerphone allows you to talk hands-free

### Benefit from pure convenience

- 2-line amber backlit display
- 12 hours talk time
- 100-name phonebook

### Never miss a message

- Direct access answering machine on base and via handset
- 30 minutes recording time and message indicator on base

### Save energy

- EcoMode: reduced transmission power between handset and base
- Low power consumption < 0.65 W



asimpleswitch.com



asimpleswitch.com

# PHILIPS

sense and simplicity

# Specifications

## Picture/Display

- Backlight
- Backlight colour: Amber
- Display colours: Black and White
- Lines of text: 1
- Main Display Type: Dot matrix

## Sound

- Sound Enhancement: XHD sound
- Handset ringers: Polyphonic

## Convenience

- Alarms: Alarm Clock
- Base station keys
- Battery charging indication
- Call Management: Call Waiting, Caller ID
- Ease of Use: Hands-free mode
- Multi-base capability: 1
- Multi-handset capability: Up to 5
- Signal strength indication
- Backlit keypad
- Speakerphone — talk hands-free

## Network Features

- Antenna: Integrated on base
- Compatible: GAP
- Dialling: Tone, Pulse

## Operator Requirements

- Name and Caller ID

## Answering Machine

- Plug and Play Answering machine
- Recording time capacity: 30 min.

## Memory Capacity

- Call log entries: 20 entries
- Phonebook: 100 entries
- Redial List Capacity: 5

## Dimensions

- Base dimensions: 79.5 x 102.0 x 108.4 (H x D x W)
- Handset dimensions: 164.5 x 27.5 x 46.1 (H x D x W)

## Power

- Battery capacity: 550 mAh
- Battery type: AAA
- Kind of Battery: Rechargeable
- Mains power: AC 100-240 V~50/60 Hz
- Number of batteries: 2
- Standby time: 150
- Talk time: 12

# Highlights

## EcoMode: reduced transmission



Since the base station recognises when the handset is docked on its base, an intelligent embedded system ensures transmitted power is permanently controlled and optimised according to the distance between handset and base unit. It means power emission is automatically reduced by up to 93% when the handset is near its base. When used in Eco Mode, you'll also enjoy a 60% manual reduction of emitted power.

## XHD sound



No matter where you are, you can have a phone conversation that is free from noise, with incredible loudness and sound purity in the voice. Thanks to a high-quality speaker, sophisticated technology and to a real acoustic chamber, you can enjoy the unbelievable sound quality in every phone conversation.

