

Philips
SoundBar DVD home
theater

HSB2351



Bring your movie to life

with integrated subwoofer

Bring your movies to life with great surround sound. With 100w of sound power, a built-in DVD player, HDMI 1080p upscaling and integrated subwoofer, you can now enjoy your movies in high quality sound and picture, without the clutter!

Connect and enjoy all your entertainment

- HDMI 1080p upscales to high definition for sharper pictures
- EasyLink controls all EasyLink products with a single remote

Great listening experience

- Dolby Virtual Speaker for realistic surround sound

Connect and enjoy multiple sources

- Hi-Speed USB 2.0 Link plays video/music from USB flash drive
- Built-in FM tuner


Designed to enhance your living space

- SoundBar design with optimal fit for 32" flat TV or larger
- Integrated subwoofer for an enhanced bass experience
- Flexible placement on the wall or tabletop

PHILIPS

Highlights

Dolby Virtual Speaker

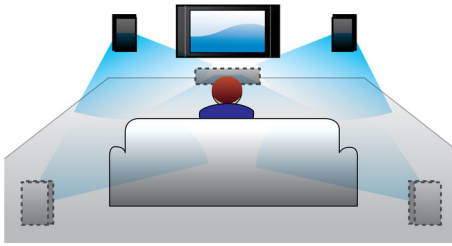

Dolby Virtual Speaker is a sophisticated audio virtualization technology that produces rich and immersive surround sound from a two-speaker system. Highly advanced spatial algorithms faithfully replicate the sonic characteristics that occur in an ideal 5.1-channel environment. DVD playback is enhanced by expanding the 2-channel environment. When combined with Dolby Pro Logic II processing, any high quality stereo source is transformed into true-to-life, multi-channel surround sound. No need to purchase extra speakers, wires or speaker stands to appreciate room-filling sound.

EasyLink



EasyLink lets you control multiple devices with one remote. It uses HDMI CEC industry-standard protocol to share functionality between devices through the HDMI cable. With one touch of a button, you can operate all your connected HDMI CEC enabled equipment simultaneously. Functions like standby and play can now be carried out with absolute ease.


DIVXTM ULTRA **easy LINK**

HDMI 1080p



HDMI 1080p upscaling delivers images that are crystal clear. Movies in standard definition can now be enjoyed in true high definition resolution - ensuring more details and more true-to-life pictures. Progressive Scan (represented by "p" in "1080p") eliminates the line structure prevalent on TV screens, again ensuring relentlessly sharp images. To top it off, HDMI makes a direct digital connection that can carry uncompressed digital HD video as well as digital multichannel audio, without conversions to analog - delivering perfect picture and sound quality, completely free from noise.

Hi-Speed USB 2.0 Link

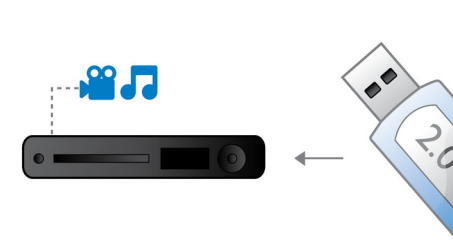

The Universal Serial Bus or USB is a protocol standard that is conveniently used to link PCs, peripherals and consumer electronic equipment. Hi-Speed USB devices have a data transfer rate of up to 480 Mbps - up from the 12 Mbps in original USB ones. With Hi-Speed USB 2.0 Link, all you have to do is plug in your USB device, select the movie, music or photo and play away.

Specifications

Picture/Display

- Picture enhancement: High Def (720p, 1080i, 1080p)

Sound

- Output power (RMS): 100
- Sound System: Dolby Digital, Dolby Prologic II, DTS, Stereo
- Equalizer settings: Action, Classic, Concert, Drama, Gaming, Jazz, News, Party, Rock, Sports

Video Playback

- Compression formats: DivX 3.11, DivX 4.x, DivX 5.x, DivX 6.0, DivX Ultra, MPEG1, MPEG2
- Playback Media: CD-R/CD-RW, DVD+R/+RW, DVD-R/-RW, DVD-Video, Video CD/SVCD
- Video disc playback system: NTSC, PAL

Audio Playback

- Compression format: MP3, WMA
- MP3 bit rates: 32-256 kbps and VBR
- Playback Media: CD-R/RW, USB flash drive, Audio CD

Still Picture Playback

- Picture Compression Format: JPEG
- Picture Enhancement: Rotate, Slideshow with music playback, Zoom
- Playback Media: CD-R/RW, DVD+R/+RW, USB flash drive

Tuner/Reception/Transmission

- Tuner Bands: FM

Connectivity

- Front / Side connections: MP3 Line-in, USB
- Rear Connections: Component Video output, Easy-Fit speaker connectors, HDMI output, TV in (audio, cinch)

Power

- Power supply: 100-240VAC, 50/60Hz

Loudspeakers

- Speaker Impedance: 6 ohm

Accessories

- Included Accessories: Batteries for remote control, FM antenna, Power cord, Quick start guide, Remote Control, User Manual, World Wide Warranty leaflet

Dimensions

- Set dimensions (W x H x D): 800 x 140 x 97 mm

Packaging dimensions

- Packaging type: Carton
- Number of products included: 1
- Packaging dimensions (W x H x D): 56.5 x 39.5 x 14.5 cm
- Gross weight: 5.5 kg
- Nett weight: 3.8 kg
- Tare weight: 1.7 kg
- EAN: 87 12581 45802 7

Outer Carton

- Number of consumer packagings: 1
- Outer carton (L x W x H): 56.5 x 39.5 x 14.5 cm
- Gross weight: 5.5 kg
- Nett weight: 3.8 kg
- Tare weight: 1.7 kg
- EAN: 87 12581 45802 7



Issue date 2021-08-16

Version: 2.0.3

12 NC: 8670 000 48556
EAN: 87 12581 45802 7

© 2021 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com