

Philips 3000 series  
DVD player



DVP3650

## Enjoy it all - from DVD

Does size matter? Ever heard of less is more? Introducing the best value DVD player. No complications! Just a simple set that plays practically any disc format, including your digital photos with absolutely no compromise to picture quality.

### Bring audio and video to life

- 12-bit/108MHz video processing for sharp and natural images
- 192kHz/24 bit audio DAC enhances analogue sound input

### Play all your movies and music

- ProReader Drive for smooth playback on virtually any disc
- Plays CD, (S)VCD, DVD, DVD+R/RW, DVD-R/RW
- Plays MP3, WMA and JPEG digital camera photos

### Fits any space, any lifestyle

- Ultra-slim design that fits anywhere

### Connect and enjoy multiple sources

- USB Media Link for media playback from USB flash drives

### Easy to use

- One-touch MP3 creation directly from CDs onto USB sticks

# PHILIPS


# Highlights

## ProReader Drive




ProReader Drive lets you enjoy your movies and videos worry-free. Even when old discs get smudgy or scratched, you can rest assured that they will play right through from start to end - without any sign that they have been damaged. Using state-of-the-art technology, ProReader Drive converts weak analog signals into robust digital ones, extracting information that allows less-than-perfect discs to play smoothly through. Together with its ability to read virtually any video format, ProReader Drive gives you the unbeatable assurance that whatever you pop in will most definitely play.

## 12-bit/108MHz video processing

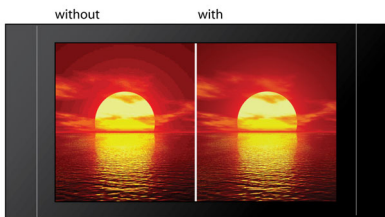

12-bit Video DAC is a superior Digital-to-Analogue-Converter that preserves every detail of the authentic picture quality. It shows subtle shades and smoother graduation of colors, resulting in a more vibrant and natural picture. The limitation of the usual 10bit DAC become in particular apparent while using large screens and projectors.

## 192kHz/24 bit audio DAC

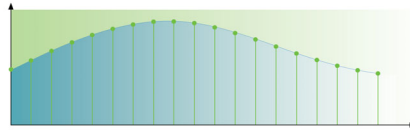


192KHz sampling enables you to have an accurate representation of the original sound curves. Together with a 24-bit resolution, more information is captured from the original analogue sound wave form, giving a much richer audio reproduction.

## Ultra-slim design



Ultra-slim design that fits anywhere

## Plays it all

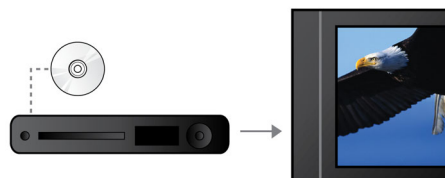

Play virtually any disc you want - whether they be CDs, (S)VCDs, DVDs, DVD+R, DVD-R, DVD+RW or DVD-RW. Experience

unbeatable flexibility and the convenience of playing all your discs on one device.

## Plays it all

Play MP3s, WMA and JPEGs, and experience the convenience of sharing media files on your TV or home theater system - in the comfort of your living room.

## One-touch MP3 creation



Convert the contents of your favorite CDs to MP3 files on your Philips product, and store it directly on a thumbdrive or on your portable media player through a USB cable. Enjoy the convenience of creating MP3 files right in your living room, without a PC, and even while the CD is playing.

## USB Media Link



The Universal Serial Bus or USB is a protocol standard that is conveniently used to link PCs, peripherals and consumer electronic equipment. With USB Media Link, all you have to do is plug in your USB device, select the movie, music or photo and play away.



# Specifications

## Picture/Display

- D/A converter: 12 bit, 108 MHz
- Picture enhancement: Progressive scan, Video upsampling

## Sound

- D/A converter: 24 bit, 192 kHz
- Frequency response: 30-20000 Hz
- Signal to noise ratio: 100
- Distortion and Noise (1kHz): 85 dB
- Crosstalk (1kHz): 100 dB
- Dynamic Range (1kHz): 90 dB
- Sound System: Dolby Digital

## Video Playback

- Playback Media: CD, CD-R/CD-RW, Video CD/SVCD, DVD, DVD-R/-RW, DVD+R/+RW, DVD-Video, DivX
- Compression formats: MPEG1, MPEG2, DivX 3.11, DivX 4.x, DivX 5.x, DivX 6.0
- Video disc playback system: PAL, NTSC

## Audio Playback

- Playback Media: CD, MP3-CD, WMA-CD, CD-R/RW, Audio CD, MP3-DVD
- MP3 bit rates: 32 - 320 kbps
- Compression format: Dolby Digital, MP3, WMA, PCM

## Still Picture Playback

- Playback Media: DVD-R/-RW, DVD+R/+RW, CD-R/RW, Picture CD, Kodak Picture CD
- Picture Compression Format: JPEG
- Picture Enhancement: Flip photos, Rotate,

Slideshow, Zoom, Slideshow with MP3 playback

## Multimedia Applications

- Playback Formats: JPEG Still pictures, MP3, DivX
- Multimedia connections: USB memory class device

## Connectivity

- Rear Connections: Analog audio Left/Right out, Composite video (CVBS) output, Digital coaxial out, Component Video out Progressive
- Front / Side connections: USB

## Convenience

- Child Protection: Parental Control, Child Lock
- On-Screen Display languages: English, Simplified Chinese

## Power

- Power consumption: < 10 W
- Standby power consumption: < 0.5 W
- Power supply: 110-240V, 50/60 Hz

## Accessories

- Included accessories: Remote Control, World Wide Warranty leaflet, User Manual, Audio/Video cable, 1 x AAA Battery, Quick start guide

## Dimensions

- Set dimensions (W x H x D): 310 x 39 x 209 mm
- Packaging dimensions (W x H x D): 360 x 80 x 282 mm
- Set weight: 1.3 kg
- Weight incl. Packaging: 1.8 kg



Issue date 2017-04-04

Version: 1.3.4

12 NC: 8670 000 88607  
EAN: 87 12581 63986 0

© 2017 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)