

wireless portable speaker

- Bluetooth® and NFC
- Splash-proof
- Rechargeable battery
- Camouflage

BT6000C/10

Small is Great

Big sound 360° around

Chuck the speaker down any way you like, vertical or horizontal. 360° sound means you get big sound all around, every time. Splash-proof, rugged and equipped with wireless music streaming it brings warm, natural sound wherever you go.

Benefits

Sound that blows you away

- Two speaker drivers & passive radiators give immersive sound
- Digital Sound Processing for lifelike sound without distortion
- 14 W RMS total output power

Advanced versatility

- Wireless music streaming via Bluetooth
- One-Touch with NFC-enabled smartphones for Bluetooth pairing
- Built-in microphone for hands-free phone calls

- Audio-in for easy portable music playback


Designed to go places

- Splash-proof design ideal for outdoor use (IPX4)
- Built-in rechargeable Li-ion battery for playback anywhere
- Carrying pouch included

PHILIPS

Features

Wireless music streaming

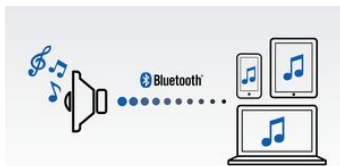

Bluetooth is a short range wireless communication technology that is both robust and energy-efficient. The technology allows easy wireless connection to iPod/iPhone/iPad or other Bluetooth devices, such as smartphones, tablets or even laptops. So you can enjoy your favourite music and sound from videos or games wirelessly.

Twin speaker drivers



Twin 1.5" Neodymium speaker drivers deliver natural, clear and balanced sound while dual opposing passive radiators extend and boost bass. Front and back full-range speaker drivers create even 360-degree sound, offering the freedom to enjoy the same quality sound wherever the speaker is facing.

Digital Sound Processing



Advanced sound processing technology enhances the reproduction of your music so that each note resonates with crystal-clear accuracy, and each pause

is sealed with pristine silence. Philips' proprietary Digital Sound Processing technology optimises the performance of compact speaker boxes, delivering sound that is clear, detailed and powerful without any distortion.

NFC technology



Pair Bluetooth devices easily with one-touch NFC (Near Field Communications) technology. Just tap the NFC-enabled smartphone or tablet on the NFC area of a speaker to turn the speaker on, start Bluetooth pairing and begin streaming music.

Built-in microphone

With its built-in microphone, this speaker also works as a speaker phone. When a call comes in, the music is put on pause and you can talk via the speaker. Call for a business meeting. Or, call your friend from a party. Either way, it works great.

AUDIO-IN (3.5 mm)



Make one easy connection and enjoy all your music from portable devices and computers. Simply plug your device into the AUDIO-IN (3.5 mm) port on your Philips set. With computers, the connection is typically made from the headset output. Once linked, you can enjoy your entire music collection directly, on a set of superior speakers. Philips simply delivers better sound.

Specifications

Please note that this is a pre-sales leaflet. The contents of this leaflet reflect the best of our knowledge per date and country mentioned above. The contents of this leaflet are subject to change without notice. Philips does not accept any liability as to the contents of this leaflet.

Accessories

Included	Carrying pouch USB adapter USB charging cable Quick start guide Warranty certificate Worldwide warranty leaflet
----------	--

Design and finishing

Colour	Green
--------	-------

Compatibility

works with	most Bluetooth smartphones tablets music devices
iPad	iPad 1 iPad 2 new iPad iPad with Retina display iPad Air iPad Air 2 iPad mini 2 iPad mini 3 iPad mini
iPhone	iPhone 3 iPhone 3GS

	iPhone 4 iPhone 4S iPhone 5 iPhone 5C iPhone 5S iPhone 6 iPhone 6 Plus 3rd generation or later with Android 2.1 and Bluetooth 2.1 or above with Bluetooth 2.1 or above
iPod touch	
Android tablets and smartphones	
other music devices	

Sound

Output power (RMS)	2 x 7 W
Sound System	Stereo
Speakers	2 x 1.5"
Volume Control	rotary

Loudspeakers

Speaker drivers	Neodymium magnet system
-----------------	-------------------------

Connectivity

NFC	Tap-to-pair Bluetooth; works with Android 4.0 or above, and Windows phone 8 or above
-----	--

Bluetooth profiles	A2DP AVRCP HFP
Bluetooth range	Line of sight, 10 m or 30 ft
Audio in (3.5 mm)	Yes

Convenience

Water resistance	IPX4
Built-in microphone	for speaker conference

Power

Battery type	Lithium-ion (built-in)
Operating time on battery	8 hr

Power supply	5V, 2A (USB adapter)
--------------	----------------------

Dimensions

Product dimensions (WxDxH)	188 x 71 x 70 mm
Packaging dimensions (WxDxH)	282 x 105 x 108 mm
Product weight	0.49 kg
Weight incl. Packaging	0.79 kg



data subject to change
2019, April 27

Version: 1.0.5
EAN: 4895185613482

© 2019 Koninklijke Philips N.V.
All rights reserved.

Specifications are subject to change without notice. Trademarks are the property of Koninklijke Philips N.V. or their respective owners.

www.philips.com