


Philips  
Portable DVD Player



PET742

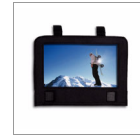

## Longer movie enjoyment on the go

Enjoy your movies anytime, anywhere! The PET742 portable DVD player features a 7" TFT LCD swivel screen giving you a great viewing experience. You can indulge in up to 5 hours of DVD/DivX®/MPEG movies, MP3-CD/CD music and JPEG photos on the go.

### Play your movies, music and photos on the go

- DVD, DVD+/-R, DVD+/-RW, (S)VCD, CD compatible
- DivX Certified for standard playback of DivX videos
- MP3-CD, CD and CD-RW playback
- View JPEG images from picture disc

### Enrich your AV entertainment experience

- 7" swivel colour LCD panel for improved viewing flexibility
- Enjoy movies in 16:9 widescreen format
- Built-in stereo speakers

### Extra touches for your convenience

- Up to 5-hour playback with a built-in battery\*
- AC adapter, car adapter and AV cable included
- Car mount pouch included for easy in-car use

**PHILIPS**  
sense and simplicity

# Highlights

## MP3-CD, CD and CD-RW playback




MP3 is a revolutionary compression technology by which large digital music files can be made up to 10 times smaller without radically degrading their audio quality. A single CD can store up to 10 hours of music.

## 5-hour built-in battery\*



This Philips player comes with a compact built-in rechargeable battery for long-lasting power. Up to 5 hours of continuous movie, photo and music playback enjoyment can be achieved on a single charge. Just plug in the power cable to recharge the player - it's that simple.

## Car mount pouch

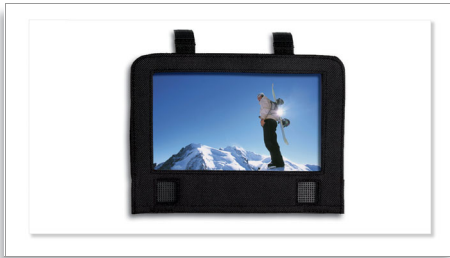


Mount your portable DVD player easily onto your car headrest. You can enjoy DVD movies on the road.

## 7" swivel colour LCD panel



7" swivel colour LCD panel for improved viewing flexibility

## DivX Certified

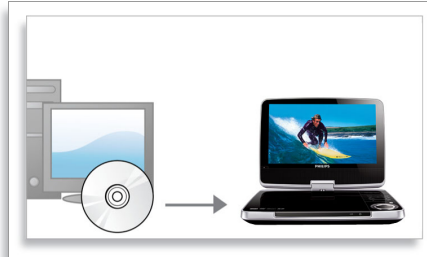

With DivX® support, you are able to enjoy DivX® encoded videos. The DivX media format is an MPEG4-based video compression technology that enables you to save large files like movies, trailers and music videos on media like CD-R/RW, and DVD recordable discs.

## Enjoy 16:9 widescreen movies



Display and share your movies and digital photos with your friends and family. The 16:9 widescreen aspect ratio is standard for universal to high-definition digital television. A native 16:9 aspect ratio means video display without bars at the top and bottom of the picture and without the quality loss than comes from scaling, altering an image to fit on a different screen size.

# Specifications

## Picture/Display

- Diagonal screen size (inch): 7 inch
- Resolution: 480(w) x 234(H) x 3(RGB)
- Display screen type: LCD TFT
- Brightness: 120 cd/m<sup>2</sup>
- Contrast ratio (typical): 200:1
- LCD panel type: Anti-glare polariser
- Effective viewing area: 154.1 x 86.6 mm
- Response time (typical): 30 ms

## Sound

- Output Power: 250 mW RMS (built-in speakers)
- Output power (RMS): 5 mW RMS (earphone)
- Signal to noise ratio: >80 dB (line out), >76 dB (earphone), >62 dB (built-in speakers)

## Video Playback

- Playback Media: DVD, Picture CD, SVCD, Video CD, DVD-R/-RW, MP3-CD, CD-R/CD-RW, DVD+R/+RW, CD
- Disc Playback Modes: Disc Menu, Fast Reverse, Fast Forward, OSD, Repeat, Zoom
- Video disc playback system: PAL, NTSC
- Compression formats: Divx, MPEG4

## Audio Playback

- MP3 bit rates: 32 - 320 kbps
- Compression format: Dolby Digital, MP3
- Playback Media: CD, CD-RW, MP3-CD, CD-R
- File systems supported: ISO-9660, Joliet

## Connectivity

- DC in: 9 V, 1 A
- Headphone jack: 3.5 mm Stereo Headphone x 1
- AV output: Composite (CVBS) x 1

## Convenience

- Battery charging indication
- Shock proof

## Accessories

- AC/DC Adapter: DC 9 V, 1 A, 110-240 v, 50/60 Hz
- Cables: 1 x AV Cables
- Remote control: AY5521 slim remote
- User Manual: Multi Languages
- Car kit: cigarette outlet adapter, 12vDC
- Pouch

## Power

- Battery Type: Built-in battery
- Battery lifetime: Up to 5 hrs\*

## Dimensions

- Master carton dimensions: 225 x 270 x 245 mm
- Master carton quantity: 3
- Master carton weight: 4.12 kg
- Packaging dimensions (W x H x D): 233 x 251 x 70 mm
- Product dimensions (W x H x D): 195 x 39 x 153 mm
- Packaging type: D-box
- Product weight: 0.77 kg



Issue date 2009-09-29

Version: 3.0.7

12 NC: 8670 000 49629  
EAN: 87 12581 46456 1

© 2009 Koninklijke Philips Electronics N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips Electronics N.V. or their respective owners.

[www.philips.com](http://www.philips.com)

\* DivX, DivX Certified and associated logos are trademarks of DivXNetworks, Inc. and are used under licence.

\* Rechargeable batteries have a limited number of charge cycles and may eventually need to be replaced. Battery life and number of charge cycles vary by use and settings.

\* Battery life varies by use and settings.

\* Battery life of playtime is approximate and may vary depending on application condition. To optimise battery life, user should turn LCD backlight to minimum, connect to headphones (not built-in speakers) and listen at medium volume level and use the product at room temperature.