




Philips  
Soundbar speaker

3.1 CH wired subwoofer

Bluetooth®  
HDMI ARC  
150W

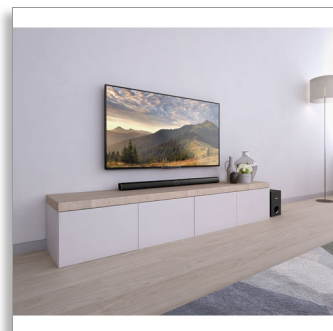

HTL2183B

## Unmatched voice clarity from 3.1 Ch

with Bluetooth streaming

Upgrade your TV with enhanced voice clarity and virtual surround sound for a better cinematic experience, plus wireless music streaming over Bluetooth.

### Connect and enjoy all your entertainment

- Wireless music streaming via Bluetooth
- EasyLink to control all HDMI CEC devices via a single remote
- Enjoy MP3 music directly from your portable USB devices
- Audio in to enjoy music from iPod/iPhone/MP3 player
- Works with TVs, BD/DVD players, gaming consoles, MP3 players

### Designed for simplicity

- Low-rise profile for the perfect fit in front of your TV
- Touch panel for intuitive playback and volume control

### Richer sound for watching TV and movies

- Dedicated center-channel speaker for superior voice clarity
- Dolby Digital and Pro Logic II surround sound
- Virtual Surround Sound for a realistic movie experience
- External subwoofer adds thrill to the action

**PHILIPS**


# Highlights

## Center-channel speaker



A centre-channel speaker dedicated especially to voice frequencies anchor speech to the centre of the screen. This offers improved voice positioning and clarity, increasing immersion in movies.

## Virtual Surround Sound

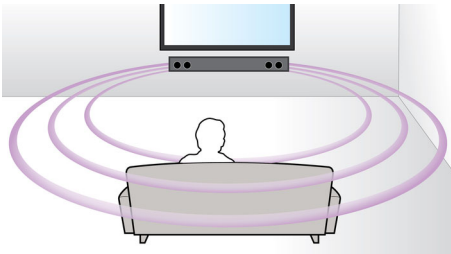

Philips Virtual Surround Sound produces rich and immersive surround sound from less than five-speaker system. Highly advanced spatial algorithms faithfully replicate the sonic characteristics that occur in an ideal 5.1-channel environment. Any high quality stereo source is transformed into true-to-life, multi-channel surround sound. No need to purchase extra speakers, wires or speaker stands to appreciate room-filling sound.

## Bluetooth



Bluetooth is a short range wireless communication technology that is both stable and energy efficient. The technology allows for easy wireless connection to other Bluetooth devices, so you can play your favorite music from any smartphone, tablet or laptop, including the iPod or iPhone with a Bluetooth-enabled speaker.

## USB playback




Simply plug in your device to the USB port on your Philips Soundbar speaker. Your digital music will be played directly from the device. Now you can share your favorite moments with family and friends.

## Audio in



Audio in allows you to easily play your music directly from your iPod/iPhone/iPad, MP3 player, or laptop via a simple connection to your Philips home cinema system. Simply connect your audio device to the Audio in jack to enjoy your music with the superior sound quality of the Philips home cinema system.

## Dolby Digital and Pro Logic II

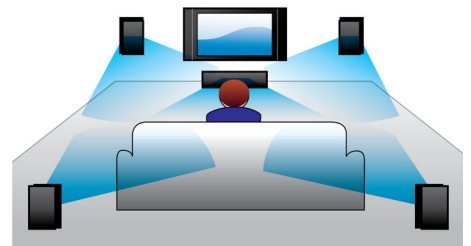

A built-in Dolby Digital decoder eliminates the need for an external decoder by processing all six channels of audio information to provide a surround sound experience and an astoundingly natural sense of ambience and dynamic realism. Dolby Pro Logic II provides five channels of surround processing from any stereo source.

# Specifications

## Sound

- Sound Enhancement: Virtual Surround Sound, Treble and Bass Control, Night Mode, Audio sync, Movie, Music, Voice
- Sound System: Dolby Digital, Dolby pro-logic 2
- Speaker output power: 32W x 3
- Subwoofer output power: 55 W
- Total Power RMS @ 10% THD: 150 W

## Loudspeakers

- Loudspeaker types: Integrated with main unit
- Speaker Impedance: 4 ohm
- Subwoofer type: Passive
- Subwoofer driver: 1 x 5.25" woofer
- Subwoofer freq range: 45 - 200 Hz
- Subwoofer impedance: 2 ohm
- Drivers per Soundbar: 3 x race track woofers

## Connectivity

- Integrated Connections: Bluetooth
- iPod/iPhone: via 3.5mm Audio In, via bluetooth
- Rear Connections: Digital coaxial in, Digital optical in, Subwoofer out, AUX in, HDMI 1.4 output (ARC)
- Top connections: Audio In (3.5mm), USB 2.0

## Design

- Wall mountable

## Power

- Power consumption: 30 W
- Power supply: 100-240VAC, 50-60Hz
- Standby power consumption: < 0.5 W

## Dimensions

- Main Unit (W x H x D): 950 x 51 x 69 mm
- Main Unit Weight: 1.62 kg
- Subwoofer Weight: 2.78 kg
- Subwoofer cable length: 3 m
- Packaging (W x H x D): 395 x 418 x 295 mm
- Subwoofer (W x H x D): 165 x 240 x 295 mm
- Weight incl. Packaging: 6.6 kg

## Accessories

- Included accessories: AAA Battery (x1), Power cord, Quick start guide, Remote Control, Safety & Legal Leaflet, Trademarks Sheet, AC Adapter, Screws (x6), Optical audio cable

## Convenience

- EasyLink (HDMI-CEC): Audio Return Channel, Automatic audio input mapping, One touch play, One touch standby, Remote Control-Passthrough, System standby

## Audio Playback

- Compression format: MP3



Issue date 2020-07-08

Version: 3.5.3

12 NC: 8670 001 26453  
EAN: 48 95185 61032 0

© 2020 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)