

PHILIPS



Open-ear wireless
sports headphones

Open-ear fit

Bone conduction

Clear calls

LED safety lights



TAA7607BK

Free your ears. Hear it all.

Run it, ride it, stroll it, love it! Light, comfy and tough, these open-ear wireless sports headphones let you hear everything that's going on around you, and your music too. From parks to city streets, your training just got an upgrade.

Hear differently

- Sound without earphones. Open-ear design
- Always good to go. IP66 dustproof and water resistant
- Be seen. LED safety lights

Sound without earphones


- Open-ear fit. Light, comfy, tough
- Integrated controls. Easy pairing
- Philips Headphones app
- Carry pouch included

For your kind of active life

- No worries. 9 hours play time
- Crystal-clear calls. Inside, outside, anywhere at all
- Charge for 15 minutes, get an extra hour
- AI and bone-conducting mics remove environmental noise


Highlights

Bone conduction

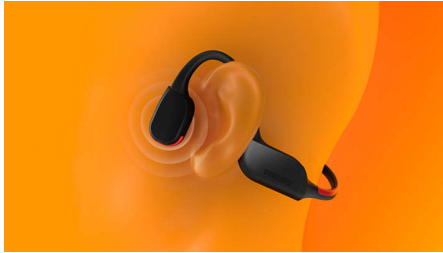

Bone conduction technology transmits sound through the bones of your skull, which means you don't need to put an earbud in your ear, or wear headphones that cover your ear. Instead, the sound travels from your cheekbones directly to the inner ear and your music magically appears in your head!

IP66 dust/water protection

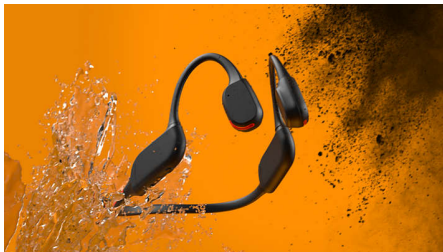

Hitting the trail in the rain? An IP66 rating means dirt or a downpour won't stop these open-ear headphones, and they're safe and easy to charge even after they've gotten wet. Simply wipe them down and attach them to the magnetic charging cradle.


Safety LED lights



Run at night. Hike a mountain trail at dusk. Or cycle in the woods. With a bright LED light-strip on the rear of the neckband, you'll stay visible in


dim environments. You can control the LEDs via the Philips Headphones app or via the on/off button on the neckband.

9 hours play time

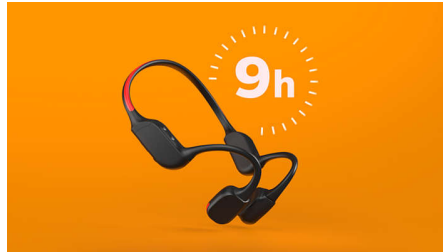


Don't want to worry about daily charging? With 9 hours play time from a single charge, these bone-conducting open-ear headphones are good to go for multiple workouts. A full charge takes just 2 hours. For a quick extra boost, just 15 minutes charging gives you an extra hour of play time.

Crystal-clear calls

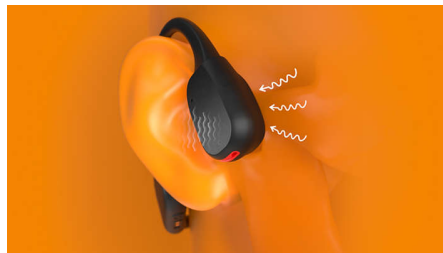

Taking calls? A unique combination of bone-conducting and AI mics means you'll always be heard clearly. The AI mic removes background noise in any environment. If you're out on a run or a ride, the bone-conducting mic removes annoying wind noise. Switch mics easily via a button on the neckband.

Light, comfy, tough

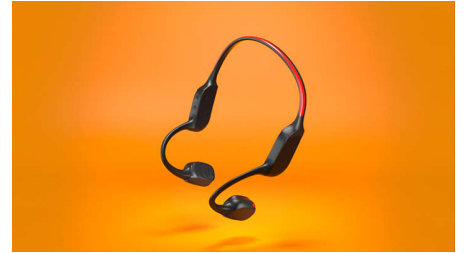

Why weigh yourself down? These open-ear headphones are so light you'll barely feel them, plus they won't fall off when you get moving. The neckband wraps around the back of your head, and loops over the top of your ears, to hold the headphones comfortably in place.

Easy control and pairing

Buttons on the neckband let you pause your playlist, take calls, control volume and more. The headphones are ready to pair the instant you switch on Bluetooth, and you can connect to two devices at once. Great if you're listening to music on your phone and getting training notifications from your smartwatch.

Philips Headphones app

The Philips Headphones app lets you control the LED running light and switch between the headphone's AI and bone-conducting mics for calls inside or outside.

Specifications

Sound

Frequency range: 130–16 000 Hz
Speaker diameter: 17 mm
Impedance: 4 Ohm
Maximum power input: 500 mW
Sensitivity: 92 dB (1 kHz)
Driver type: Dynamic

Connectivity

Bluetooth version: 5.2
Bluetooth profiles: A2DP, AVRCP, HFP
Maximum range: Up to 10 m
Multipoint connection
Supported codec: SBC

Outer Carton

Length: 22.6 cm
Number of consumer packages: 3
Width: 18.4 cm
Gross weight: 1.1 kg
Height: 19.5 cm
GTIN: 1 48 95229 12628 9
Net weight: 0.21 kg
Tare weight: 0.89 kg

Convenience

Volume control
Water resistance: IP66
Philips Headphones app support
Firmware updates possible
Type of controls: Button

Power

Rechargeable
Number of batteries: 1 pcs
Music play time: 9 hour(s)
Charging time: 2 hour(s)
Fast charging time: 15mins for 1 hr
Battery weight (Total): 3.5 g
Battery capacity (Headphones): 160 mAh
Battery life standby time: 80 hr
Battery type (Headphones): Lithium Polymer (built-in)

Packaging dimensions

Height: 19.2 cm
Packaging type: Box
Type of shelf placement: Hanging
Width: 17 cm
Depth: 7 cm
Number of products included: 1
EAN: 48 95229 12628 2

Gross weight: 0.234 kg
Net weight: 0.07 kg
Tare weight: 0.164 kg

Product dimensions

Height: 5.5 cm
Width: 14 cm
Depth: 9.6 cm
Weight: 0.038 kg

Accessories

Others: 1 pcs soft pouch
Quick Start Guide
Earplug: 1 pair
Charging cable: Magnetic charging cable, 200 mm

Design

Colour: Black
Ear fitting: Bone-conducting
In-ear fitting type: Open fit

Telecommunication

Microphone for call: 2 mics, AI mic and Bone mic
Wind noise reduction

UPC

UPC: 8 40063 20229 0

