



Philips  
CD Soundmachine

Bluetooth® and NFC

USB Direct  
12 W

AZ700T



## Enjoy powerful music wirelessly wherever you go

The Philips Portable CD Sound Machine is a powerful sound system that you can take with you everywhere. It frees your music with wireless One-Touch NFC connectivity for effortless Bluetooth pairing. Or play back your tunes on USB, CD and MP3-CD.

### Enjoy your music from different sources

- Stream music wirelessly via Bluetooth™ from your smartphone
- USB Direct for MP3 music playback
- Play MP3-CD, CD and CD-R/RW
- More music with Digital FM radio with 20 pre-set stations

### Easy to use

- One-Touch with NFC-enabled smartphones for Bluetooth pairing
- Handy remote control for extra convenience
- CD Shuffle/Repeat for personalised music enjoyment
- 20-track CD programmable
- Stereo headphone jack for better personal music enjoyment

### Powerful sound you can hear and feel

- Bass Reflex Speaker System delivers a powerful, deeper bass
- Dynamic Bass Boost for deep and dramatic sound

# PHILIPS


# Highlights

## Stream music via Bluetooth™



Bluetooth is a short-range wireless communication technology that is both robust and energy efficient. The technology allows easy wireless connection to an iPod/iPhone/iPad or other Bluetooth devices, such as smartphones, tablets or even laptops. So you can easily and wirelessly enjoy your favourite music, video or game on this speaker.

## NFC technology

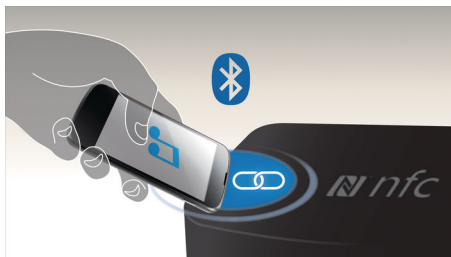

Pair Bluetooth devices easily with one-touch NFC (Near Field Communications)

technology. Just tap the NFC-enabled smartphone or tablet on the NFC area of a speaker to turn the speaker on, start Bluetooth pairing and begin streaming music.

## USB Direct for MP3 music

USB Direct for MP3 music playback

## Bass Reflex Speaker System



Bass Reflex Speaker System delivers a deep bass experience from a compact loudspeaker box system. It differs from a conventional loudspeaker box system in the addition of a bass pipe that is acoustically aligned to the woofer to optimise the low frequency roll-off of the system. The result is deeper controlled bass and lower distortion. The system works by causing the air mass in the bass pipe to vibrate like a conventional woofer. Combined with the response of the woofer, the system extends the overall low frequency sounds to

create a completely new dimension of deep bass.

## Handy remote control



With a handy remote control for greater convenience at your fingertips, all you have to do is sit back and relax.



# Specifications

## Audio playback

- Playback media: CD, CD-R, CD-RW, MP3-CD
- Disc playback modes: fast forward/reverse, next/previous album search, next/previous track search, repeat/shuffle/programme

## Tuner/Reception/Transmission

- Tuner bands: FM
- Antenna: FM antenna

## Sound

- Sound system: stereo
- Volume control: rotary (digital)
- Output Power: 12 W max

## Loudspeakers

- No. of built-in speakers: 2
- Speaker grille finishing: metal

## Connectivity

- USB: USB host
- 3.5 mm headphone jack
- Audio in (3.5 mm)

## Convenience

- Display type: LCD display
- Loader type: top

## Power

- Battery type: D size (LR20)
- Battery voltage: 1.5 V
- Number of batteries: 6
- Power type: AC/DC adapter

## Accessories

- Remote control
- Power cord
- User Manual
- Warranty: Warranty leaflet

## Dimensions

- Product dimensions (WxDxH): 435 x 271 x 170 mm
- Packaging dimensions (WxDxH): 469 x 197 x 311 mm
- Product weight: 2.9 kg
- Weight incl. Packaging: 4.11 kg



Issue date 2022-11-27

Version: 5.2.5

12 NC: 8670 001 20353  
EAN: 69 51613 99348 4

© 2022 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)