

Philips
Professional DJ
headphones

50mm drivers/ closed-back

Over-ear
Supra-aural cushions
Full folding



A5PRO

Professional DJ Headphones

in collaboration with Armin van Buuren

5-time World's Best DJ winner, Armin van Buuren collaborated with Philips to bring you the A5-PRO headphones. Backed by his experience, the A5 is engineered to meet the highest standards and demands of international DJs and industry pros.

For DJs and audio professionals

- Source-accurate sound reproduction
- 50mm drivers engineered for 3500mW power handling
- Superior sound isolation for use in loud environments
- Closed-back architecture with isolating supra-aural cushions

Comfortable for long sessions

- 90 degree swivel ear-shells for DJ monitoring
- Detachable, replaceable and comfortable ear cushions
- Soft, comfortable headband cushioning

Functional and durable

- Folds into a compact form for easy storing and carrying
- 1.3m cable with coiled section extending to 4.7m
- Aluminum-hinged alloy steel headband for enhanced durability

Ideal DJ accessories

- 3 sizes of replaceable cushions to suit different use

PHILIPS


Highlights

50mm drivers handling 3500mW




High powered 50mm neodymium drivers are engineered for 3500mW power handling – no matter what the source is. Sound delivery is clear, dynamic and distortion-free even at high volumes or with high audio input power.

90 degree swivel ear-shells

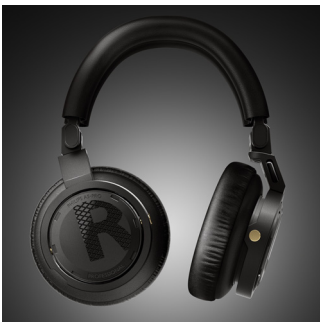

Designed with the professional DJ in mind, the earpieces on these headphones can each rotate 90° – for convenient one-ear listening while track mixing. The swivel can also be put to good use even in more casual listening, when temporary attention has to be paid to outside sounds.

Aluminum hinge construction

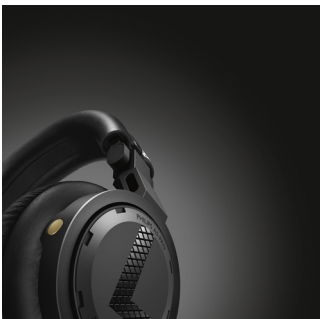


The Philips A5-PRO combines robust construction with exceptional fit. With its hard

anodized-finish and sturdy yet lightweight aluminum structure, it is the perfect companion to withstand any active DJ environment.

Closed-back architecture

Closed-back system blocks out ambient noise.

Coiled cable expands to 4.7m

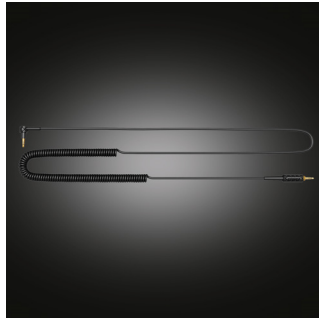

Enjoy greater freedom of movement with a 1.3m long cable with a coiled section that can extend to 4.7m. The coil also reduces the strain on parts caused by pulling, while providing extra extension without the tangled mess of cables.

Comfortable ear cushions



The earphone materials are carefully selected to ensure both long-wearing comfort and enhanced sound performance. Deluxe breathable ear pads are designed for optimal ergonomic fit as well as to seal in bass sounds while keeping out ambient noise.

Folds into compact form



Designed to give you the best experience on the go, your DJ headphones can be folded away for perfect portability and easy storage. Smart design and careful selection of components, like well-built hinges, allow the headphone parts to be maneuvered with ease.

Soft, comfortable headband



The soft-cushioned headband provides long-wearing comfort.

Source-accurate sound

The sound reproduction stays true to the original and lets you get the most out of your music.

Superior sound isolation

Soft sealing cushions isolate your ears from the outside world, so you can focus on the beat without distraction.

Specifications

Sound

- Acoustic system: closed
- Frequency response: 10 – 24,000 Hz
- Impedance: 16 Ohm
- Magnet type: Neodymium
- Maximum power input: 3500mW
- Sensitivity: 105 dB
- Speaker diameter: 50 mm
- Diaphragm: PET

Connectivity

- Cable Connection: one-sided
- Cable length: 1.3 m – 4.7 m
- Finishing of connector: gold-plated
- Type of cable: Coiled Cable

Accessories

- Adaptor plug: 3.5 - 6.3 mm



Issue date 2015-09-28

Version: 3.2.3

12 NC: 8670 001 16767
UPC: 6 09585 24539 6

© 2015 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com