



Philips  
wireless portable speaker

### Bluetooth® and NFC

Splash-proof  
Built-in microphone for calls  
12W, Rechargeable battery



BT6000R

## Small is Great

### Big sound 360° around

Chuck the speaker down any way you like, vertical or horizontal. 360° sound means you get big sound all around, every time. Splash-proof, rugged and equipped with wireless music streaming it brings warm, natural sound wherever you go.

#### Designed to go places

- Built-in rechargeable Li-ion battery for playback anywhere
- Splash-proof design ideal for outdoor use (IPX4)

#### Advanced versatility

- Audio-in for easy portable music playback
- Built-in microphone for hands-free phone calls
- One-Touch with NFC-enabled smartphones for Bluetooth pairing
- Wireless music streaming via Bluetooth

#### Sound that blows you away


- 2 x 6 W RMS total output power
- Two speaker drivers & passive radiators give immersive sound
- Digital Sound Processing for lifelike sound without distortion

# PHILIPS

wireless portable speaker  
Bluetooth® and NFC Splash-proof, Built-in microphone for calls, 12W, Rechargeable battery

# Highlights

## Wireless music streaming

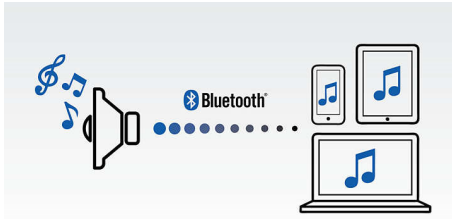


Bluetooth is a short range wireless communication technology that is both robust and energy-efficient. The technology allows easy wireless connection to iPod/iPhone/iPad or other Bluetooth devices, such as smartphones, tablets or even laptops. So you can enjoy your favourite music and sound from videos or games wirelessly.

## Twin speaker drivers



Twin 1.5" Neodymium speaker drivers deliver natural, clear and balanced sound while dual opposing passive radiators extend and boost bass. Front and back full-range speaker drivers create even 360-degree sound, offering the freedom to enjoy the same quality sound wherever the speaker is facing.

## Digital Sound Processing

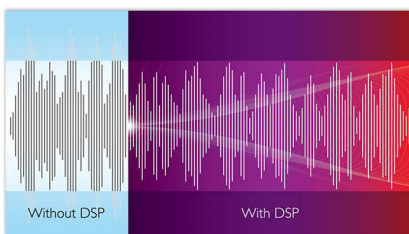

Advanced sound processing technology enhances the reproduction of your music so


that each note resonates with crystal-clear accuracy, and each pause is sealed with pristine silence. Philips' proprietary Digital Sound Processing technology optimises the performance of compact speaker boxes, delivering sound that is clear, detailed and powerful without any distortion.

## Splash-proof design



Water-resistant design allows enjoyment in wet and rainy environments. Tested to stringent IPX4 standards, internal components are proven to be protected from exposure to the elements, allowing for music enjoyment indoors in the bathroom, kitchen or even outdoors whatever the weather.

## NFC technology

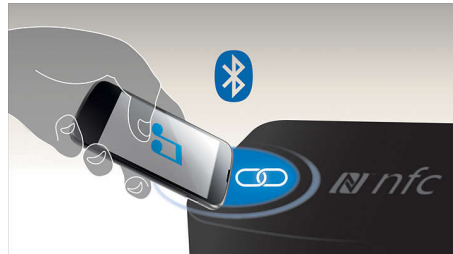

Pair Bluetooth devices easily with one-touch NFC (Near Field Communications) technology. Just tap the NFC-enabled smartphone or tablet on the NFC area of a speaker to turn the speaker on, start Bluetooth pairing and begin streaming music.

## Built-in microphone

With its built-in microphone, this speaker also works as a speaker phone. When a call comes in, the music is put on pause and you can talk via the speaker. Call for a business meeting.

BT6000R/10

Or, call your friend from a party. Either way, it works great.

## AUDIO-IN (3.5 mm)



Make one easy connection and enjoy all your music from portable devices and computers. Simply plug your device into the AUDIO-IN (3.5 mm) port on your Philips set. With computers, the connection is typically made from the headset output. Once linked, you can enjoy your entire music collection directly, on a set of superior speakers. Philips simply delivers better sound.

## 2 x 6 W RMS total output power



2 x 6 W RMS total output power

## Rechargeable Li-ion battery



Built-in rechargeable Li-ion battery for playback anywhere

# Specifications

## Sound

- Output power (RMS): 2 x 6 W
- Sound System: Stereo
- Volume Control: rotary
- Speakers: 2 x 1.5"

## Design and finishing

- Colour: Red

## Loudspeakers

- Speaker drivers: Neodymium magnet system

## Connectivity

- Bluetooth profiles: A2DP, AVRCP, HFP
- Bluetooth range: Line of sight, 10 m or 30 ft
- Audio in (3.5 mm)
- NFC: Tap-to-pair Bluetooth; works with Android 4.0 or above, and Windows phone 8 or above

## Outer Carton

- Length: 29.2 cm
- Number of consumer packages: 2
- Width: 22.6 cm
- Gross weight: 1.8 kg
- Height: 11.8 cm
- GTIN: 1 48 95185 61281 9
- Net weight: 1.316 kg
- Tare weight: 0.484 kg

## Convenience

- Water resistance: IPX4
- Built-in microphone: for speaker conference

## Compatibility

- Android tablets and smartphones: with Android

- 2.1 and Bluetooth 2.1 or above
- iPod touch: 3rd generation or later
- Works with: most Bluetooth smartphones, tablets, music devices
- iPad: iPad 1, iPad 2, new iPad, iPad with Retina display, iPad Air, iPad Air 2, iPad mini 2, iPad mini 3, iPad mini
- iPhone: iPhone 3, iPhone 3GS, iPhone 4, iPhone 4S, iPhone 5, iPhone 5C, iPhone 5S, iPhone 6, iPhone 6 Plus
- other music devices: with Bluetooth 2.1 or above

## Power

- Battery type: Lithium-ion (built-in)
- Power supply: 5V, 2A (USB adapter)
- Operating time on battery: 8 hour(s)

## Product dimensions

- Height: 7.05 cm
- Width: 18.83 cm
- Depth: 6.97 cm
- Weight: 0.486 kg

## Accessories

- Included accessories: USB adapter, USB cable for PC charging, Quick install guide, Warranty certificate, World Wide Warranty leaflet

## Dimensions

- Weight incl. Packaging: 0.79 kg
- Product dimensions (WxDxH): 188 x 71 x 70 mm
- Packaging dimensions (WxDxH): 282 x 105 x 108 mm
- Product weight: 0.49 kg



Issue date 2024-03-24

Version: 1.0.5

EAN: 48 95185 61281 2

© 2024 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)