




Philips
Micro music system

Bluetooth®

CD, USB, FM
Changeable front plates 2 sets
40 W

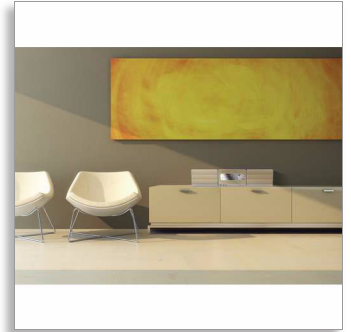

BTM5000



Relax with great music

Obsessed with sound

Listen to your music and online services via any Smartphone with this Philips micro sound system. Enjoy music from multiple sources in pure, detailed sound. It also comes with changeable front plates, adding colour to your experience.

Enjoy your music from multiple sources

- Wireless music streaming via Bluetooth
- Play MP3/WMA-CD, CD and CD-RW
- USB Direct for MP3/WMA music playback
- Audio-in for portable music playback

Enrich your sound experience

- Digital Sound Control for optimised music style settings
- 40 W RMS total output power
- Bass Reflex Speaker System delivers a powerful, deeper bass

Easy to use

- Motorised CD loader for convenient access
- Radio Data System for station information and data services

PHILIPS

Highlights

Wireless music streaming

Bluetooth is a short range wireless communication technology that is both robust and energy-efficient. The technology allows easy wireless connection to iPod/iPhone/iPad or other Bluetooth devices, such as smartphones, tablets or even laptops. So you can enjoy your favourite music and sound from videos or games wirelessly.

Digital Sound Control



Digital Sound Control offers you a choice of pre-set Jazz, Rock, Pop and Classical controls you can use to optimise the frequency ranges for different musical styles. Each mode uses graphic equalizing technology to automatically

adjust the sound balance and enhance the most important sound frequencies in your chosen music style. Ultimately, Digital Sound Control makes it easy for you get the most out of your music by precisely adjusting the sound balance to match the type of music you are playing.

USB Direct



With the USB Direct mode, simply plug in your USB device to the USB port on your Philips device and your digital music will be played directly from the Philips device.

Audio-in



The Audio-in connectivity allows direct playback of Audio-in content from portable media players. Besides the benefit of enjoying your favourite music in the superior sound quality delivered by the audio system, the Audio in is also extremely convenient as all you have to do is to plug your portable MP3 player into the audio system.



Specifications

Sound

- Output power (RMS): 2 x 20 W
- Sound Enhancement: Digital Sound Control

Loudspeakers

- Loudspeaker types: Mylar tweeter
- Main Speaker: 2-way, Bass Reflex Speaker System, Speaker grilles detachable, 3.5" woofer

Audio Playback

- Playback Media: CD, CD-R, CD-RW, MP3-CD, WMA-CD, USB flash drive
- Disc Playback Modes: Fast Forward/Reverse, Next/Previous Track Search, Repeat/one/all/programme, Shuffle Play, 20-Track Programmable
- Loader Type: Motorised, Tray
- ID3-tag support
- USB Direct Modes: Fast Reverse/Fast Forward, Play/Pause, Previous/Next, Programme Play, Repeat, Shuffle, Stop
- Cradle playback mode: Charging iPhone, Charging iPod, Fast forward and reverse, Menu, Up and Down, Next and Previous track, Play and Pause

Tuner/Reception/Transmission

- Tuner Bands: FM Stereo
- Auto digital tuning
- Tuner Enhancements: Auto Store
- RDS: Programme Type, Radio Text, Station Name
- Station presets: 20

Connectivity

- Headphones: 3.5 mm
- Front/Side connections: USB 2.0
- 3.5 mm stereo line in: MP3 Link
- Rear Connections: AUX in, FM Antenna, Left and right speakers
- Bluetooth profiles: A2DP

Convenience

- Alarms: CD Alarm, USB alarm, Radio Alarm
- Clock: On main display
- Display Type: VFD display
- Indications: DIM mode

Accessories

- Included accessories: AC Power Cord, FM antenna
- Remote control
- User Manual: Multi-lingual

Dimensions

- Gross weight: 5.8 kg
- Main unit width: 210 mm
- Main unit height: 132 mm
- Main unit depth: 242 mm
- Main speaker dimensions (W x D): 200 x 220 mm
- Main speaker height: 132 mm
- Packaging dimensions (W x H x D): 500 x 290 x 278 mm

Power

- Power supply: 220-240 V, 50 Hz



Issue date 2014-07-18

Version: 2.1.8

12 NC: 8670 000 88576
EAN: 87 12581 63977 8

© 2014 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com