




Philips
Wireless noise cancelling
headphones

32mm drivers/closed-back

On-ear
Soft ear cushions
Compact folding

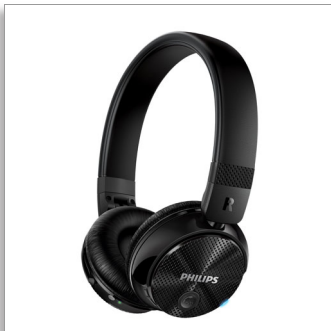

SHB8750NC

More sound, less noise

wirelessly

No wires, no noise and no compromise. Immerse yourself in music with advanced ActiveShield™ active noise canceling technology. Connect wirelessly with NFC one-tap pairing, enjoy music and manage calls with smart control on earpads.

Art of Noise Cancellation

- ActiveShield™ noise canceling reduces noise by up to 97%

Clear & natural sound

- 32mm neodymium speaker drivers deliver precision sound
- High quality Bluetooth 4.0
- Soft ergonomic cushions for long wearing comfort

Make life more convenient

- Convenient hands-free calling with mic and Bluetooth® 4.0
- Control calls, music and volume with earshell switches
- Simple NFC one-tap pairing
- Rechargeable battery offers up to 16 hours of wireless music
- Multi-point plays music and calls on two devices at once
- Activate Siri and Google Now with a press on earcan button
- Extra audio cable means music can continue without power
- Compact folding for easy carrying and storage

PHILIPS

Wireless noise cancelling headphones
32mm drivers/closed-back On-ear, Soft ear cushions, Compact folding

SHB8750NC/27

Highlights

32mm high definition drivers



Finely tuned 32mm neodymium drivers combined with a closed-back acoustic system design and on-ear sealing provide an excellent and impressive precision sound.

ActiveShield™



ActiveShield™ active noise canceling technology features two feed-backward microphones used for canceling low frequencies. It detects ambient noise and inverting the sound wave, effectively cancelling it out and converting background noise to silence.

Compact folding



The compact foldable construction makes it the perfect on-the-go companion.


Extra audio cable included

Unlike most noise cancellation headphones, the headphones work with or without battery to consistently deliver excellent audio in any environment. If the battery runs out, simply plug in the audio cable and continue enjoying your favorite music.

Handsfree calls

Convenient hands-free calling with mic and Bluetooth® 4.0

Multi-point

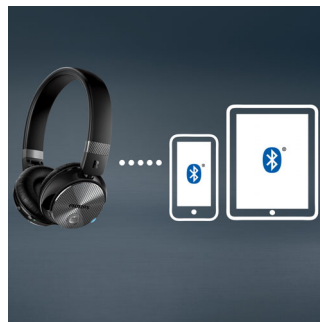

Multi-point allows you to connect your Philips Bluetooth headphones with two Bluetooth-enabled devices simultaneously. Simply pair up the two devices to enjoy movies and music while effortlessly taking calls in between.

Rechargeable battery

Enjoy 16 hours of continuous music playback even with Bluetooth and Active Noise Canceling on, 28 hours when only Bluetooth is on and 33 hours when only ANC is on.

Simple NFC pairing



Simple NFC pairing lets you connect your Bluetooth® headphones with any Bluetooth-enabled device – with just a single touch.

Button controls



Button controls at the right earshell enable you to control music and calls with a press.

Soft ergonomic cushions



Soft ergonomic cushions for long wearing comfort

Works with Siri/Google Now

Compatible with Siri and Google Now, the latest Philips Bluetooth headphones make using your virtual assistant even easier. All you need is a press on the earcup button to activate Siri on iPhone or Google Now on Android devices.

Bluetooth 4.0



Enjoy high quality wireless sound with Bluetooth 4.0.

Specifications

Sound

- Frequency range: 10 - 22 000Hz
- Impedance: 16 Ohm
- Magnet type: Neodymium
- Maximum power input: 30 mW
- Sensitivity: 105 dB
- Speaker diameter: 32 mm
- Acoustic system: Closed
- Diaphragm: PET

Connectivity

- Audio Connections: 3.5mm Line in
- Bluetooth profiles: A2DP, AVRCP, HFP, HSP
- Bluetooth version: 4.0
- Maximum range: Up to 10 m
- Cable Connection: single sided
- Finishing of connector: gold-plated
- Cable length: 1.2m
- Connector: 3.5 mm stereo

Accessories

- Audio cable: Extra 1.2 m audio cable
- Quick start guide: Included
- USB cable: Included for charging

Convenience

- Call Management: Answer/End Call, Reject Call, Microphone mute, Call on Hold, Switch between call and music, Switch between 2 calls
- Volume control

Power

- Battery Type: LI-Polymer
- Rechargeable
- Music playtime: 16* hr
- Standby time: 45* hr
- Talk time: 15* hr

Outer Carton

- Gross weight: 2.385 lb
- Gross weight: 1.082 kg
- GTIN: 1 08 89446 00427 1
- Outer carton (L x W x H): 20.3 x 16.2 x 21.6 cm
- Outer carton (L x W x H): 8.0 x 6.4 x 8.5 inch
- Nett weight: 1.495 lb
- Nett weight: 0.678 kg
- Number of consumer packagings: 3
- Tare weight: 0.404 kg
- Tare weight: 0.891 lb

Packaging dimensions

- Packaging dimensions (W x H x D): 19.4 x 19.9 x 5 cm
- Packaging dimensions (W x H x D): 7.6 x 7.8 x 2.0 inch
- Gross weight: 0.316 kg
- Gross weight: 0.697 lb
- Nett weight: 0.498 lb
- Nett weight: 0.226 kg
- Number of products included: 1
- Packaging type: Carton
- Tare weight: 0.198 lb
- Tare weight: 0.09 kg
- Type of shelf placement: Both
- UPC: 8 89446 00427 4

Product dimensions

- Product dimensions (W x H x D): 6.3 x 7.1 x 1.5 inch
- Product dimensions (W x H x D): 16 x 18 x 3.8 cm
- Weight: 0.498 lb
- Weight: 0.226 kg



Issue date 2017-08-29

Version: 6.0.10

12 NC: 8670 001 30629
UPC: 8 89446 00427 4

© 2017 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com

* Actual results may vary