



Philips
In-Ear Headphones

Purple



SHE3800PP

Extra bass

Compact earphones with oval sound tube

The small and colorful SHE3800 packs a punch with its efficient speakers that deliver ultra dynamic bass. Soft ear caps with oval tube inserts ensure ergonomic fit.

Enjoy quality sound

- Efficient 8.6mm drivers deliver clear, precise sound
- Closed in-ear design for enhanced bass and noise isolation

Wearing comfort

- Ergonomic oval sound tube for a truly comfortable fit
- Choose from 3 pairs of ear caps for the perfect fit for you

Design for convenience

- Reinforced cable relief enhances durability and connectivity

PHILIPS

Specifications

Sound

- Diaphragm: PET
- Frequency response: 10–22 000 Hz
- Magnet type: Neodymium
- Voice coil: CCAW
- Sensitivity: 107 dB
- Speaker diameter: 8.6 mm
- Maximum power input: 20 mW
- Impedance: 16 ohm
- Acoustic system: Semi-closed

Design

- Color: Purple

Connectivity

- Type of cable: Copper
- Cable Connection: symmetrical
- Cable length: 1.2 m
- Connector: 3.5 mm
- Finishing of connector: nickel plated

Packaging dimensions

- Packaging type: Blister
- Type of shelf placement: Both
- EAN: 69 23410 72518 6
- Packaging dimensions (W x H x D):

- 5 x 17.2 x 3 cm
- Gross weight: 0.032 kg
- Nett weight: 0.011 kg
- Number of products included: 1
- Tare weight: 0.021 kg

Inner Carton

- Gross weight: 0.135 kg
- GTIN: 2 69 23410 72518 0
- Inner carton (L x W x H): 18.2 x 9.8 x 6.4 cm
- Nett weight: 0.033 kg
- Number of consumer packagings: 3
- Tare weight: 0.102 kg

Outer Carton

- Gross weight: 1.26 kg
- GTIN: 1 69 23410 72518 3
- Outer carton (L x W x H): 37.4 x 20.6 x 14 cm
- Nett weight: 0.264 kg
- Number of consumer packagings: 24
- Tare weight: 0.996 kg


Product dimensions

- Product dimensions (W x H x D): 2 x 2 x 1.2 cm
- Weight: 0.0096 kg

SHE3800PP/00

Highlights

Choice of 3 pairs of ear caps

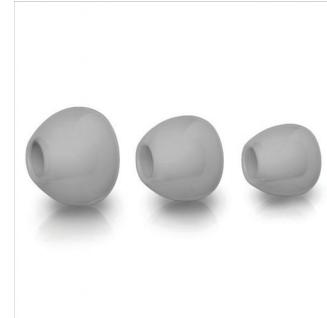

Ear caps come in a choice of 3 sizes – small, medium and large – for a personalized and perfect fit.

Efficient 8.6mm drivers



Small and efficient 8.6mm speaker drivers deliver clear sound for enhanced listening enjoyment on the go.

Ergonomic oval sound tube

The oval shape of the sound tube came about based on extensive research on the human ear. Designed to fit any ear comfortably, the ergonomic shape ensures optimal fit and comfort for total music enjoyment.

Noise isolating ear caps



Ultra small in-ear design ensures a snug and comfy fit to block out ambient noise, while its closed structure deliver enhanced bass performance.

Reinforced cable relief

To extend the life of your headphones, a soft rubber relief between them and the cable protects the connection from damage through repeated bending.



Issue date 2016-07-15

Version: 3.0.6

12 NC: 8670 001 09606
EAN: 69 23410 72518 6

© 2016 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com