




Philips
wireless portable speaker

Bluetooth®

Audio-chain
Built-in microphone for calls
10W, rechargeable battery

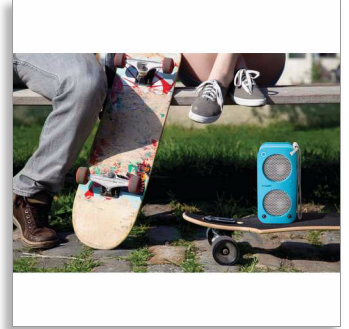

SB5200A



Great sound · Ruggedized · Chainable

Keep the party pumping wherever you go with the epic sounding SB5200 portable speaker and its hot design. Hit the Indoor mode for crisp, clear sound at home, or flick it to Outdoor mode and crank the volume to get people jumping.

Sound that blows you away

- wOOx™ loudspeaker Technology for deep and powerful bass
- 2 selectable sound settings tuned for Outdoor and Indoor use
- Outdoor mode for bigger and louder music
- Indoor mode for deep bass and clarity for high quality sound

Designed to go places

- Rugged design and over size strap for active use
- Built-in rechargeable battery for even better portability

Advanced versatility

- Wireless music streaming via Bluetooth
- Chain multiple BR-1Xs into a bigger music system
- Built-in microphone for speaker phone conversation
- Audio-in for easy portable music playback

PHILIPS

Wireless portable speaker
Bluetooth® Audio-chain, Built-in microphone for calls, 10W, rechargeable battery

SB5200A/10

Highlights

Wireless music streaming



Bluetooth is a short range wireless communication technology that is both robust and energy-efficient. The technology allows easy wireless connection to iPod/iPhone/iPad or other Bluetooth devices, such as smartphones, tablets or even laptops. So you can enjoy your favorite music, sound from video or game wireless on this speaker easily.

wOOx™ Technology



wOOx technology is a revolutionary loudspeaker concept that allows you to hear and feel profoundly deep bass that is richer than any other audio system. Special speaker drivers work in harmony with the wOOx bass radiator, and precise tuning between the main driver and the tweeter ensures smooth transitions from low-mid to high frequencies. Dual suspension and a totally symmetrical sandwich construction deliver low and precise bass without noticeable distortion. wOOx produces exceptionally deep and dynamic bass by using the speaker box full volume to truly magnify the impact of the music.

2 selectable sound settings

Two sound settings designed for your convenience and greater versatility, indoor mode and outdoor

mode. Use Indoor mode when you want strong bass and crystal clear sound and Outdoor mode when you need maximum loudness and power in the open air.

Chain multiple BR-1Xs



To get bigger sound outdoor, chain together as many BR-1Xs as you want with the special by-pack audio cable. Once connected, volume on all BR-1Xs will synchronise. Simply change the volume on the BR-1X connected to your device to change it on all of them.

AUDIO-IN (3.5mm)



Make one easy connection and enjoy all your music from portable devices and computers. Simply plug your device to the AUDIO-IN (3.5 mm) port on your Philips set. With computers, the connection is typically made from the headset output. Once linked, you can enjoy your entire music collection directly, on a set of superior speakers. Philips simply delivers better sound.

Built-in microphone

Built-in microphone for speaker phone conversation

Specifications

Compatibility

- iPad: iPad 1, iPad 2, new iPad, iPad mini, iPad with Retina display
- iPhone: iPhone 3, iPhone 3GS, iPhone 4, iPhone 4S, iPhone 5
- iPod touch: 3rd generation or later
- Android tablets & smartphones: with Android 2.1 and Bluetooth 2.1 or above
- work with: Bluetooth 4.0 or below
- other Bluetooth-enabled device

Connectivity

- Bluetooth profiles: A2DP, AVRCP, HFP
- Bluetooth range: Line of sight, 10M or 30FT
- Audio in (3.5mm)
- micro USB port: to charge up BR-1X via PC

Convenience

- Built-in microphone: for speaker conference

Sound

- Output power (RMS): 2 x 5W
- Sound System: Stereo
- Volume control: up/down

Loudspeakers

- Loudspeaker enhancement: wOOx Bass Radiator
- Speaker drivers: 2 x 2"

Power

- Power supply: 100-240VAC, 50/60Hz
- Battery type: Lithium polymer (built-in)
- Operating time on battery: 6 hr

Accessories

- Included accessories: AC Power Cord, hand strap, audio cable to chain up BR-1Xs, Warranty certificate, World Wide Warranty leaflet, Quick install guide

Dimensions

- Product dimensions (WxDxH): 210 x 100 x 80 mm
- Packaging dimensions (WxDxH): 260 x 110 x 110 mm
- Product weight: 0.5 kg
- Weight incl. Packaging: 0.95 kg



Issue date 2015-03-12

Version: 1.0.5

12 NC: 8670 001 07838
EAN: 08 71258 17004 61

© 2015 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com

* Battery life varies by use and settings.