



Philips Fidelio  
Wireless subwoofer

**420 W max. 8" woofer**

Dual wOOx passive radiators  
Philips Wireless Home System  
Sustainable Muirhead leather



**TAFW1**

## Crafted for bass chasers

Feel the full power of every dramatic moment, every climactic action scene, every beat. This Fidelio subwoofer gives you beautifully controlled bass, bringing effects alive and enriching quieter scenes and music. Prepare to be moved.

### Give your entertainment the sound it deserves

- Philips Fidelio. Spine-tingling bass for movies and music
- Rich, deep, perfectly controlled low frequencies
- 420 W max. 8" woofer. Dual wOOx passive radiators
- Advanced passive radiator design
- No distortion—even at high volumes

### A seamless experience

- Philips Wireless Home System powered by DTS Play-Fi
- Intelligent bass. Immerse more. Hear more
- Optimizes performance of select Philips TV and audio
- RCA connection. Connect to multi-channel amps and more

### Beautiful Fidelio design

- Head-turning looks
- Muirhead leather trim with brushed-metal top
- Dimensions: 240x472x400 mm

# PHILIPS

## Wireless subwoofer

420 W max. 8" woofer Dual wOOx passive radiators, Philips Wireless Home System, Sustainable Muirhead leather


# Highlights

### Spine-tingling bass



This Fidelio subwoofer brings spine-tingling bass to movies, shows, and music. A down-firing woofer and advanced dual passive-radiator design ensure rich, perfectly timed low frequencies fill any room. You'll add a whole new dimension to everything you watch—or listen to.

### Head-turning looks

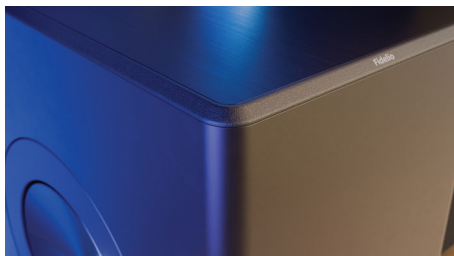

This head-turning subwoofer beautifully matches the Fidelio FB1 soundbar. The bevel is trimmed in anthracite Muirhead leather, while the top surface is in brushed metal. The visible elements of the twin passive radiators are detailed with metallic material, which softly catches the light.

### Philips Wireless Home System



This Play-Fi-compatible subwoofer lets you build your perfect home theater sound. Connect to a




Issue date 2022-08-17

Version: 3.0.2

12 NC: 8670 001 84121  
UPC: 8 40063 20256 6

Fidelio soundbar to deepen the impact of movies and music with perfectly controlled bass—free from distortion, even at high volume. Add paired wireless speakers and create a true surround-sound setup.

### Intelligent bass

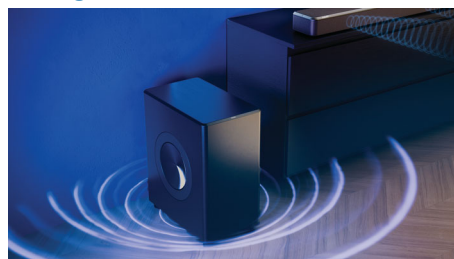

Good things happen when this Fidelio subwoofer pairs with a Philips soundbar, speakers, or TV\*. The sub recognizes what it's paired with and automatically takes control of the lowest frequencies, freeing paired components to concentrate on mids and highs. The result: even more richness and detail.

### RCA connection



Connect this subwoofer to your existing home cinema setup, or to select non-Play-Fi-compatible TVs, via the RCA port.

TAFW1/37

# Specifications

### Sound

- Output power (MAX): 420W @ 1% THD
- Output power (RMS): 210W

### Loudspeakers

- Subwoofer type: Active, Wireless subwoofer
- Number of woofers: 1
- Woofer diameter: 8"
- Subwoofer impedance: 3 ohm
- Passive radiators: 2
- Number of sound channels: 0.1

### Connectivity

- DTS Play-Fi subwoofer channel
- WiFi: 2.4GHz/5GHz, IEEE 802.11 a/b/g/n/ac
- Network setup: Philips Sound app, powered by DTS Play-Fi, PS Fine Tune app
- Subwoofer in: 1 x 3.5mm RCA
- Multiple speaker connection
- Multiple speaker scenario: Surround, Grouping
- Multiple speaker technology: DTS Play-Fi Multi-room
- Bluetooth: No
- DLNA Standard: No
- Smart Home: None
- Audio in: No

### Compatibility

- Smartphone/tablet APP control

### Convenience

- Subwoofer in controls: Gain, Crossover, Phase
- Other controls: Source, Factory reset
- Light Effect: No
- Handsfree calling: No
- Built-in microphone: 0

### Power

- Power supply: 100 - 240V AC, 50/60Hz
- Subwoofer standby power: < 0.5 W
- Power bank: No

### Accessories

- Included accessories: AC Power Cord, Quick start guide, World Wide Warranty leaflet

### Product dimensions

- Product dimensions (W x H x D): 24 x 47.2 x 40 cm
- Product dimensions (W x H x D): 9.4 x 18.6 x 15.7 inch
- Weight: 13.4 kg
- Weight: 29.542 lb

### Packaging dimensions

- UPC: 8 40063 20256 6
- Packaging type: Carton
- Number of products included: 1
- Packaging dimensions (W x H x D): 53 x 56 x 32 cm
- Packaging dimensions (W x H x D): 20.9 x 22.0 x 12.6 inch
- Gross weight: 15.5 kg
- Nett weight: 13 kg
- Tare weight: 2.5 kg
- Gross weight: 34.171 lb
- Nett weight: 28.660 lb
- Tare weight: 5.512 lb

© 2022 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V. or their respective owners.

[www.philips.com](http://www.philips.com)

\* This feature works with DTS Play-Fi-compatible Philips TVs from 2021 or later.