

Philips  
DVD player



DVP3111

## Enjoy it all - from DVD

Does size matter? Ever heard of less is more? Introducing the best value DVD player. No complications! Just a simple set that plays practically any disc format, including your digital photos, with absolutely no compromise to picture quality.

### **Bring audio and video to life**

- 12-bit/108 MHz video processing for sharp and natural images
- 192 kHz/24-bit audio DAC enhances analogue sound input
- High-quality outputs for analogue and digital audio
- Screen Fit for optimal viewing every time

### **Play all your movies and music**

- DivX Certified for standard playback of DivX videos
- Plays CD, (S) VCD, DVD, DVD+R/RW, DVD-R/RW
- Plays MP3, WMA and JPEG digital camera photos

### **Fits any space, any lifestyle**

- Ultra-slim design that fits anywhere

# PHILIPS

# Specifications

## Picture/Display

- D/A converter: 12-bit, 108 MHz
- Picture enhancement: Progressive scan, Video upsampling

## Sound

- D/A converter: 24-bit, 192 kHz
- Frequency response: 30-20,000 Hz
- Signal to noise ratio: 100
- Distortion and Noise (1 kHz): 85 dB
- Crosstalk (1 kHz): 100 dB
- Dynamic Range (1 kHz): 90 dB
- Sound System: Dolby Digital

## Video Playback

- Playback Media: CD, CD-R/CD-RW, Video CD/SVCD, DVD, DVD-R/-RW, DVD+R/+RW, DVD-Video, DivX
- Compression formats: MPEG1, MPEG2, DivX 3.11, DivX 4.x, DivX 5.x, DivX 6.0
- Video disc playback system: PAL, NTSC

## Audio Playback

- Playback Media: CD, MP3-CD, MP3-DVD, WMA-CD, CD-R/RW, Audio CD
- MP3 bit rates: 32 - 320 kbps
- Compression format: Dolby Digital, MP3, WMA, PCM

## Still Picture Playback

- Playback Media: DVD-R/-RW, DVD+R/+RW, CD-R/RW, Picture CD, Kodak Picture CD
- Picture Compression Format: JPEG
- Picture Enhancement: Flip photos, Rotate,

Slideshow, Zoom, Slideshow with MP3 playback

## Multimedia Applications

- Playback Formats: JPEG Still pictures, MP3

## Connectivity

- Rear Connections: Analogue audio Left/Right out, Composite video (CVBS) output, Digital coaxial out, Scart

## Convenience

- Child Protection: Parental Control, Child Lock
- On-Screen Display languages: English, Czech, Danish, Dutch, Finnish, French, German, Greek, Italian, Norwegian, Polish, Portuguese, Spanish, Swedish, Turkish

## Power

- Power consumption: < 10 W
- Standby power consumption: < 1 W
- Power supply: 110-240V, 50/60 Hz

## Accessories

- Included accessories: 2 x AAA Batteries, Remote Control, World Wide Warranty leaflet, User Manual


## Dimensions

- Set dimensions (W x H x D): 360 x 37 x 209 mm
- Packaging dimensions (W x H x D): 400 x 80 x 285 mm
- Set weight: 1.3 kg
- Weight incl. Packaging: 2.4 kg



# Highlights

## DivX Certified

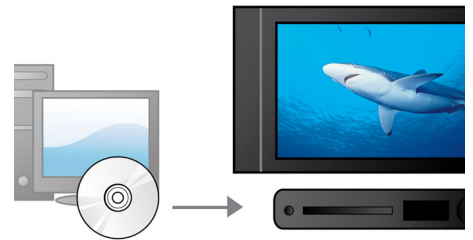

With DivX support, you are able to enjoy DivX encoded videos in the comfort of your living room. The DivX media format is an MPEG4-based video compression technology that enables you to save large files like movies, trailers and music videos on media like CD-R/RW and DVD recordable discs.

## 12-bit/108 MHz video processing



12-bit Video DAC is a superior Digital-to-Analogue Converter that preserves every detail of the authentic picture quality. It shows subtle shades and smoother graduation of colours, resulting in a more vibrant and natural picture. The limitations of the standard 10-bit DAC become particularly apparent when it is used with large screens and projectors.

## 192 kHz/24-bit audio DAC

192 kHz sampling enables you to have an accurate representation of the original sound curves. Together with a 24-bit resolution, more information is captured from the original analogue sound wave form, giving a much richer audio reproduction.

## Plays it all

Play MP3s, WMA and JPEGs, and experience the convenience of sharing media files on your TV or home theatre system - in the comfort of your living room.

## Screen Fit

Whatever you're watching, on whatever TV, Screen Fit ensures that the picture fills the whole screen. Annoying black bars on the top and bottom are eliminated, without any tedious manual adjustments to make. Simply press the Screen Fit button, choose the format and enjoy your movie in full screen



Issue date 2017-04-04

Version: 1.2.2

12 NC: 8670 000 72514  
EAN: 87 12581 58371 2

© 2017 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)