

Philips
5.1 Home theatre

Smart TV
3D Blu-ray

HTS3563



Powerful surround sound

With Blu-ray 3D

Pump up your home entertainment experience with the Philips home theatre HTS3563. Exposed speaker drivers offering powerful 600 W surround sound and immersive 3D Blu-ray Disc playback.

Great listening experience

- Dolby TrueHD and DTS-HD for high fidelity surround sound
- 600 W RMS power delivers great sound for movies and music
- Exposed speaker drivers for powerful surround sound

Connect and enjoy all your entertainment

- EasyLink to control all HDMI CEC devices via a single remote
- Full HD 3D Blu-ray for a truly immersive 3D movie experience
- Audio-in to enjoy music from iPod/iPhone/MP3 player
- Optional dock for convenient playback from your iPod/iPhone
- DivX Plus HD Certified for high-definition DivX playback
- Smart TV to enjoy online services and access multimedia on your TV
- Turn your Smartphone into a remote for Philips AV products
- Optional Wi-Fi accessory to wirelessly connect to Internet

Designed to enhance your cinema at home

- Modern design to complement your home environment

PHILIPS

Highlights

600 W RMS power




600 W RMS power delivers great sound for movies and music

Full HD 3D Blu-ray



Be enthralled by 3D movies in your own living room on a Full HD 3D TV. Active 3D uses the latest generation of fast switching displays for real life depth and realism in full 1080 x 1920 HD resolution. Watching these images through special glasses with right and left lenses that are timed to open and close in synchrony with alternating images creates the full HD 3D viewing experience in your home cinema. Premium 3D movie releases on Blu-ray offer a wide, high-quality selection of content. Blu-ray also delivers uncompressed surround sound for an unbelievably real audio experience.

Dolby TrueHD and DTS-HD

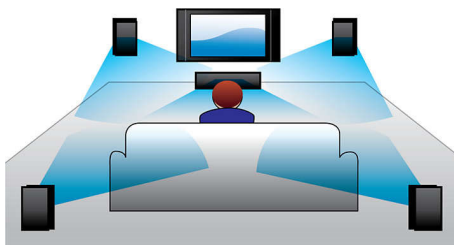

Dolby TrueHD and DTS-HD Master Audio Essential deliver the finest sound from your Blu-ray Discs. Audio reproduced is virtually indistinguishable from the studio master, so

you hear what the creators intended for you to hear. Dolby TrueHD and DTS-HD Master Audio Essential complete your high definition entertainment experience.

DivX Plus HD Certified



DivX Plus HD on your Blu-ray player and/or DVD player offers the latest in DivX technology to let you enjoy HD videos and movies from the Internet directly on your Philips HDTV or PC. DivX Plus HD supports the playback of DivX Plus content (H.264 HD video with high-quality AAC audio in an MKV file container) while also supporting previous versions of DivX video up to 1080p. DivX Plus HD for true HD digital video.

Smart TV



Philips home theatre and Blu-ray player with Smart TV offer you an array of enhanced features, including Net TV, SimplyShare and MyRemote. Net TV brings a wide range of online information and entertainment to your TV for services like video-on-demand. With SimplyShare, you can access photos, music and movies stored on your PC from the comfort of your sofa. You can also use your smartphone/tablet to control your home theatre via the Philips MyRemote app.

Optional Wi-Fi accessory

Optional Wi-Fi accessory to wirelessly connect to Internet

Optional dock



Attach this dock to your home theatre system and you can enjoy your music, videos and pictures from your iPod devices and iPhone. Dock is sold as an optional accessory.

EasyLink



EasyLink lets you control multiple devices like DVD players, Blu-ray players, soundbar speakers, Home theatre systems and TVs etc. with one remote. It uses HDMI CEC industry-standard protocol to share functionality between devices through the HDMI cable. With one touch of a button, you can operate all your connected HDMI CEC-enabled equipment simultaneously. Functions like standby and play can now be carried out with absolute ease.

Audio in



Audio-in allows you to easily play your music directly from your iPod/iPhone/iPad, MP3 player or laptop via a simple connection to your home cinema. Simply connect your audio device to the Audio-in jack to enjoy your music with the superior sound quality of the Philips home cinema system.



Specifications

Sound

- Sound Enhancement: Night Mode, Treble and Bass Control
- Sound System: Dolby Digital 5.1, Dolby Digital Plus, Dolby True HD, DTS Digital Surround, DTS-HD High Resolution Audio, DTS-HD Master Audio Essential
- Subwoofer output power: 100 W
- Equalizer settings: Gaming, Movie, Music, News, Original
- Centre speaker output power: 100 W
- Satellite speaker output power: 4 x 100 W
- Total Power RMS @ 30% THD: 600 W

Loudspeakers

- Loudspeaker types: 1 x Centre speaker, 4 x Satellite speakers
- Centre speaker drivers: 1 x 2.5" woofers
- Satellite speaker freq range: 150–20k Hz
- Satellite speaker impedance: 4 ohm
- Subwoofer freq range: 20–150 Hz
- Centre speaker impedance: 4 ohm
- Subwoofer driver: 1 x 5.25" woofer
- Subwoofer type: Passive
- Centre speaker freq. range: 150–20k Hz
- Drivers per Satellite speaker: 1 x 2.5" woofer
- Subwoofer impedance: 4 ohm

Connectivity

- Front Connections: Music iLINK, USB/Wi-Fi slot
- Rear Connections: AUX IN 1, Click-fit Speaker Connectors, Composite video (CVBS) output, Digital coaxial in, Digital optical in, Ethernet, FM Antenna Socket, HDMI 1.4 output (ARC), iPod/iPhone Dock Jack, SD/SDHC Card slot
- Smart TV: MyRemote, Net TV

Tuner/Reception/Transmission

- Tuner Bands: FM
- Number of Pre-set Channels: 40

Convenience

- EasyLink (HDMI-CEC): 21:9 format subtitle support, Audio Return Channel, Automatic audio input mapping, Dynamic Lipsync, One touch play, One touch standby, Remote Control-Passthrough, System standby
- HDMI Features: 3D, Audio Return Channel (ARC), Content Type, Deep colour

Power

- Power consumption: 110 W
- Power supply: 220-240 V, 50 Hz
- Standby power consumption: < 0.9 W

Accessories

- Compatible accessories: DCK3061 Dock for iPod/

iPhone, STS3001 Speaker stand, WUB1110 Wi-Fi USB Adaptor

- Included accessories: 2 x AAA Batteries, FM antenna, Power cord, Quick start guide, Remote Control, Safety and Legal Leaflet, Trademarks Sheet, World Wide Warranty leaflet

Dimensions

- Main Unit (W x H x D): 360 x 58 x 325 mm
- Weight incl. Packaging: 9 kg
- Main Unit Weight: 2.4 kg
- Packaging (W x H x D): 520 x 310 x 377 mm
- Centre Speaker (W x H x D): 159 x 84.5 x 80 mm
- Centre Speaker Weight: 0.35 kg
- Centre Speaker cable length: 2 m
- Front Speaker (W x H x D): 84.5 x 159 x 80 mm
- Subwoofer (W x H x D): 160 x 267.5 x 265 mm
- Front Speaker Weight: 0.35 kg
- Subwoofer Weight: 2.5 kg
- Front Speaker cable length: 3 m
- Rear Speaker (W x H x D): 84.5 x 159 x 80 mm
- Rear Speaker Weight: 0.35 kg
- Rear Speaker cable length: 7 m
- Subwoofer cable length: 3 m

Audio Playback

- Compression format: AAC, MP3, WAV, WMA
- MP3 bit rates: 32 - 320 kbps

File Format

- Audio: aac, mka, mp3, wma
- Video: avi, DivX, mkv, mp4, mpeg, mpg
- Picture: GIF, JPEG, JPG

Picture/Display

- Picture enhancement: HD (720p, 1080i, 1080p/24fps), Progressive scan, Video upscaling

Optical Playback Media

- Playable Discs: AVCHD, BD, BD R/BD RE, CD, CDDA, CD-R/CD-RW, DVD, DVD +R/+RW, DVD -R/-RW, SVCD, VCD

Still Picture Playback

- Compression format: GIF, JPEG, JPEG HD, JPEG Progressive, PNG
- Picture Enhancement: Rotate, Slideshow with music playback, Zoom

Sustainability

- Packaging: Electronic User Manual

Video Playback

- Compression formats: DivX Plus HD, MPEG1, MPEG2, MPEG4



Issue date 2024-05-02

Version: 3.2.12

EAN: 87 12581 62097 4

© 2024 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com