



Philips
Car coaxial speaker

12.7 cm (5")

2-way
180 W Peak



CSP515

Your mobile music theatre

with 2-way stereo for vivid sound

Feel your music with the Philips Car stereo speakers CSP515. These 13 cm 2-way speakers have peak power at 180 W, and feature a light polypropylene cone with a soft PEI dome tweeter so you can enjoy vivid music details in clear sound.

Vivid sound on the road

- 35 W RMS power handling
- Light polypropylene cone for clear sound delivery
- Soft PEI dome tweeter for warm and textured tones
- Sensitive cloth surround for maximum sound details
- Strong ferrite magnet for high power performance

High durability, sustainable performance

- Sturdy polypropylene cone for all-weather performance
- Stylish speaker grille protects against damage
- Endurance and performance stability in extreme conditions

Easy to use and install

- Fits perfectly in all 13 cm speaker openings
- Simple wires plug-in for designated speaker terminals

PHILIPS


Highlights

Light polypropylene cone




Inside the speaker, a diaphragm sits on top of a voice coil to produce a signal waveform once an input signal is received. It transforms the signal wave into a sound wave. Polypropylene is one of the lightest plastics ever invented and is great material for speaker diaphragms due to its weight, high strength, stiffness and tolerance of high temperatures. These polypropylene cones deliver high quality music by reacting to even the smallest sound signal to produce clear, vivid sound.

Sensitive cloth surround

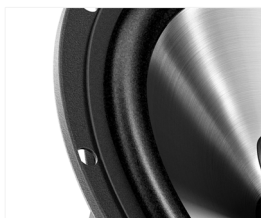

A highly sensitive cloth connects the woofer diaphragm to the speaker frame to form a surround suspension system. When a sound signal reaches the cone inside the woofer, the cloth surround assembly brings the cone back into position so it's ready to receive another sound signal. By doing so, the woofer can capture every signal with minimum distortion, giving you clear, smooth sound no matter how loudly or how quietly the music is played.

Soft PEI dome tweeter

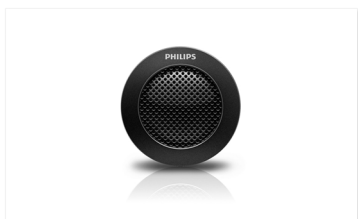

PEI (Polyetherimide) is the ideal material for tweeter domes due to its light weight, high tensile strength,

high stability and tolerance for high temperatures. Inside the tweeter, the small diaphragm (the dome opening) produces high frequency tones. These PEI domes can capture even the highest musical notes to make your music textured with warm, full-range treble. The dome shape also spreads the sound around so that you can hear the high notes from every seat in the car.

Strong ferrite magnet



Ferrite is a lightweight but strong material with a permanent and coherent magnetic field. It is the key speaker component that induces the movement of the voice coil and the diaphragm. When an input signal is received, the voice coil acts as an electromagnet that causes the woofer and tweeter diaphragm to either attract or repel. The ferrite magnet produces an even magnetic field for smooth diaphragm movement, ensuring sound output with lower distortion. Using such a stable and highly coercive magnet like ferrite, the voice coil can produce loud sounds while keeping the tone smooth.

Stylish speaker grille



The speaker grille has been designed to give cars the look of luxury. Composed of two parts — a detachable metal mesh casing and a plastic ring. When installed over the speaker, it fully covers the tweeter dome and speaker cone. Hard and durable, it protects the speakers from accidental kicks and curious fingers, both of which can be damaging to their sound performance.

Specifications

Sound

- Output power (RMS): 35 W
- Peak Music Power: 180 W
- Frequency response: 45-30 k Hz
- Impedance: 4 Ohms

Loudspeakers

- Speaker type: Coaxial speaker
- Number of ways: 2-way
- Speaker size: 13 cm (5.25")
- Number of Loudspeakers: 2

Woofer

- Diaphragm: Cone
- Diaphragm material: Polypropylene
- Surround: Cloth
- Voice coil: Single
- Voice coil material: Copper
- Magnet: Ferrite
- Damper: Conex

Tweeter

- Size: 38 mm (1-1/2")
- Diaphragm: Dome
- Diaphragm material: PEI
- Magnet: Neodymium

Accessories

- Speaker grille: With metal net
- Quick start guide: English, Spanish, Portuguese, Russian
- Cables: Speaker wires

Dimensions

- Product dimensions (W x H x D):
159 x 67 x 159 mm
- Mounting depth: 47 mm
- Tweeter protrusion: 4 mm



Issue date 2014-03-12

Version: 1.0.5

12 NC: 8670 001 03681
EAN: 06 92341 07211 64

© 2014 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com