




Philips  
Portable speaker

Blue

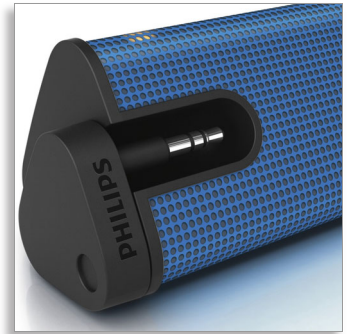

SBA1610BLU

## Mobile speaker

Filling your world with rich, dynamic sound, Philips SBA1610 speakers come with a handy mobile stand that makes them incredibly easy to use.

### Impressive sound

- Class "D" Digital Amplifier for superb sound quality
- Neodymium speaker drivers deliver pure balanced sound
- 2W RMS total output power

### Designed for grab and go

- Music on the go
- Up to 8 hours music playback

### Simplicity

- Battery powered for portability
- Compatible with any media

# PHILIPS

Portable speaker  
Blue

# Specifications

## Product dimensions

- Product dimensions (W x H x D):  
16,3 x 4,9 x 5 cm
- Product dimensions (W x H x D):  
6,4 x 1,9 x 2,0 inch
- Weight: 0,169 kg
- Weight: 0,373 lb

## Compatible with

- Smartphones
- iPod
- iPhone
- Mp3 player

## Design and finishing

- Color: Blue

## Sound

- Frequency response: 350 - 16,000 Hz
- Impedance: 4
- RMS Power rating: 2 W


## Power

- Battery type: AAA
- Operating time on battery: 12 hr
- Number of batteries: 3

SBA1610BLU/00

# Highlights

## Class D Digital Amplifier

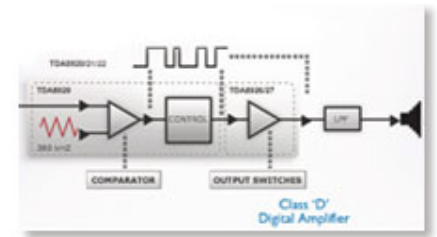

Class 'D' Digital Amplifier takes an analog signal, converts it into a digital signal and then amplifies the signal digitally. The signal then enters a demodulation filter to give the final output. The amplified digital output delivers all the advantages of digital audio, including improved sound quality. In addition, Class 'D' Digital Amplifier has greater than 90% efficiency compared to traditional AB amplifiers. This high efficiency translates into a powerful amplifier with a small footprint.



Issue date 2020-07-08

Version: 2.0.8

12 NC: 8670 000 93226  
EAN: 69 23410 71685 6

© 2020 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)