




Philips  
In.Sight wireless HD home  
monitor

## Wi-Fi and HD

Wide angle, Night vision  
Dual pack  
Powered by Ivideon

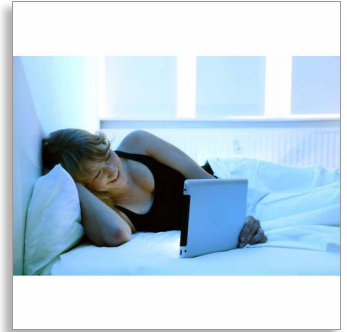

M120G



Watch over your home from your smartphone/tablet

With HD and night vision

Keep an eye on home with the In.Sight wireless HD home monitor via your smartphone/tablet. With HD video and night vision, it lets you see clearly your home in daylight/darkness. It's easy to set up and will alert you when it detects motion/sound.

### Stay close to loved ones when you're on the move

- Wi-Fi enabled for placement anywhere in your home
- Unlimited live viewing via Wi-Fi/3G/4G LTE
- Extra-wide-angle lens to let you see more
- In.SightHD app available on Apple store and Google Play
- Night vision mode for viewing in the dark

### Alerts and notifications for ultimate peace of mind

- Phone receives notification when motion/sound is detected
- Push to talk via smartphone/tablet
- Share monitors with other smartphone/tablet users
- Optional cloud video recording when sound/motion is detected

### Easy, safe and secure

- Easy setup of monitor via QR code
- Video encrypted for secure connection
- Powered by Ivideon, a leading firm in video cloud solutions

**PHILIPS**

# Highlights

## Wi-Fi enabled



The In.Sight wireless monitor is a Wi-Fi enabled monitor. It uses your home wireless network to stream live video and audio to your smartphone/tablet. A home monitor that you can set up anywhere you like.

## Night vision mode



Infrared night vision mode allows you to watch your home even in the dark. When it's dark, infrared light goes on so the monitor can capture clear black-and-white video. Night vision mode switches on and off automatically, or you can adjust it manually.

## Extra-wide-angle lens



Philips In.Sight wireless HD home monitor M120 boasts a viewing angle of 102 degrees that shows you more of the room at once, letting you see a lot more than other monitors.

## Easy set-up via QR code



Setup is simple with the In.Sight+ app. The app will generate a QR code for your home Wi-Fi settings. With the QR code, the monitor will automatically pair with your Wi-Fi network, easily and instantly.

## Motion/sound notifications



It's impossible to predict when something might happen. In.Sight keeps watching with adjustable motion and sound detection. You will be notified automatically when sound or motion is detected.

## Push to talk

With the In.Sight monitor, not only can you keep an eye on your home, but you can also talk to your loved ones. Simply press "talk" on your smartphone/tablet and communicate at once. What a great way to say hello!

## Share with others

Allow your family and friends to view your monitors and let them watch your home for you. The In.Sight+ app lets you share each monitor with other users so that they have access to live video.



# Specifications

## Lens and Sensor

- Sensor: HD 720p
- Focus mode: Fixed
- View angle: 102 degrees
- Focus range: 0.8 M to infinity
- Ambient light sensor: Yes, day/night mode
- Night mode: Infra-Red

## Video Quality

- HD/VGA/QVGA streaming
- Formats: H.264 video compression
- White Balance: Automatic white balance
- Exposure: Automatic exposure control

## Features

- Wi-Fi: 802.11 b/ g/ n (2.4 GHz)
- Motion detection
- Noise detection
- LED indicator
- Night Vision
- Base: Direction adjustable

## Software

- App name: InSightHD
- Installation: via App for Android and Apple
- Automatic App update: Yes, for Android and Apple

- System supported: Android 2.3 or above, iOS6 or above
- iPad compatibility: iPad 2 and later
- iPhone compatibility: iPhone 4S and later
- iPod compatibility: iPod Touch 4th gen and later
- Android phone compatibility: Philips recommends Samsung Galaxy S3 performance phones or better

## Accessories included

- USB power adapter: 2
- USB cable: 2, 3m each
- Wall mount: 2
- Screws/wall anchors: 4
- Quick Start Guide

## Input and Output

- Microphone: Highly sensitive, Mono
- USB: Mini-USB port
- Speaker: Built-in

## Dimensions

- Packaging dimensions (W x H x D):  
158 x 160 x 115 mm
- Product dimensions (W x H x D):  
65 x 114 x 65 mm



Issue date 2014-11-28

Version: 6.0.5

12 NC: 8670 001 07221  
EAN: 08 71258 16988 12

© 2014 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)