



Philips
SoundStage speaker

2.1 CH Integrated subwoofer

Bluetooth® and NFC
HDMI ARC

HTL4110B



Powerful sound to enhance any TV

with integrated subwoofer

NFC for one touch Bluetooth® pairing allows effortless music listening. This Philips SoundStage speaker is a perfect match for your TV; simply place it on top. Let it boost your TV, DVD player, game console or MP3 player.

Connect and enjoy all your entertainment

- EasyLink to control all HDMI CEC devices via a single remote
- Audio-in to enjoy music from iPod/iPhone/MP3 player
- Enjoy MP3/WMA music directly from your portable USB devices
- Works with TVs, BD/DVD players, gaming consoles, MP3 players
- One-Touch with NFC-enabled smartphones for Bluetooth pairing
- Bluetooth wireless music streaming from your music devices

Designed for simplicity

- Perfect match with your TV, just place it on top
- Volume knob for easy control


Richer sound for watching TV and movies

- Virtual Surround Sound for a realistic movie experience
- Dolby Digital for ultimate movie experience
- Integrated subwoofer for powerful bass

PHILIPS


Highlights

Virtual Surround Sound

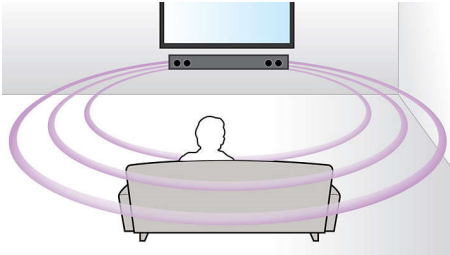

Philips Virtual Surround Sound produces rich and immersive surround sound from a less than five-speaker system. Highly advanced spatial algorithms faithfully replicate the sonic characteristics that occur in an ideal 5.1-channel environment. Any high quality stereo source is transformed into true-to-life, multi-channel surround sound. No need to purchase extra speakers, wires or speaker stands to appreciate room-filling sound.

Dolby Digital

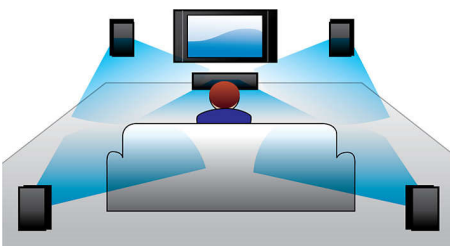


Because Dolby Digital standards, the world's leading digital multi-channel audio standards, make use of the way the human ear naturally processes sound, you experience superb quality surround sound audio with realistic spatial cues.

Integrated subwoofer

An integrated subwoofer gives the SoundStage the power it needs to boost TV bass without taking up any additional space. It also features a wide range of Dynamic Bass enhancements that improve the impact of bass in a film or music. By integrating the subwoofer, the

SoundStage provides bass without the mess of an external unit.

Bluetooth wireless streaming

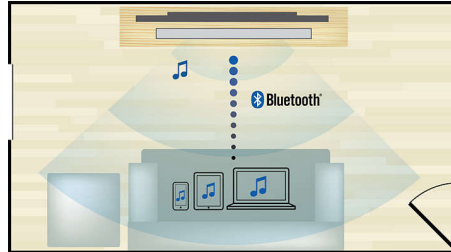

Bluetooth wireless music streaming from your music devices

NFC technology



Pair Bluetooth devices easily with one-touch NFC (Near Field Communications) technology. Just tap the NFC-enabled smartphone or tablet on the NFC area of a speaker to turn the speaker on, start Bluetooth pairing and begin streaming music.

USB



Enjoy MP3/WMA music directly from your portable USB devices

Audio in



Audio-in allows you to easily play your music directly from your iPod/iPhone/iPad, MP3 player or laptop via a simple connection to your home cinema. Simply connect your audio device to the Audio-in jack to enjoy your music with the superior sound quality of the Philips home cinema system.

Works with multiple devices

Works with TVs, BD/DVD players, gaming consoles, MP3 players

EasyLink



EasyLink lets you control multiple devices like DVD players, Blu-ray players, soundbar speakers, Home theatre systems and TVs etc. with one remote. It uses HDMI CEC industry-standard protocol to share functionality between devices through the HDMI cable. With one touch of a button, you can operate all your connected HDMI CEC-enabled equipment simultaneously. Functions like standby and play can now be carried out with absolute ease.

Specifications

Sound

- Sound Enhancement: Virtual Surround Sound, Treble and Bass Control, Night Mode, Audio sync
- Sound System: Dolby Digital
- Subwoofer output power: 40 W
- Speaker output power: 20 W x 2
- Total Power RMS @ 10% THD: 80 W

Loudspeakers

- Loudspeaker types: Integrated with main unit
- Subwoofer type: Integrated subwoofer
- Speaker Drivers per side: 1 woofer, 1 x 1" tweeter
- Speaker Impedance: 4 ohm

Connectivity

- Front/Side connections: Audio in, USB
- Integrated Connections: Bluetooth, NFC
- Rear Connections: Digital coaxial in, Digital optical in, AUX in, HDMI 1.4 output (ARC)
- iPod/iPhone: via 3.5 mm Audio In, via Bluetooth

Outer Carton

- EAN: 87 12581 69976 5
- Length: 80 cm
- Number of consumer packages: 1
- Width: 37.2 cm
- Gross weight: 8.61 kg
- Height: 14.4 cm
- Net weight: 6.595 kg
- Tare weight: 2.015 kg

Convenience

- EasyLink (HDMI-CEC): Audio Return Channel, Automatic audio input mapping, One touch play, One touch standby, Remote Control-Passthrough, System standby
- HDMI Features: Audio Return Channel (ARC), Content Type

Power

- Power consumption: 20 W
- Power supply: 50/60 Hz, 110-240V
- Standby power consumption: < 0.5 W

Packaging dimensions

- Height: 14.4 cm
- Packaging type: Carton
- Type of shelf placement: Laying
- Width: 80 cm
- Depth: 37.2 cm
- Number of products included: 1
- EAN: 87 12581 69976 5
- Gross weight: 8.61 kg
- Net weight: 6.595 kg
- Tare weight: 2.015 kg

Product dimensions

- Height: 7.8 cm
- Width: 70.06 cm
- Depth: 32.5 cm
- Weight: 6.3 kg

Accessories

- Included accessories: 1 x CR2025 Battery, Power cord, Quick start guide, Remote Control, Safety and Legal Leaflet, Trademarks Sheet, World Wide Warranty leaflet, User Manual

Dimensions

- Main Unit (W x H x D): 701 x 68 x 325 mm
- Weight incl. Packaging: 8.6 kg
- Main Unit Weight: 6.5 kg
- Packaging (W x H x D): 800 x 142 x 372 mm

Audio Playback

- Compression format: MP3, WMA



Issue date 2024-05-02

Version: 6.3.7

EAN: 87 12581 69976 5

© 2024 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com