



Philips  
Cordless phone

4.6 cm/1.8" TFT colour display  
Handset speakerphone

**D6301B**

## Bold sophistication

Exquisite design meets high performance in the Philips D630 Cordless Phone, featuring a large full-colour display, privacy settings, baby monitor and much more. HQ-Sound ensures stunning sound reproduction for clear conversations — always.

### Experience true convenience

- High contrast, 4.6 cm (1.8"), TFT colour display
- Black list, anonymous call, silence mode, call barring
- Baby monitor alerts you when baby needs your attention
- Assign a ringtone to a specific contact
- Three-field entries for assigning 3 numbers to one contact
- Up to 18 hours of talk time on a single charge
- Caller ID – so you always know who is calling\*

### Exceptional sound

- HQ-Sound: high quality acoustic engineering for superb sound
- MySound profiles to match your sound preference
- Freestanding handset with a speaker for easy hands-free calls

### Eco-conscious product

- Low radiation (ECO and ECO+ modes) and power consumption

# PHILIPS

Cordless phone  
4.6 cm/1.8" TFT colour display Handset speakerphone

D6301B/34

# Highlights

## 4.6 cm (1.8") TFT colour display

High contrast, 4.6 cm (1.8"), TFT colour display

## Baby monitor function

Receive an alert when your baby needs you. Just place the DECT handset in the baby's room and receive an alert on your base or on another DECT phone (i.e. another landline number) or mobile phone (when you're out) when the baby starts to cry.

## Caller ID\*




Sometimes it's good to know who's calling before you answer. And our Caller ID lets you keep track of who's on the other end of the line.

## Eco-conscious model with ECO+



Philips phones are energy efficient and designed to be respectful to the environment. When ECO mode is activated, the emitted radiation is reduced by up to 60%, and up to 95% when the phone is charging. With ECO+ mode activation, the radiation drops to zero.

## Extended privacy settings

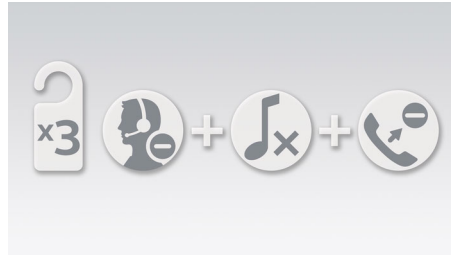


Black list restricts receiving calls from specific numbers or starting with certain digits, keeping unwanted calls away — you can block 4 sets of numbers. Anonymous call restricts incoming calls with hidden numbers, which are sometimes used by telemarketers. You can also set the phone to not ring so that you are not disturbed. With silence mode, you can disable the ringtone at specific times to enjoy peace and quiet. Thanks to call barring, you can avoid being surprised by expensive phone bills by blocking calls to specific numbers that start with certain digits (for example, pay-per-call numbers).

## Handset speakerphone




Hands-free mode uses a built-in loudspeaker to amplify the voice of the caller, allowing you to speak and listen during a call without holding the phone to your ear. This is especially useful if you want to share the call with others or simply multitask.

## HQ-Sound

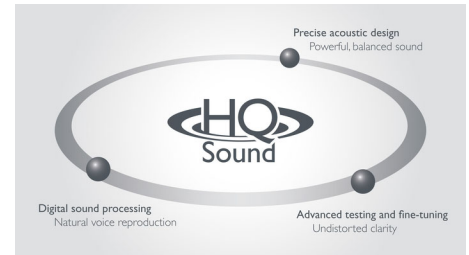

Philips cordless phones with HQ-Sound build upon decades of experience and breakthrough innovations in developing Hi-Fi audio products and high-end headphones to deliver excellent voice clarity on our DECT phones. When it comes to improving sound quality, our acoustics engineers and architects have thought of everything — high-quality components, digital signal processing, precise acoustic design, advanced testing and fine-tuning. The result is sound that is crisp, clear and authentic. Sound so good and natural, it is almost like being there in person.

## MySound profiles

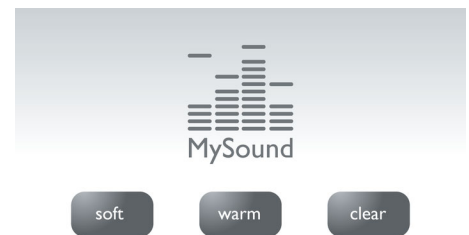

Sound perception is subjective, and everyone has their own listening preference. MySound brings personality back to every conversation by allowing you to choose the audio profile that best matches your sound preferences: Clear—to make voices sound crisper and clearer; Soft—for friendly, softer tones; Warm—to make voices sound welcoming and warm.

# Specifications

## Sound

- Sound Profile: MySound
- Volume control on handset
- Ringtones on handset: 10 HQ ringtones
- HQ-Sound

## Picture/Display

- Display size: 4.6 cm/1.8"
- Display type: TFT colour 262K
- Backlight: Yes
- Backlight colour: White

## Convenience

- Menu structure in the handset: Icon Menu
- Speakerphone — talk hands-free
- Personalisation: Silent mode
- Call barring: Restrict the phone from making specific outgoing calls
- Signal strength indicator: 3 bar indicator
- Battery level indicator: 3 bar battery icon
- Room monitoring
- Date/Time display
- Alarm Clock
- Event light on the handset
- Programmable hot keys: Keys 1 to 9
- Call Management: Call Waiting\*, Caller ID\*, Microphone mute, Missed Calls, Received Calls, Dialed calls
- Keypad lock
- Key tone on/off
- Auto Registration
- Auto hang up
- Number of keys: 22
- Backlit keypad: White
- Illuminated keypad
- Enlarge dialling digit
- Base Station keys: Paging key
- Up to 18 hrs talk time
- Up to 250 hrs standby time
- Charge time: 8 hours
- Line cord length: 1.8 m
- Power cord length: 1.8 m
- Range: Open field <300 m; indoor <50 m
- Block callers/Blacklist\*: Restrict the phone from

- ringing on specific incoming numbers
- Event notifications: for voice messages, missed calls and mute on
- Non-slip grip: Ripple
- Visual ringer
- Call block: Anonymous call, Black list

## Memory Capacity

- VIP Caller Identification
- Phonebook: 100 names and numbers
- Redial List Capacity: Last 20 numbers
- Call log entries: 50 entries
- Phonebook store in the base
- Multiple phonebook entries: up to 3 numbers

## Power

- Battery Capacity: 650 mAh
- Battery type: AAA NiMH Rechargeable
- Mains power: AC 100-240 V ~50/60 Hz
- Power Consumption: <0.7 W

## Security

- Transmission encryption: Yes

## Network Features

- Compatible: GAP

## SAR Value

- Philips handsets: <0.1 W/kg

## Eco Design

- EcoMode: automatic and manual
- Eco+

## Packaging dimensions

- Packaging type: Carton
- Number of products included: 1
- Type of shelf placement: Laying
- Packaging dimensions (W x H x D): 18.4 x 13.5 x 5.9 cm
- Gross weight: 0.363 kg
- Net weight: 0.285 kg
- Tare weight: 0.078 kg
- EAN: 48 95229 10661 1



Issue date 2022-07-20

Version: 3.1.1

12 NC: 8670 001 65339  
EAN: 48 95229 10661 1

© 2022 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)

\* \*\*This feature requires additional subscription to Caller ID service.  
Please check with your local network operator for details.