

Philips
DVD player

USB 2.0

TAEP200



Enjoy it all - from DVD & USB

Your dream player with flawless, true-to-life picture quality and the ability to play virtually any disc! The Philips DVD player TAEP200 delivers your movies and music entertainment experience.

Play all your movies and music

- Plays CD, (S)VCD, DVD, DVD+R/RW, DVD-R/RW

Bring audio and video to life

- 12-bit/108MHz video processing for sharp and natural images
- Screen Fit for optimal viewing every time
- Smart Picture provides personalized image settings

Connect and enjoy multiple sources

- USB Media Link for media playback from USB flash drives

PHILIPS

DVD player
USB 2.0

TAEP200/12


Highlights

12-bit/108MHz video processing



12-bit Video DAC is a superior Digital-to-Analogue-Converter that preserves every detail of the authentic picture quality. It shows subtle shades and smoother graduation of colors, resulting in a more vibrant and natural picture. The limitation of the usual 10bit DAC become in particular apparent while using large screens and projectors.


Plays it all

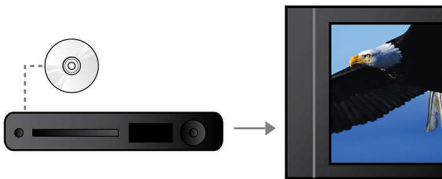

Play virtually any disc you want - whether they be CDs, (S)VCDs, DVDs, DVD+R, DVD-R,


DVD+RW or DVD-RW. Experience unbeatable flexibility and the convenience of playing all your discs on one device.

Screen Fit

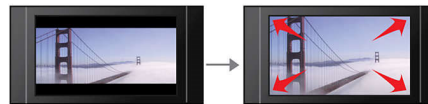


Whatever you're watching, and on any TV, Screen Fit ensures that the picture fills the whole screen. Annoying black bars on the top and bottom are eliminated, without any tedious manual adjustments to make. Simply press the Screen Fit button, choose the format and enjoy your movie in full-screen

USB Media Link

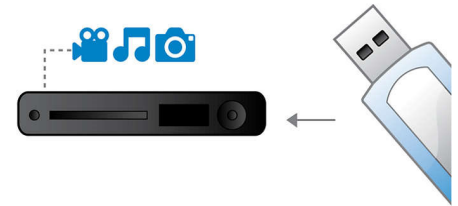

The Universal Serial Bus or USB is a protocol standard that is conveniently used to link PCs, peripherals and consumer electronic equipment. With USB Media Link, all you have to do is plug in your USB device, select the movie, music or photo and play away.

Smart Picture

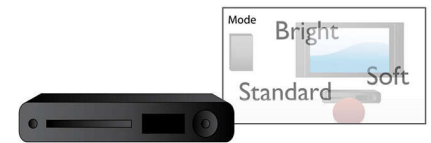

Smart Picture provides the optimum picture settings for color, brightness, saturation, contrast, sharpness, and so on, to enhance your overall viewing experience at all times.

12-bit
Video DAC

CERTIFIED
USB

SMART PICTURE

HDMI™
HIGH-DEFINITION MULTIMEDIA INTERFACE

Specifications

Sound

- Crosstalk (1kHz): > 100 dB
- D/A converter: 24 bit, 192 kHz
- Frequency response: 30 - 20000 Hz
- Sound System: Dolby Digital
- Distortion and Noise (1kHz): <= -65 dB
- Dynamic Range (1kHz): > 90 dB
- Signal to noise ratio: >= 90 dB

Connectivity

- Front Connections: USB 2.0
- Rear Connections: Analog audio Left/Right out, Composite video (CVBS) output, HDMI output

Outer Carton

- Length: 51.2 cm
- Number of consumer packagings: 8
- Width: 33.5 cm
- Gross weight: 10.6 kg
- Height: 26 cm
- GTIN: 1 48 95229 10444 7
- Nett weight: 7.6 kg
- Tare weight: 3 kg

Convenience

- Child Protection: Child Lock, Parental Control

Power

- Power consumption: 15 W
- Power supply: 100-240V, 50/60 Hz
- Standby power consumption: < 0.5 W

Packaging dimensions

- Height: 24.4 cm
- Packaging type: Box
- Type of shelf placement: Standing
- Width: 24.7 cm
- Depth: 8 cm
- Number of products included: 1
- EAN: 48 95229 10444 0
- Gross weight: 1.25 kg
- Nett weight: 0.95 kg
- Tare weight: 0.3 kg

Product dimensions

- Height: 4.3 cm
- Width: 22.5 cm
- Depth: 19.6 cm
- Weight: 0.82 kg

Accessories

- Included accessories: 2 x AAA Batteries, Audio/Video cable, Remote Control, Quick start guide, World Wide Warranty leaflet, Safety warranty sheet

Design

- Color: Black

Audio Playback

- Audio supported formats: MP3, WMA
- MP3 bit rates: 16 kbps - 320 kbps
- WMA bit rates: 16 kbps - 320 kbps

File Format

- Audio: mp3, wma
- Video: avi, mpg
- Picture: JPG, JPEG

Picture/Display

- D/A converter: 12 bit, 108 MHz
- Picture enhancement: Video upsampling

Optical Playback Media

- Playable Discs: CD, CDDA, CD-R/CD-RW, DVD, DVD +R/+RW, DVD -R/-RW, SVCD, VCD

Still Picture Playback

- Compression format: JPEG
- Picture Enhancement: Flip photos, Rotate, Slideshow, Slideshow with MP3 playback, Zoom

Video Playback

- Audio format: Dolby Digital, WMA, MP3
- Video disc playback system: NTSC, PAL, AUTO
- Video supported formats: MPEG1, MPEG2



Issue date 2024-05-09

Version: 6.6.1

EAN: 48 95229 10444 0

© 2024 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com

* The terms HDMI, HDMI High-Definition Multimedia Interface, HDMI Trade Dress and the HDMI Logos are trademarks or registered trademarks of HDMI Licensing Administrator, Inc.