

Philips
Soundbar speaker

2.1 CH wireless subwoofer
Bluetooth® and NFC
HDMI ARC
200W

HTL3140S



Powerful sound for any TV

with wireless subwoofer

Get amazing virtual surround sound from your TV via just one cable! In addition to movies, you can also enjoy top quality Music iLink MP3 playback from your mobile devices.

Connect and enjoy all your entertainment

- EasyLink to control all HDMI CEC devices via a single remote
- Enjoy MP3/WMA music directly from your portable USB devices
- Works with TVs, BD/DVD players, gaming consoles, MP3 players
- One-touch with NFC-enabled smartphones for Bluetooth pairing
- Audio in to enjoy music from iPod/iPhone/MP3 player
- Stream music wirelessly via Bluetooth™ from your smartphone

Designed for simplicity

- Low-rise profile for the perfect fit in front of your TV
- Flexible placement on the wall, tabletop or stand

Richer sound for watching TV and movies

- Virtual Surround Sound for a realistic movie experience
- Dolby Digital for ultimate movie experience
- Twin tweeters for optimum clarity performance
- External subwoofer adds thrill to the action


PHILIPS

Soundbar speaker
2.1 CH wireless subwoofer Bluetooth® and NFC, HDMI ARC, 200W

HTL3140S/12


Highlights

Virtual Surround Sound

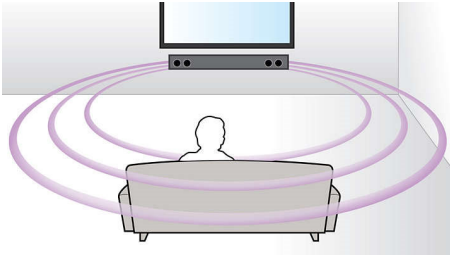

Philips Virtual Surround Sound produces rich and immersive surround sound from less than five-speaker system. Highly advanced spatial algorithms faithfully replicate the sonic characteristics that occur in an ideal 5.1-channel environment. Any high quality stereo source is transformed into true-to-life, multi-channel surround sound. No need to purchase extra speakers, wires or speaker stands to appreciate room-filling sound.

Dolby Digital

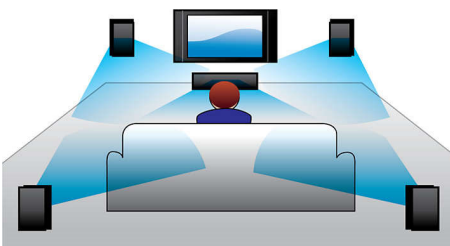

Because Dolby Digital, the world's leading digital multi-channel audio standards, make use of the way the human ear naturally processes sound, you experience superb quality surround sound audio with realistic spatial cues.

Twin tweeters (HC 1212)

Twin tweeters for optimum clarity performance

USB



Enjoy MP3/WMA music directly from your portable USB devices

Works with multiple devices

Works with TVs, BD/DVD players, gaming consoles, MP3 players

Audio in



Audio in allows you to easily play your music directly from your iPod/iPhone/iPad, MP3 player, or laptop via a simple connection to your Philips home cinema system. Simply connect your audio device to the Audio in jack to enjoy your music with the superior sound quality of the Philips home cinema system.

EasyLink



EasyLink lets you control multiple devices like DVD players, Blu-ray players, soundbar speaker, Home theater and TV's etc. with one remote. It uses HDMI CEC industry-standard protocol to share functionality between devices through the HDMI cable. With one

touch of a button, you can operate all your connected HDMI CEC enabled equipment simultaneously. Functions like standby and play can now be carried out with absolute ease.

Low-rise profile




Low-rise profile for the perfect fit in front of your TV

One-touch with NFC



Pair Bluetooth® devices easily with one-touch NFC (Near Field Communications) technology. Just tap the NFC enabled smartphone or tablet on the NFC area of a soundstage to turn the soundstage on, start Bluetooth® pairing, and begin streaming music.

Flexible placement

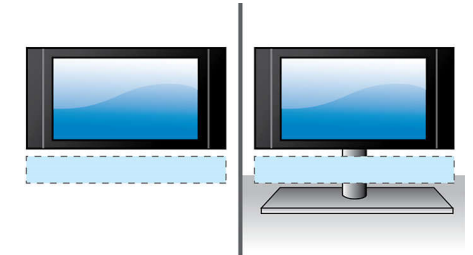

Enjoy the versatility of this home theater system that allows you to place it where you will. Whether on a TV stand, on a table or mounted on a wall, the product looks sensational and functions without compromise. For once, you get to control how your home looks without giving up an incredible home theater experience.



Specifications

Sound

- Sound Enhancement: Night Mode, Treble and Bass Control, Virtual Surround Sound
- Sound System: Dolby Digital
- Subwoofer output power: 120W
- Speaker output power: 2x 40 W
- Total Power RMS @ 10% THD: 200 W

Loudspeakers

- Loudspeaker types: Integrated with main unit
- Subwoofer freq range: 45 - 200 Hz
- Subwoofer driver: 1 x 5.25" woofer
- Subwoofer type: Wireless subwoofer
- Subwoofer impedance: 3 ohm
- Speaker Drivers per side: 1 woofer, 1 Mylar tweeter
- Speaker Impedance: 8 ohm
- Tweeter Impedance: 16 ohm

Connectivity

- Integrated Connections: Bluetooth, NFC
- Rear Connections: AUX in, Digital coaxial in, Digital optical in, HDMI 1.4 output (ARC)
- iPod/iPhone: via 3.5mm Audio In, via bluetooth
- Top connections: Audio In (3.5mm), USB 2.0

Convenience

- EasyLink (HDMI-CEC): Automatic audio input mapping, One touch play, One touch standby, Remote Control-Passthrough, System standby,

Audio Return Channel

- HDMI Features: Audio Return Channel (ARC), Content Type

Power

- Power consumption: 20 W
- Power supply: 110-240V, 50/60 Hz
- Standby power consumption: 0.5 W

Accessories

- Included accessories: Quick start guide, Remote Control, Safety & Legal Leaflet, Trademarks Sheet, User Manual, AAA Battery (x1), AC Adapter, 2 x Power cords

Design

- Wall mountable

Dimensions

- Main Unit (W x H x D): 843x 52x 60 mm
- Weight incl. Packaging: 8.2 kg
- Main Unit Weight: 1.4 kg
- Packaging (W x H x D): 400 x 292 x 349 mm
- Subwoofer (W x H x D): 226 x 251 x 306 mm
- Subwoofer Weight: 4.14 kg

Sustainability

- Packaging: Soya based ink, 80% recycled corrugated board



Issue date 2024-04-21

Version: 3.1.3

EAN: 87 12581 72118 3

© 2024 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com