




Philips  
Wireless AudioBoost TV  
headphones

15 mm drivers/closed-back  
In-ear

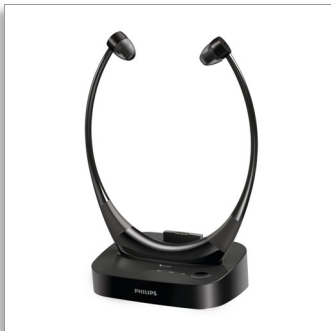

SSC5001

## Personalising your home-listening experience

Hear your TV louder and more clearly without disturbing others with the lightweight SSC5001 wireless AudioBoost TV headphones. Auto on/off and auto channel selection functions make life even more convenient.

### Designed for convenience

- Compatible with all TVs with optical and 3.5 mm audio input
- Plug & play design for easy setup
- Suitable for use with glasses and 3 eartips for comfort

### Perfect listening experience

- 15 mm neodymium drivers deliver clear and loud sound
- Digital Wireless connection for interference-free listening
- Left/right controls for a personalised experience
- Three equaliser options to suit your sound preference
- Ambient mode to amplify voices for better conversations
- High sound output enables you to hear louder and better

### Ease of use

- Auto switch on/off when headphones are worn/removed
- Auto tune the ideal connection
- Never run out of battery with the extra rechargeable battery

**PHILIPS**

# Highlights

## 15 mm neodymium drivers




15 mm neodymium drivers deliver clear and loud sound. A digital wireless connection delivers a high quality transmission ensuring the best sound in class.

## Ambient mode to amplify voices

Turn off TV sound with one button and the mic in the AudioBoost TV headphones will pick up voices and sounds in your environment and amplify them in your ears. Have clearer conversations with your family and hear your environment better.

## Auto switch on/off function

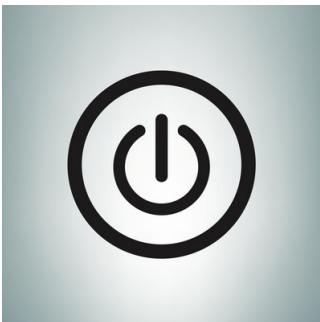

Never press a button to activate the AudioBoost TV headphones. A smart mechanism automatically detects whether or not they are being worn and switches them on or off automatically. Never worry about forgetting to turn off your headphones again.

## Auto tune function

Every time you wear the headset it will automatically turn on and choose the best


connection available for the best sound quality and connection. No more twisting and tweaking to find the best connection by yourself.

## Compatible with all TVs



The AudioBoost TV headphones are compatible with all TVs featuring a digital and analogue audio input.

## Digital Wireless connection

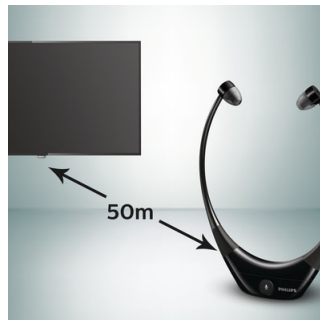

Enjoy an interference-free listening experience with the Digital Wireless connection. The digital wireless connection ensures a robust and secure connection with no interference

## Extra rechargeable battery

Two rechargeable batteries are included. Each has 5 hours of play time for a total time of 10 hours. Change to the second battery when the first battery is empty for continuous enjoyment.

## High output sound for clarity

High output neodymium drivers gives sound a boost so you hear everything as it is supposed to be.

## Separate left/right control



Enjoy extra loud sound with left and right balance and volume controls for a personalised experience.

## Three equaliser options



Everyone has their own sound preference, so you can choose from three EQ options to find the one that matches you the best for your TV enjoyment.

## Plug & play design

Plug & play design for easy setup

## Suitable for use with glasses

Suitable for use with glasses and 3 eartip styles for comfort

# Specifications

## Sound

- Acoustic system: Closed
- Magnet type: Neodymium
- Speaker diameter: 15 mm
- Frequency range: 15 - 21 000 Hz
- Impedance: 16 Ohm
- Maximum sound pressure level: 125 dB (1 kHz)

## Tuner/Reception/Transmission

- Channel selection: automatic
- Effective range: 50 m
- Reception frequency: 2400 - 2483 MHz
- SN: <75 dB at 1 kHz

## Convenience

- Automatic power off
- Base station features: LED indicator
- Battery charging indicator
- Operating time: ~5 hours
- Battery low indication

## Accessories

- Battery charger: recharging docking station
- Included accessories: Optical cable
- TV RCA Adapter: 3 sets

## Power

- Batteries included: rechargeable, Yes

- Number of batteries: 2
- Standby power consumption: 50 mA

## Packaging dimensions

- EAN: 69 51613 99272 2
- Packaging dimensions (W x H x D):  
24 x 32 x 9.5 cm
- Gross weight: 0.953 kg
- Net weight: 0.548 kg
- Number of products included: 1
- Packaging type: Carton
- Tare weight: 0.405 kg
- Type of shelf placement: Both

## Outer Carton

- Gross weight: 3.269 kg
- GTIN: 1 69 51613 99272 9
- Outer carton (L x W x H): 30.5 x 25.5 x 31.5 cm
- Net weight: 1.644 kg
- Number of consumer packages: 3
- Tare weight: 1.625 kg

## Product dimensions

- Product dimensions (W x H x D):  
15.6 x 22 x 10.2 cm
- Weight: 0.18 kg



Issue date 2023-04-07

Version: 9.0.9

12 NC: 8670 001 27992  
EAN: 69 51613 99272 2

© 2023 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)