



Philips  
Micro music system

**Bluetooth®**

CD, USB, FM  
70W max



**BTM2180**

# Rich and powerful sound

## Obsessed with sound

Listen to all your digital music from your Smartphone via Bluetooth. This Philips Micro system also plays MP3-CD and CD-R/RW, and features Bass Reflex speakers for powerful and dramatic bass.

### Enjoy your music from multiple sources

- Wireless music streaming via Bluetooth
- USB Direct for easy MP3 music playback
- Play MP3-CD, CD and CD-R/RW
- Audio-in for portable music playback

### Enrich your sound experience

- 70W RMS maximum output power
- Dome tweeter for detailed and natural sound
- Digital Sound Control
- Bass Reflex Speaker System delivers a powerful, deeper bass


### Easy to use

- Motorized CD loader for convenience access
- Digital tuning with preset stations for extra convenience

# PHILIPS

# Highlights

## Wireless music streaming

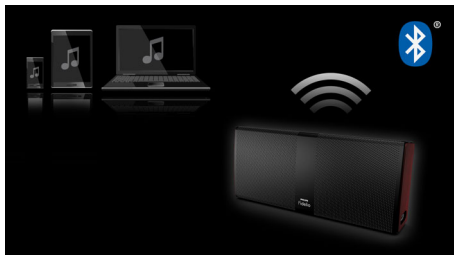

Bluetooth is a short range wireless communication technology that is both robust and energy-efficient. The technology allows easy wireless connection to iPod/iPhone/iPad or other Bluetooth devices, such as smartphones, tablets or even laptops. So you can enjoy your favorite music, sound from video or game wireless on this speaker easily.

## USB Direct for easy MP3 music



Thanks to the complete file transferability, you can easily enjoy the convenience and fun of accessing more digital music via the built-in USB Direct.

## Dome tweeter

Dome tweeters reproduce clear high and mid-range frequencies that enhance the overall sound clarity coming from the speakers. Delivering a harmonious blend of undistorted and uncolored wide-ranging sound, they offer detailed vocal clarity and instruments tone purity, thereby balancing the overall sound when paired with a combination of woofers.

## Audio-in



The Audio in connectivity allows direct playback of Audio in content from portable media players. Besides the benefit of enjoying your favorite music in the superior sound quality delivered by the audio system, the Audio in is also extremely convenient as all you have to do is to plug your portable MP3 player to the audio system.

## Bass Reflex Speaker System



Bass Reflex Speaker System delivers a deep bass experience from a compact loudspeaker box system. It differs from a conventional loudspeaker box system in the addition of a bass pipe that is acoustically aligned to the woofer to optimize the low frequency roll-off of the system. The result is deeper controlled bass and lower distortion. The system works by resonating the air mass in the bass pipe to vibrate like a conventional woofer. Combined with the response of the woofer, the system extends the overall low frequency sounds to create a whole new dimension of deep bass.

## Digital Sound Control

Digital Sound Control offers you a choice of pre-set balanced, clear, powerful, warm and bright controls you can use to optimise the frequency ranges for different musical styles. Each mode uses graphic equalizing technology to automatically adjust the sound balance and enhance the most important sound frequencies in your chosen music style. Ultimately, Digital Sound Control makes it easy for you get the most out of your music by precisely adjusting the sound balance to match the type of music you are playing.

# Specifications

## Sound

- Sound enhancement: digital sound control
- Maximum output power (RMS): 70W

## Loudspeakers

- Loudspeaker types: Dome tweeter
- Main Speaker: 2 way, 4" woofer, Bass Reflex Speaker System

## Audio playback

- Disc playback modes: fast forward/backward, next/previous track search, repeat/shuffle/program
- Playback media: CD, CD-R/RW, MP3-CD, USB flash drive
- USB Direct playback modes: fast backward/fast forward, play/pause, previous/next, repeat, shuffle, stop

## Tuner/Reception/Transmission

- Tuner bands: FM mono, FM stereo
- Station presets: 20
- Antenna: FM fixed pigtail antenna
- Tuner enhancement: auto digital tuning, auto scan, Easy set (plug & play)

## Connectivity

- USB: USB host
- Audio in (3.5mm)
- Bluetooth profiles: A2DP

## Convenience

- Alarms: CD Alarm, Radio Alarm, USB alarm
- Clock: On main display, sleep timer
- Display type: LED display
- Loader type: tray

## Accessories

- Included accessories: AC Power Cord, FM antenna, User Manual
- Remote control: 21-key remote

## Dimensions

- Main unit width: 180 mm
- Main unit height: 119 mm
- Main unit depth: 220.4 mm
- Main speaker dimensions (W x D): 140 x 185 mm
- Main speaker height: 260 mm
- Packaging width: 663 mm
- Packaging height: 315 mm
- Packaging depth: 208 mm
- Gross weight: 6.7 kg
- Net weight: 5.74 kg

## Power

- Power supply: 100-240VAC, 50/60Hz



Issue date 2015-05-12

Version: 3.0.3

12 NC: 8670 001 07724  
EAN: 87 12581 70013 3

© 2015 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)