



Philips
Soundbar speaker

2.1 CH wireless subwoofer

Bluetooth® and NFC
HDMI ARC
120 W

HTL3110B



Powerful sound for any TV

with wireless subwoofer

Unleash the full sound potential of all your media devices and enjoy the freedom of placement provided by the wireless subwoofer. This soundbar works with your TV, CD players, gaming consoles, USB and Bluetooth devices.

Connect and enjoy all your entertainment

- One-touch with NFC-enabled smartphones for Bluetooth pairing
- Stream music wirelessly via Bluetooth™ from your smartphone
- EasyLink to control all HDMI CEC devices via a single remote
- Enjoy MP3/WMA music directly from your portable USB devices
- Works with TVs, BD/DVD players, gaming consoles, MP3 players

Designed for simplicity

- Low-rise profile for the perfect fit in front of your TV
- Flexible placement on the wall, tabletop or stand


Richer sound for watching TV and movies

- Virtual Surround Sound for a realistic movie experience
- Dolby Digital for ultimate movie experience
- Twin tweeters for optimum clarity performance
- Wireless subwoofer adds thrill to the action
- External subwoofer adds thrill to the action

PHILIPS


Highlights

Virtual Surround Sound

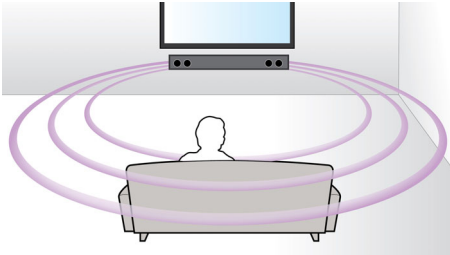

Philips Virtual Surround Sound produces rich and immersive surround sound from a less than five-speaker system. Highly advanced spatial algorithms faithfully replicate the sonic characteristics that occur in an ideal 5.1-channel environment. Any high quality stereo source is transformed into true-to-life, multi-channel surround sound. No need to purchase extra speakers, wires or speaker stands to appreciate room-filling sound.

Dolby Digital

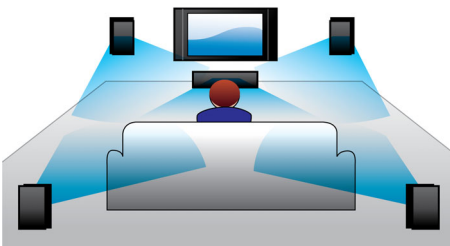

Because Dolby Digital standards, the world's leading digital multi-channel audio standards, make use of the way the human ear naturally processes sound, you experience superb

quality surround sound audio with realistic spatial cues.

One-touch with NFC



Pair Bluetooth® devices easily with one-touch NFC (Near Field Communications) technology. Just tap the NFC-enabled smartphone or tablet on the NFC area of a soundstage to turn the soundstage on, start Bluetooth® pairing, and begin streaming music.

Stream music via Bluetooth™



Bluetooth is a short range wireless communication technology that is both robust and energy-efficient. The technology allows easy wireless connection to iPod/iPhone/iPad or other Bluetooth devices, such as smartphones, tablets or even laptops. So you

can easily enjoy your favourite music, sound from video or game wirelessly on this speaker.

USB



Enjoy MP3/WMA music directly from your portable USB devices

Low-rise profile



Low-rise profile for the perfect fit in front of your TV

Specifications

Sound

- Sound Enhancement: Treble and Bass Control, Virtual Surround Sound, Night Mode
- Sound System: Dolby Digital
- Speaker output power: 2 x 30 W
- Subwoofer output power: 60 W
- Total Power RMS @ 10% THD: 120 W

Loudspeakers

- Loudspeaker types: Integrated with main unit
- Speaker Drivers per side: 1 Mylar tweeter, 1 woofer
- Speaker Impedance: 8 ohm
- Subwoofer driver: 1 x 5.25" woofer
- Subwoofer freq range: 45-200 Hz
- Subwoofer impedance: 3 ohm
- Subwoofer type: Wireless subwoofer
- Tweeter Impedance: 16 ohm

Connectivity

- iPod/iPhone: via Bluetooth
- Rear Connections: AUX in, Digital coaxial in, Digital optical in, HDMI 1.4 output (ARC)
- Integrated Connections: Bluetooth, NFC
- Top connections: USB 2.0

Design

- Wall mountable

Power

- Power consumption: 35 W

- Standby power consumption: < 0.5 W
- Subwoofer power consumption: 20 W
- Subwoofer Power supply: 110-240 V~; 50-60 Hz
- Main unit power supply: 100-240 V~, 50/60 Hz

Sustainability

- Packaging: 80% recycled corrugated board

Dimensions

- Main Unit (W x H x D): 843 x 52 x 60 mm
- Main Unit Weight: 1.4 kg
- Packaging (W x H x D): 790 x 285 x 300 mm
- Weight incl. Packaging: 8.2 kg
- Subwoofer (W x H x D): 190 x 250 x 315 mm
- Subwoofer Weight: 3.9 kg

Accessories

- Included accessories: AAA Battery (x1), Quick start guide, Remote Control, Safety and Legal Leaflet, Trademarks Sheet, 2 x Power cords, AC Adapter

Convenience

- EasyLink (HDMI-CEC): Audio Return Channel, Automatic audio input mapping, One touch play, One touch standby, Remote Control-Passthrough, System standby
- HDMI Features: Audio Return Channel (ARC), Content Type



Issue date 2016-04-17

Version: 5.1.6

12 NC: 8670 001 12725
UPC: 6 09585 24190 9

© 2016 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com