

Philips
2.1 Home theater

DVD playback

HTS3220



Obsessed with sound

True-to-life sound in perfect style

Enjoy your movies, music & TV experience in great surround sound! Stylish design with glass panels, entertainment has never looked so elegant with this multi-entertainment home theater.

Designed to enhance your living space

- Flexible placement on the wall, tabletop or stand
- Compact design that fits with your flat TV
- Stylish design with glass panels

Connect and enjoy all your entertainment

- EasyLink to control all HDMI CEC devices via a single remote
- MP3 Link plays music from portable media players
- Hi-Speed USB 2.0 Link plays video/music from USB flash drive
- Sharper high definition pictures with HDMI 1080p
- Optional dock for convenient playback from your iPod/iPhone


Superior listening experience

- 350W RMS power delivers great sound for movies and music
- Dolby Virtual Speaker for realistic surround sound
- Crystal Clear Sound for superbly clear and detailed sound

PHILIPS

Highlights

Crystal Clear Sound

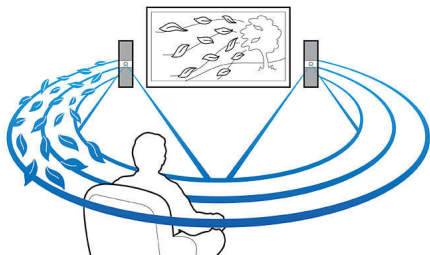

With Philips' Crystal Clear Sound, you will now be able to discern and appreciate every sound detail, the way it's meant to be heard and as the artist or director intended! Crystal Clear Sound reproduces the sound source - whether it's an action movie, a musical or a live performance - faithfully, precisely and without any distortion. Philips home theaters with Crystal Clear Sound keep audio processing to a minimum, preserving the purity of the original audio content. The result is greater sonic accuracy delivered to your ears.

Dolby Virtual Speaker



Dolby Virtual Speaker is a sophisticated audio virtualization technology that produces rich and immersive surround sound from a two-speaker system. Highly advanced spatial algorithms faithfully replicate the sonic characteristics that occur in an ideal 5.1-channel environment. DVD playback is enhanced by expanding the 2-channel environment. When combined with Dolby Pro Logic II processing, any high quality stereo source is transformed into true-to-life, multi-channel surround sound. No need to purchase extra speakers, wires or speaker stands to appreciate room-filling sound.

350W RMS power




350W RMS power delivers great sound for movies and music

Stylish design




Stylish design with glass panels

Compact design

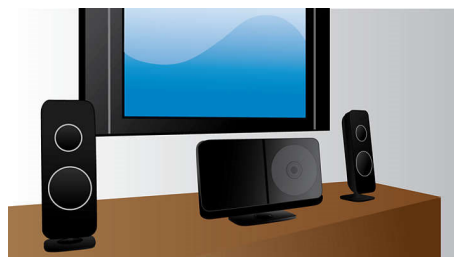

Compact design that fits with your flat TV


Flexible placement

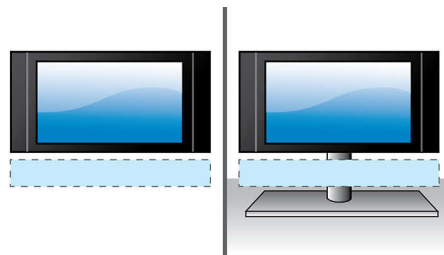

Enjoy the versatility of this home theater system that allows you to place it where you will. Whether on a TV stand, on a table or


mounted on a wall, the product looks sensational and functions without compromise. For once, you get to control how your home looks without giving up an incredible home theater experience.

Hi-Speed USB 2.0 Link

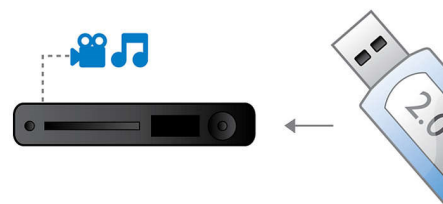

The Universal Serial Bus or USB is a protocol standard that is conveniently used to link PCs, peripherals and consumer electronic equipment. Hi-Speed USB devices have a data transfer rate of up to 480 Mbps - up from the 12 Mbps in original USB ones. With Hi-Speed USB 2.0 Link, all you have to do is plug in your USB device, select the movie, music or photo and play away.

MP3 Link

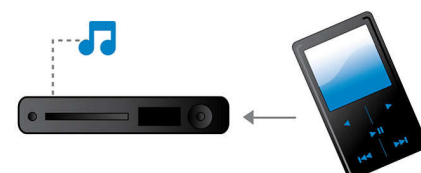

MP3 Link allows playback of MP3 files, directly from your portable media player, on your home theater system. Simply connect your portable MP3 player to the built-in MP3 Link jack and enjoy your MP3 music in the superior sound quality delivered by the Philips home theatre system. MP3 Link brings your portable music into the comfort of your living room.

Specifications

Sound

- Frequency response: 20 - 20k Hz
- Sound Enhancement: Dolby Digital Prologic II, Dolby Virtual Speaker, Night Mode, Treble, Mid and Bass Control
- Sound System: Dolby Digital 5.1, DTS 96/24, DTS Digital Surround, Stereo
- Equalizer settings: Action, Classic, Concert, Drama, Jazz, Rock, Sports
- Signal to noise ratio: > 65 dB
- Total Power RMS @ 30% THD: 350 W

Loudspeakers

- Loudspeaker types: 2 x Satellite speakers
- Satellite speaker freq range: 150 - 20k Hz
- Satellite speaker impedance: 8 ohm
- Subwoofer freq range: 35 - 200 Hz
- Subwoofer type: Active
- Drivers per Satellite speaker: 1 x 2" tweeter, 2 x 3" Woofers
- Subwoofer impedance: 8 ohm

Connectivity

- Front / Side connections: iPod/iPhone Jack, MP3 Link, USB
- Rear Connections: AUX IN 1, Composite video (CVBS) output, Digital coaxial in, Easy-Fit Speaker Connectors, FM Antenna Socket, HDMI output, Subwoofer out

Tuner/Reception/Transmission

- Tuner Bands: FM
- Number of Preset Channels: 40

Convenience

- EasyLink (HDMI-CEC): Automatic audio input mapping, One touch play, One touch standby, Remote Control-Passthrough

Power

- Power consumption: 40 W
- Power supply: 110-127V / 220-240V, ~50-60Hz
- Standby power consumption: < 0.3 W

Accessories

- Compatible accessories: DCK3060 Dock for iPod/

iPhone

- Included accessories: Batteries for remote control, FM antenna, Power cord, Quick start guide, Remote Control, User Manual, Video Cable, World Wide Warranty leaflet

Dimensions

- Main Unit (W x H x D): 360 x 190 x 65 mm
- Weight incl. Packaging: 12.8 kg
- Main Unit Weight: 2.2 kg
- Packaging (W x H x D): 393 x 353 x 563 mm
- Subwoofer (W x H x D): 182 x 300 x 345 mm
- Subwoofer Weight: 5.5 kg
- Satellite Speaker (W x H x D): 112 x 309.5 x 112 mm
- Satellite Speaker Cable length: 2 m
- Satellite Speaker Weight: 1 kg
- Subwoofer cable length: 3 m

Audio Playback

- Compression format: MP3, WAV, WMA
- MP3 bit rates: 32 - 320 kbps

File Format

- Audio: mp3, wma
- Video: asf, avi, divx, mpeg, mpg, wmv
- Picture: JPEG, JPG

Picture/Display

- Picture enhancement: High Def (720p, 1080i, 1080p), Progressive scan, Video upscaling

Optical Playback Media

- Playable Discs: CD, CDDA, CD-R/CD-RW, DVD, DVD +R/+RW, DVD -R/-RW, SVCD, VCD

Still Picture Playback

- Compression format: JPEG, JPEG HD, JPEG Progressive
- Picture Enhancement: Rotate, Slideshow with music playback, Zoom

Video Playback

- Compression formats: DivX Ultra, MPEG1, MPEG2, MPEG4, XviD, WMV SD
- Video disc playback system: NTSC, PAL



Issue date 2024-05-02

Version: 8.2.9

EAN: 87 12581 52716 7

© 2024 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com