

Philips  
Zenit cinema speakers

5.1 CH wireless rear and sub  
Bluetooth® and NFC  
HDMI 4K-2K

CSS5530B



# Embrace the look and feel of Zen

Free from wires and clutter

Embrace pure simplicity with Philips Zenit cinema speakers and enjoy natural, balanced sound from a design featuring modern, authentic materials. Smart cable management and wireless rear speakers ensure an uncluttered, sublime experience.

## Great listening experience

- Dolby Digital and Pro Logic II surround sound
- MTM speakers allow loud and truly reproduced sound
- Subwoofer base reflector radiates sound smoothly

## Designed to enhance your living space

- Smart cable management for organised cables across your room
- Wireless rear speakers and subwoofer for hassle-free set-up

## Simply enjoy all your entertainment

- Bluetooth wireless music streaming from your music devices
- One-Touch with NFC-enabled smartphones for Bluetooth pairing
- HDMI 4K2K pass-through for ultra HD content enjoyment
- HDMI ARC to access all the sound from your TV

# PHILIPS

# Highlights

## Wireless rear speakers and sub

Wireless rear speakers and subwoofer for hassle-free set-up


## Smart cable management

Smart cable management for organised cables across your room

## MTM speakers

Midwoofer-tweeter-midwoofer (MTM) configuration in all main and satellite speakers allow loud and truly reproduced sound regardless of listening position. You can always enjoy crystal clear sound without distortion no matter where you are sitting.

## HDMI 4K2K

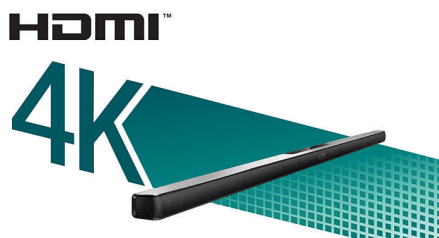


HDMI 4K2K incorporates the HDMI 1.4 standard. This adds support for ultra-high-definition (UHD) video content. Presently this refers to 4K, which at its largest is 4096 pixels wide by 2160 pixels high or four times the size of a standard 1080p HD display. The term covers a slightly lower 4K resolution of 3840 pixels wide by 2160 pixels high. Both formats are supported through HDMI 1.4. 4K displays put high-end home theatre systems in the same sphere used in many commercial

cinemas. To make the speakers future-resistant, this standard has been integrated for the growth of 4K TV.

## Subwoofer base reflector

Dome-shaped base reflector enhances a stronger and deeper base by radiating sound smoothly in all directions. The design also prevents the damping effect from occurring when the subwoofer is placed on carpet.

## Bluetooth wireless streaming

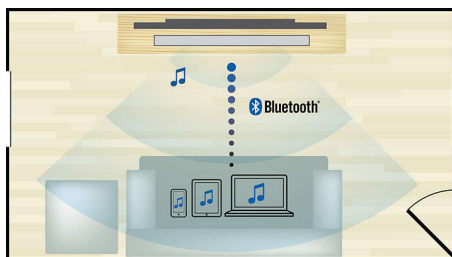

Bluetooth wireless music streaming from your music devices


## NFC technology



Pair Bluetooth devices easily with one-touch NFC (Near Field Communications) technology. Just tap the NFC-enabled

smartphone or tablet on the NFC area of a speaker to turn the speaker on, start Bluetooth pairing and begin streaming music.

## Dolby Digital and Pro Logic II

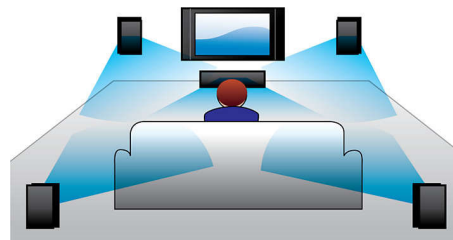

A built-in Dolby Digital decoder eliminates the need for an external decoder by processing all six channels of audio information to provide a surround sound experience and an astoundingly natural sense of ambience and dynamic realism. Dolby Pro Logic II provides five channels of surround processing from any stereo source.

## HDMI ARC

HDMI ARC to access all the sound from your TV

# Specifications

## Sound

- Sound Enhancement: Crystal Clear sound, Dolby Digital 5.1, Dolby Digital Prologic II
- Sound System: Dolby Digital 5.1, Dolby pro-logic 2
- Subwoofer output power: 220 W
- Centre speaker output power: 40 W
- Satellite speaker output power: 40 W
- Total Power RMS @ 10% THD: 420 W

## Loudspeakers

- Loudspeaker types: 1 x Centre speaker, 4 x Satellite speakers, 1 x Subwoofer
- Satellite speaker freq range: 120 Hz - 18 k Hz
- Drivers per Centre speaker: 2 racetrack full-range woofers, 1 x 1" tweeter
- Satellite speaker impedance: 5 ohm
- Subwoofer freq range: 45–150 Hz
- Centre speaker impedance: 4 ohm
- Subwoofer driver: 1 x 6.5" woofer
- Subwoofer type: Wireless subwoofer, Bass reflex system
- Centre speaker freq. range: 80 Hz – 18 k Hz
- Drivers per Satellite speaker: 2 x 2.5" full range woofers, 1 x 1" tweeter
- Subwoofer impedance: 3 ohm
- System: 5.1 system

## Connectivity

- Rear Connections: Digital optical in, Audio-in 3.5 mm jack, Easy-Fit Speaker Jacks, HDMI in (x1), HDMI out (4K passthrough, ARC), USB audio (5 V, 500 mA DC)
- Wireless connection: Bluetooth 4.1, NFC, Wireless rear speakers, Wireless subwoofer

## Outer Carton

- EAN: 48 95185 60724 5
- Length: 79.5 cm
- Number of consumer packages: 1
- Width: 28 cm
- Gross weight: 15.24 kg
- Height: 41.5 cm
- Net weight: 12 kg
- Tare weight: 3.24 kg

## Convenience

- EasyLink (HDMI-CEC): Audio Return Channel, Automatic audio input mapping, One touch standby, Remote Control-Passthrough
- HDMI Features: Support 4K passthrough (30 fps),

Audio Return Channel (ARC), Content Type

## Power

- Standby power consumption: <0.5 W
- Subwoofer Power supply: 220–240 V AC, 50/60 Hz
- Centre speaker Power supply: 100–240 V AC, 50/60 Hz, Via power adaptor
- Wireless box Power supply: 110–240 V AC, 50/60 Hz

## Packaging dimensions

- Height: 41.5 cm
- Packaging type: Carton
- Type of shelf placement: Laying
- Width: 79.5 cm
- Depth: 28 cm
- Number of products included: 1
- EAN: 48 95185 60724 5
- Gross weight: 15.24 kg
- Net weight: 12 kg
- Tare weight: 3.24 kg

## Product dimensions

- Height: 5.35 cm
- Width: 58 cm
- Depth: 9.8 cm
- Weight: 1.5 kg

## Accessories

- Included accessories: Remote Control, Wireless rear audio receiver, AAA Battery (x1), Power adapter, AC power cord (x3), Wall mount brackets (x4), Screws (x8), User Manual, World Wide Warranty leaflet, Safety and Legal Leaflet, Trademarks Sheet

## Dimensions

- Centre Speaker (W x H x D): 580 x 52 x 98 mm
- Centre Speaker Weight: 1.3 kg
- Subwoofer (W x H x D): 228 x 406 x 265 mm
- Subwoofer Weight: 5.7 kg
- Satellite Speaker (W x H x D): 110 x 301 x 110 mm
- Satellite Speaker Cable length: 5 m
- Satellite Speaker Weight: 1.2 kg

## Sustainability

- Packaging: 80% recycled corrugated board, Soya based ink



Issue date 2024-05-02

Version: 7.0.8

EAN: 48 95185 60724 5

© 2024 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)