

Philips  
Zenit cinema speakers

5.1 CH wireless rear and sub  
Bluetooth® and NFC  
HDMI 4K-2K



CSS5530B

## Embrace the look and feel of Zen

Free from wires and clutter

Embrace pure simplicity with Philips Zenit cinema speakers and enjoy natural, balanced sound from a design featuring modern, authentic materials. Smart cable management and wireless rear speakers ensure an uncluttered, sublime experience.

### Designed to enhance your living space

- Wireless rear speakers and subwoofer for hassle-free set-up
- Smart cable management for organised cables across your room

### Great listening experience

- MTM speakers allow loud and truly reproduced sound
- Subwoofer base reflector radiates sound smoothly
- Dolby Digital and Pro Logic II surround sound

### Simply enjoy all your entertainment

- HDMI 4K2K pass-through for ultra HD content enjoyment
- Bluetooth wireless music streaming from your music devices
- One-Touch with NFC-enabled smartphones for Bluetooth pairing
- HDMI ARC to access all the sound from your TV

# PHILIPS

# Highlights

## Wireless rear speakers and sub

Wireless rear speakers and subwoofer for hassle-free set-up

## Smart cable management

Smart cable management for organised cables across your room


## MTM speakers

Midwoofer-tweeter-midwoofer (MTM) configuration in all main and satellite speakers allow loud and truly reproduced sound regardless of listening position. You can always enjoy crystal clear sound without distortion no matter where you are sitting.

## Subwoofer base reflector


Dome-shaped base reflector enhances a stronger and deeper base by radiating sound smoothly in all directions. The design also prevents the damping effect from occurring when the subwoofer is placed on carpet.

## Bluetooth wireless streaming

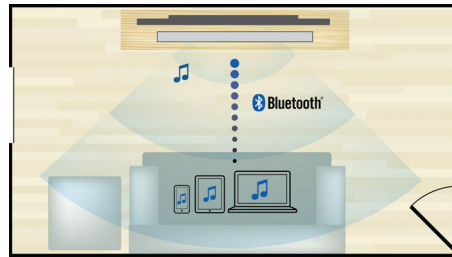

Bluetooth wireless music streaming from your music devices


## NFC technology

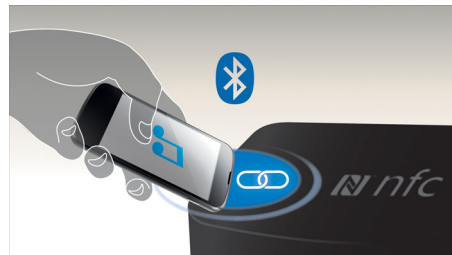

Pair Bluetooth devices easily with one-touch NFC (Near Field Communications) technology. Just tap the NFC-enabled smartphone or tablet on the NFC area of a

speaker to turn the speaker on, start Bluetooth pairing and begin streaming music.

## Dolby Digital and Pro Logic II

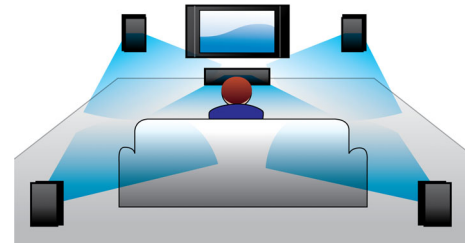

A built-in Dolby Digital decoder eliminates the need for an external decoder by processing all six channels of audio information to provide a surround sound experience and an astoundingly natural sense of ambience and dynamic realism. Dolby Pro Logic II provides five channels of surround processing from any stereo source.

## HDMI ARC

HDMI ARC to access all the sound from your TV

# Specifications

## Sound

- Sound Enhancement: Crystal Clear sound, Dolby Digital 5.1, Dolby Digital Prologic II
- Sound System: Dolby Digital 5.1, Dolby pro-logic 2
- Total Power RMS @ 10% THD: 420 W
- Centre speaker output power: 40 W
- Satellite speaker output power: 40 W
- Subwoofer output power: 220 W

## Loudspeakers

- System: 5.1 system
- Loudspeaker types: 1 x Centre speaker, 4 x Satellite speakers, 1 x Subwoofer
- Drivers per Centre speaker: 2 racetrack full-range woofers, 1 x 1" tweeter
- Centre speaker freq. range: 80 Hz – 18 k Hz
- Centre speaker impedance: 4 ohm
- Drivers per Satellite speaker: 2 x 2.5" full range woofers, 1 x 1" tweeter
- Satellite speaker freq range: 120 Hz - 18 k Hz
- Satellite speaker impedance: 5 ohm
- Subwoofer type: Wireless subwoofer, Bass reflex system
- Subwoofer driver: 1 x 6.5" woofer
- Subwoofer freq range: 45–150 Hz
- Subwoofer impedance: 3 ohm

## Connectivity

- Rear Connections: Digital optical in, Audio-in 3.5-mm jack, Easy-Fit Speaker Jacks, HDMI in (x1), HDMI out (4K passthrough, ARC), USB audio (5 V, 500 mA DC)
- Wireless connections: Bluetooth 4.1, NFC, Wireless rear speakers, Wireless subwoofer

## Convenience

- EasyLink (HDMI-CEC): Audio Return Channel, Automatic audio input mapping, One touch standby, Remote Control-Passthrough
- HDMI Features: Support 4K passthrough (30 fps), Audio Return Channel (ARC), Content Type

## Power

- Centre speaker Power supply: 100–240 V AC, 50/60 Hz, Via power adaptor
- Subwoofer Power supply: 220–240 V AC, 50/60 Hz
- Wireless box Power supply: 110–240 V AC, 50/

60 Hz

- Standby power consumption: <0.5 W

## Sustainability

- Packaging: 80% recycled corrugated board, Soya based ink

## Dimensions

- Subwoofer (W x H x D): 228 x 406 x 265 mm
- Centre Speaker (W x H x D): 580 x 52 x 98 mm
- Satellite Speaker (W x H x D): 110 x 301 x 110 mm
- Satellite Speaker Cable length: 5 m
- Centre Speaker Weight: 1.3 kg
- Satellite Speaker Weight: 1.2 kg
- Subwoofer Weight: 5.7 kg

## Accessories

- Included accessories: Remote Control, Wireless rear audio receiver, AAA Battery (x1), Power adapter, AC power cord (x3), Wall mount brackets (x4), Screws (x8), User Manual, World Wide Warranty leaflet, Safety and Legal Leaflet, Trademarks Sheet

## Outer Carton

- EAN: 48 95185 60724 5
- Gross weight: 15.24 kg
- Outer carton (L x W x H): 79.5 x 28 x 41.5 cm
- Net weight: 12 kg
- Number of consumer packages: 1
- Tare weight: 3.24 kg

## Packaging dimensions

- Packaging dimensions (W x H x D): 79.5 x 41.5 x 28 cm
- EAN: 48 95185 60724 5
- Gross weight: 15.24 kg
- Net weight: 12 kg
- Number of products included: 1
- Packaging type: Carton
- Tare weight: 3.24 kg
- Type of shelf placement: Laying

## Product dimensions

- Product dimensions (W x H x D): 58 x 5.35 x 9.8 cm
- Weight: 1.5 kg



Issue date 2016-12-07

Version: 7.0.8

12 NC: 8670 001 23532  
EAN: 04 89518 56072 45

© 2016 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)